
## **Assembly Instructions**

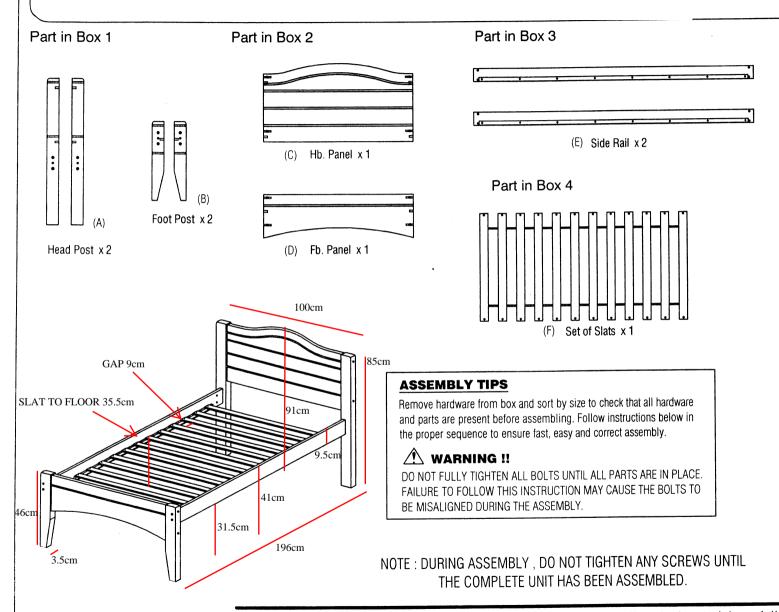

Hardware List		
1.	JCBC M6 x 70mm	x 8
2.	JCBC M6 x 100mm	x 8
3.	M6 x 15mm (Long) Barrel Nut	x 8
4.	Wood Dowel M10 x 40mm	x 10
5.	CSK Danimin	x 24
6.	M4 Allen Key	x 1
7.	M6 x 13mm (Short) Barrel Nut	x 8

Llandingera Liat

Tool required for assembly:

- \* Allen Key ( supplied )
- \* Phillips Screwdriver ( not supplied )

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean, smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.

