

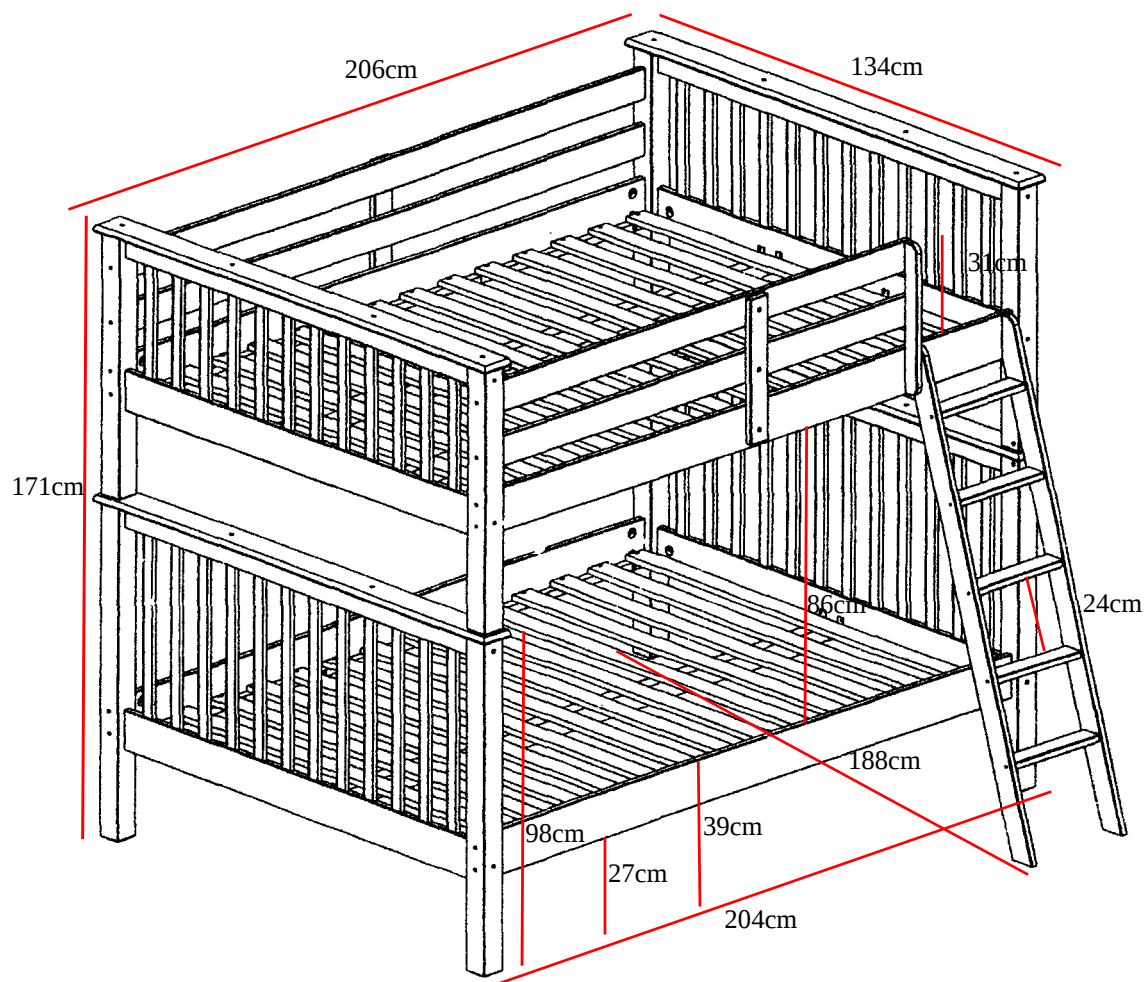
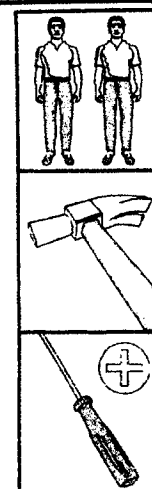
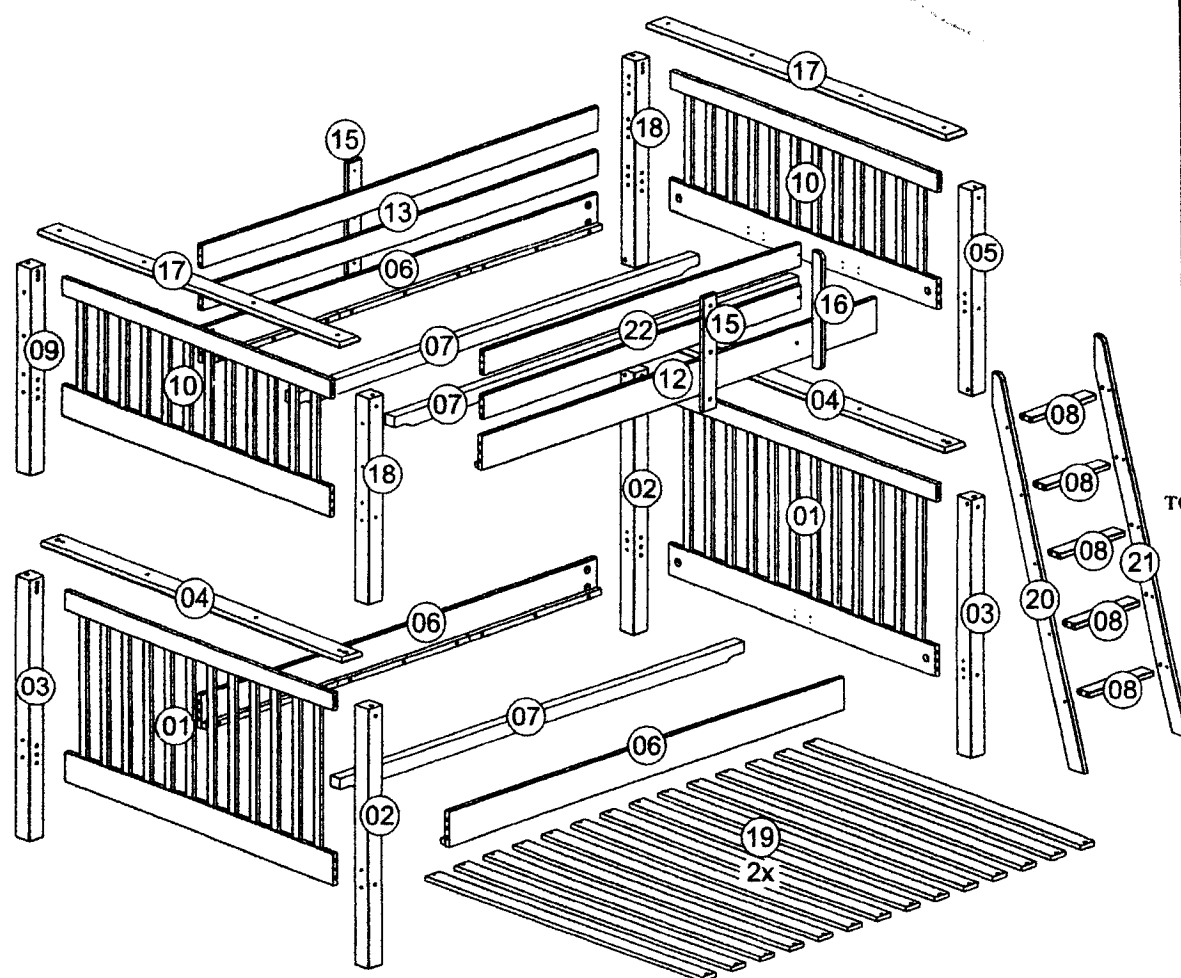
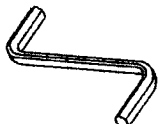








BUNK BEDS FULL/FULL







TOOLS REQUIRED


A		01
B	 Ø10 x 40	62
C	 Ø15 x 90	04
D	 Ø4,0 x 35	86
E	 Ø3,5 x 16	42
F	 Ø17mm Ø7 x 50	13
G	 Ø17mm Ø7 x 110	14
H	 Ø17mm Ø1/4" x 110	24

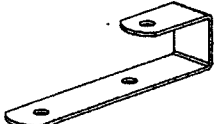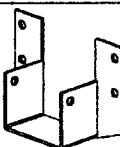I		24
J		02
K		06
L	 Ø10mm	16
M	SPACER (WOODEN) 	02


01

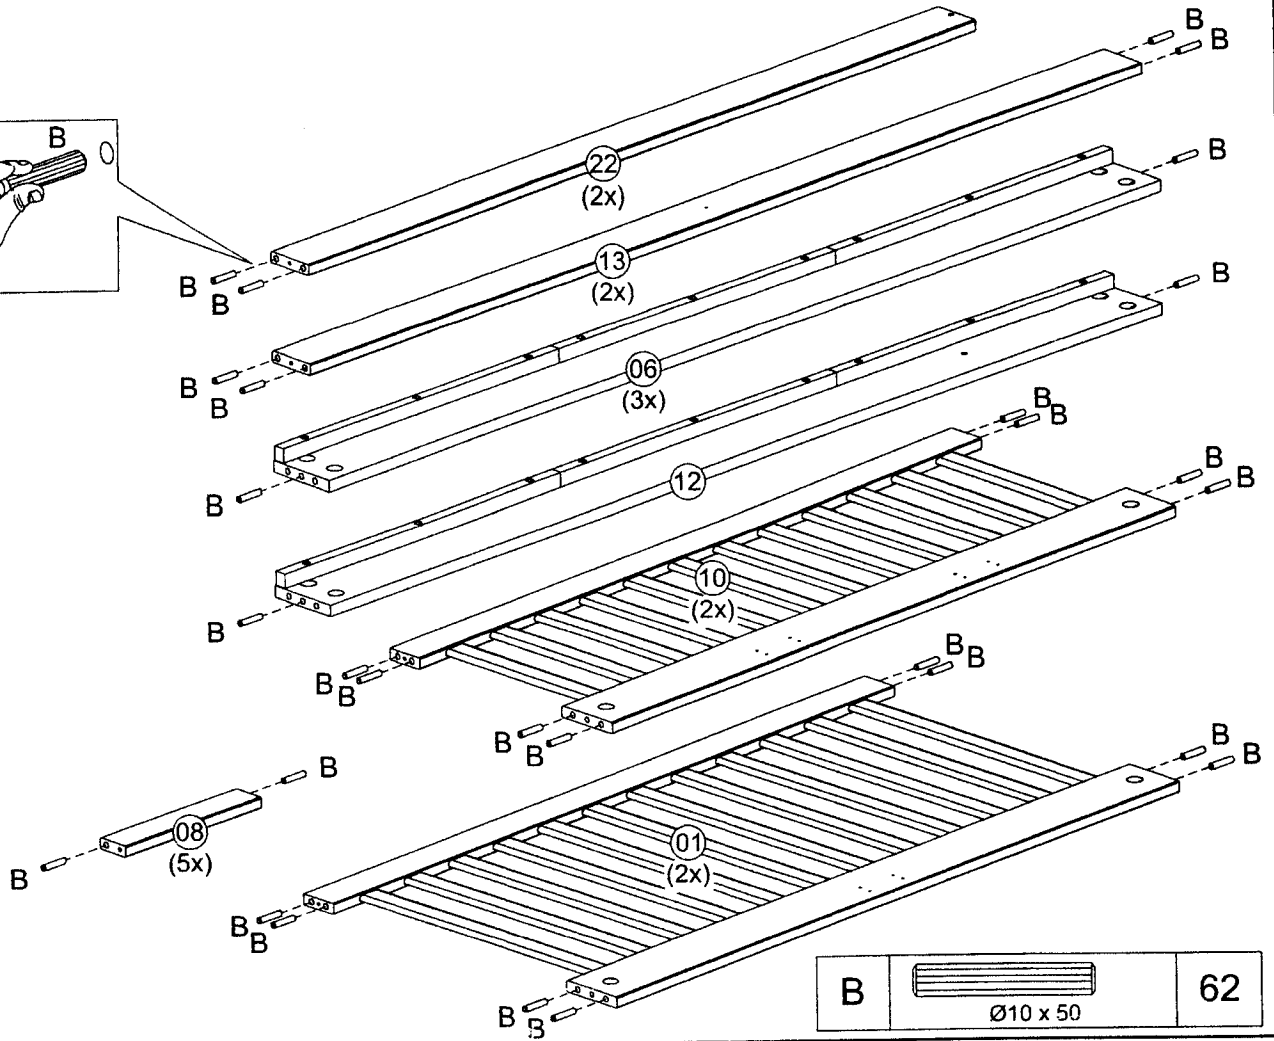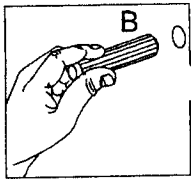


02

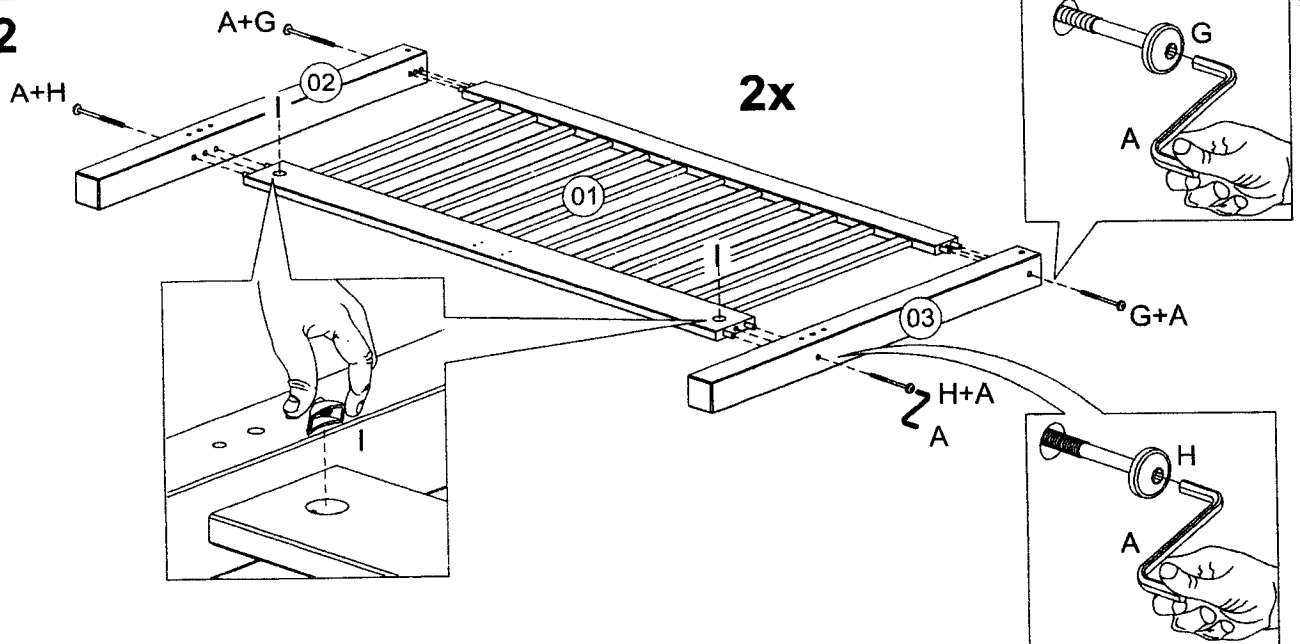


03

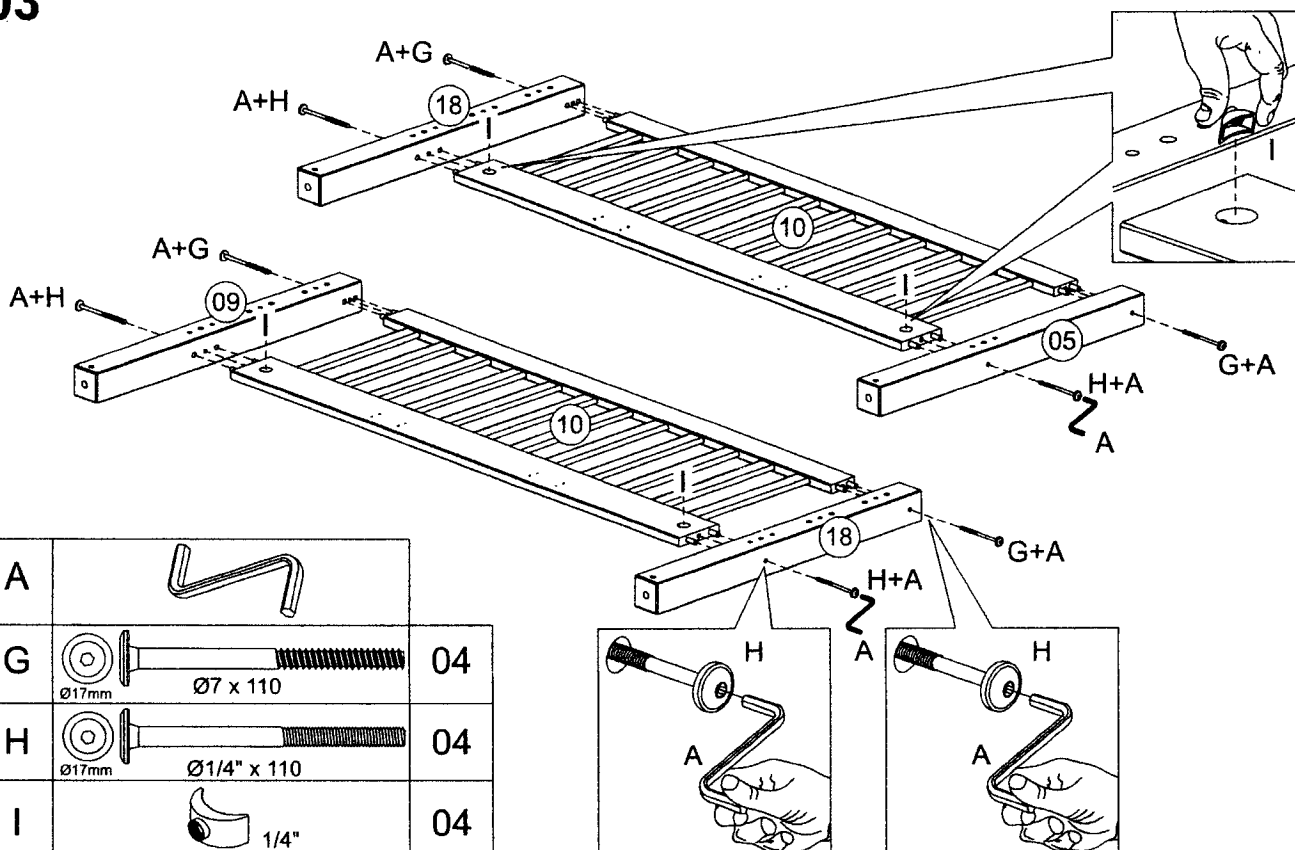



04

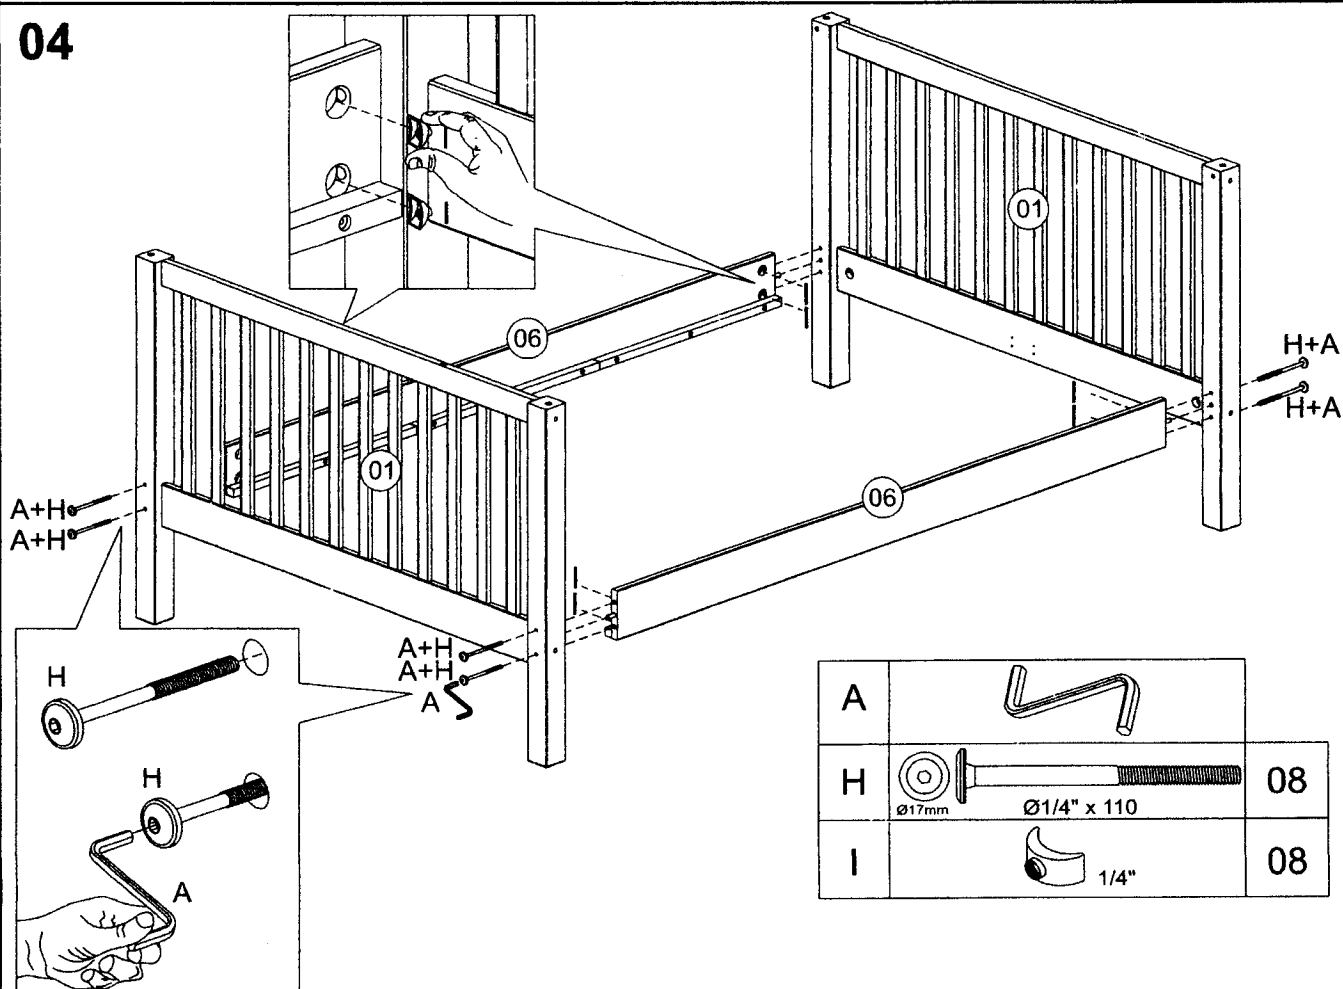


05

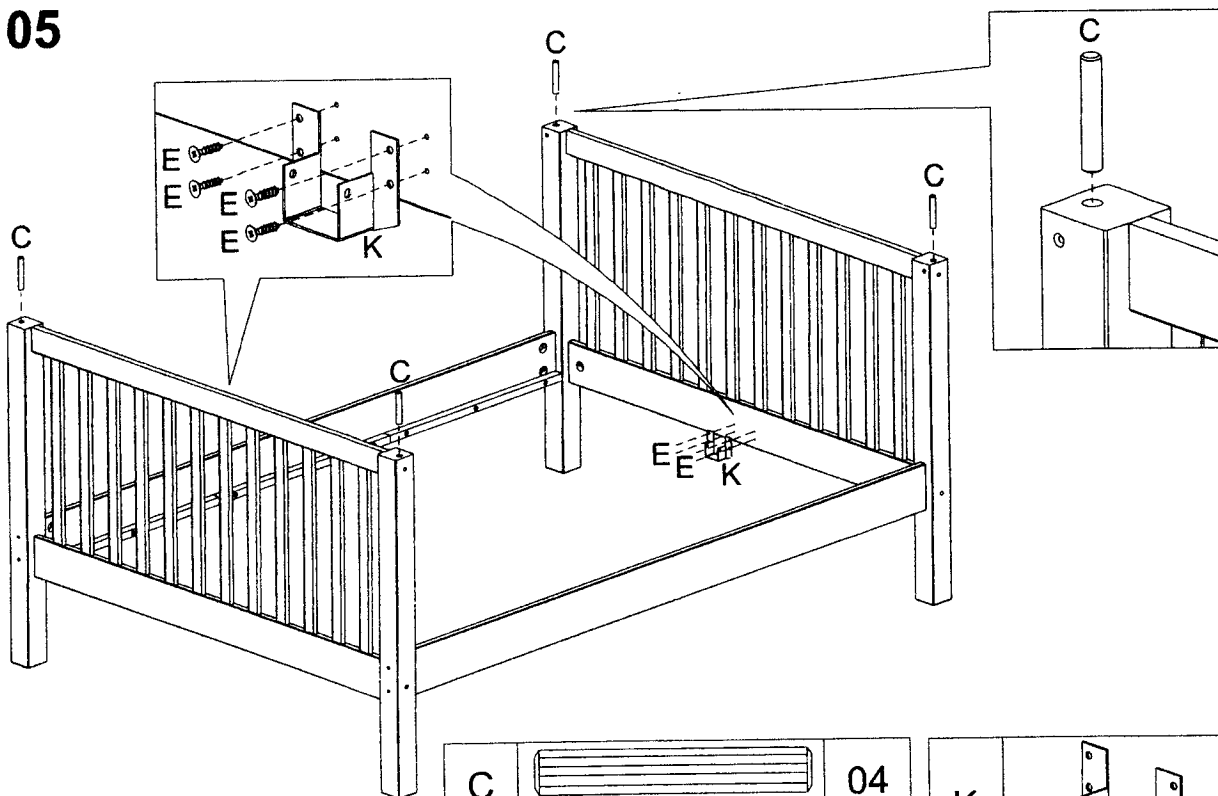

C		04
Ø15 x 90		
E		08
Ø3,5 x 16		


K		02
---	---	----

06

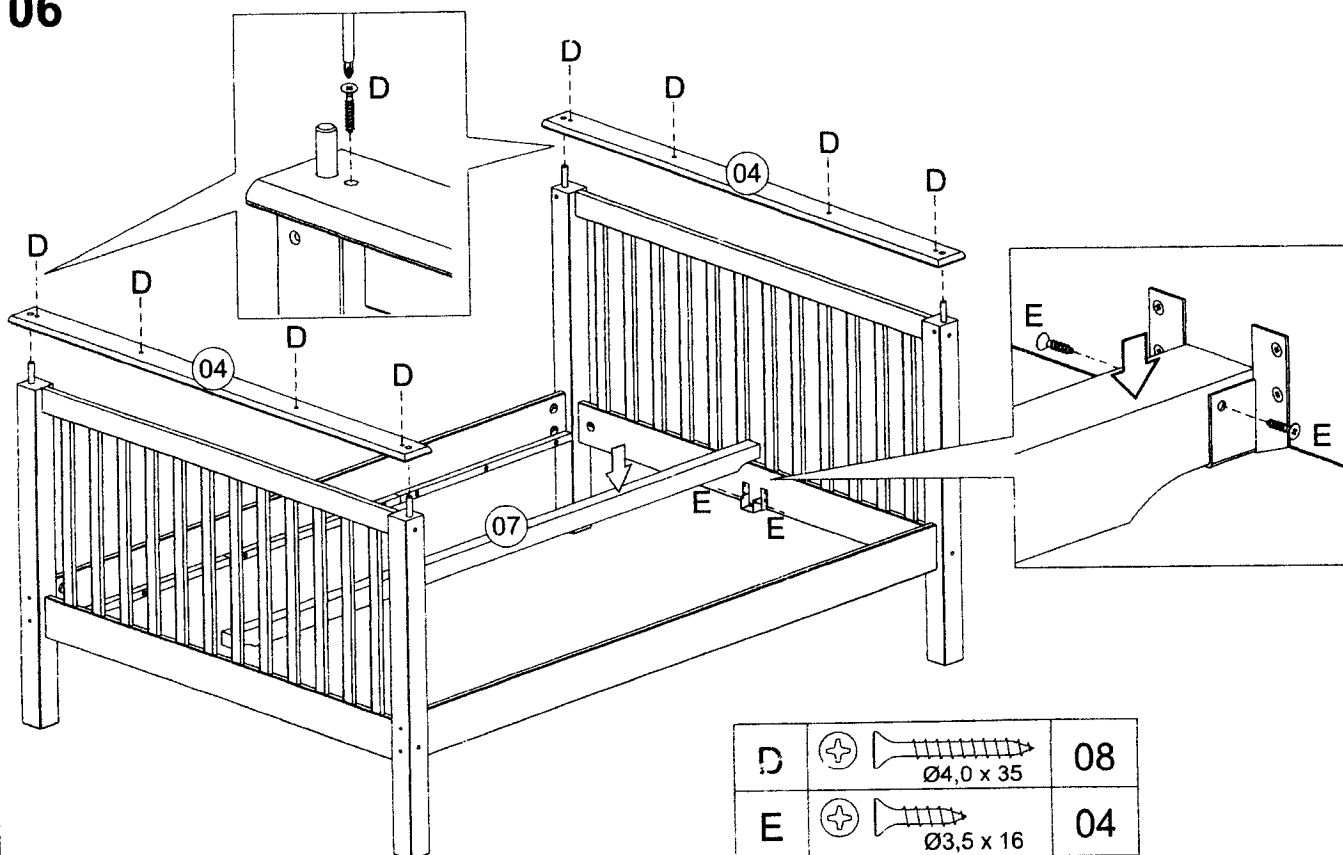


D		08
Ø4,0 x 35		
E		04
Ø3,5 x 16		


07

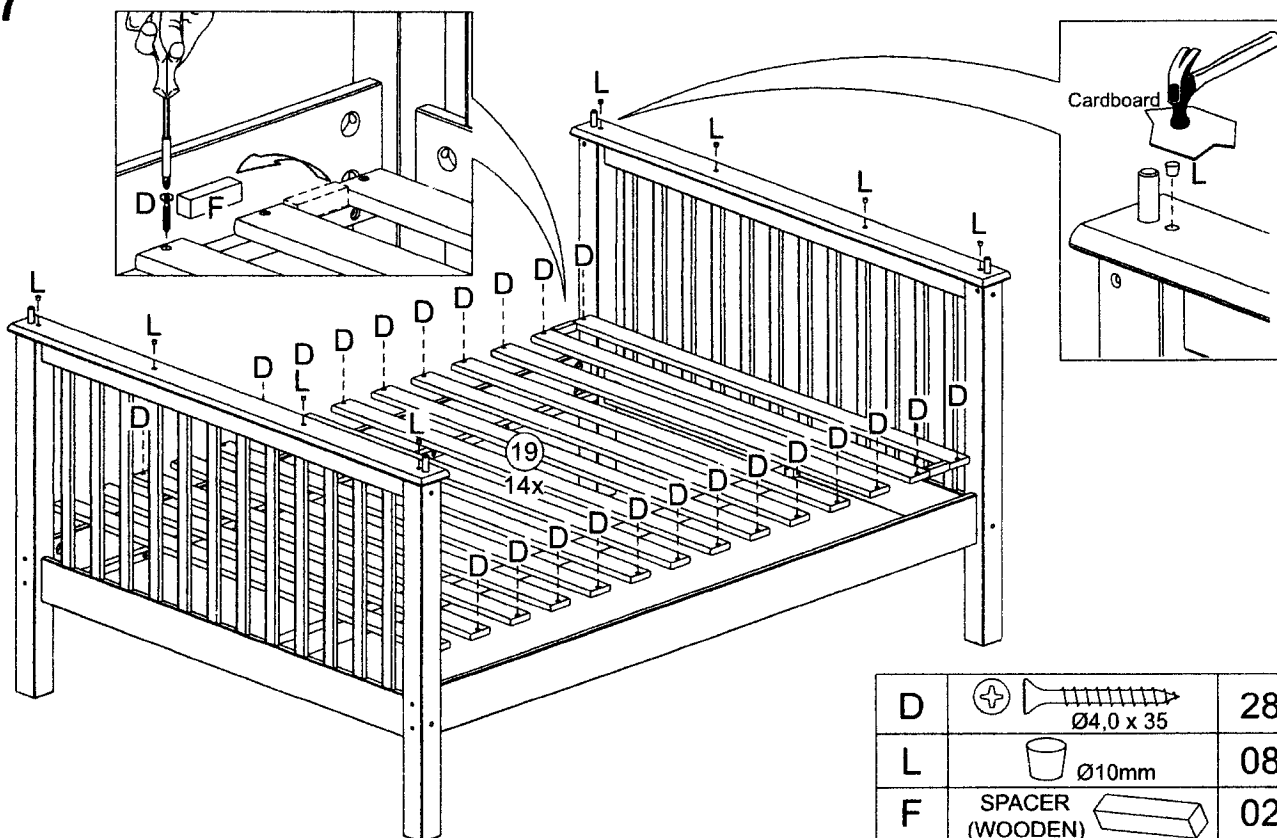

08

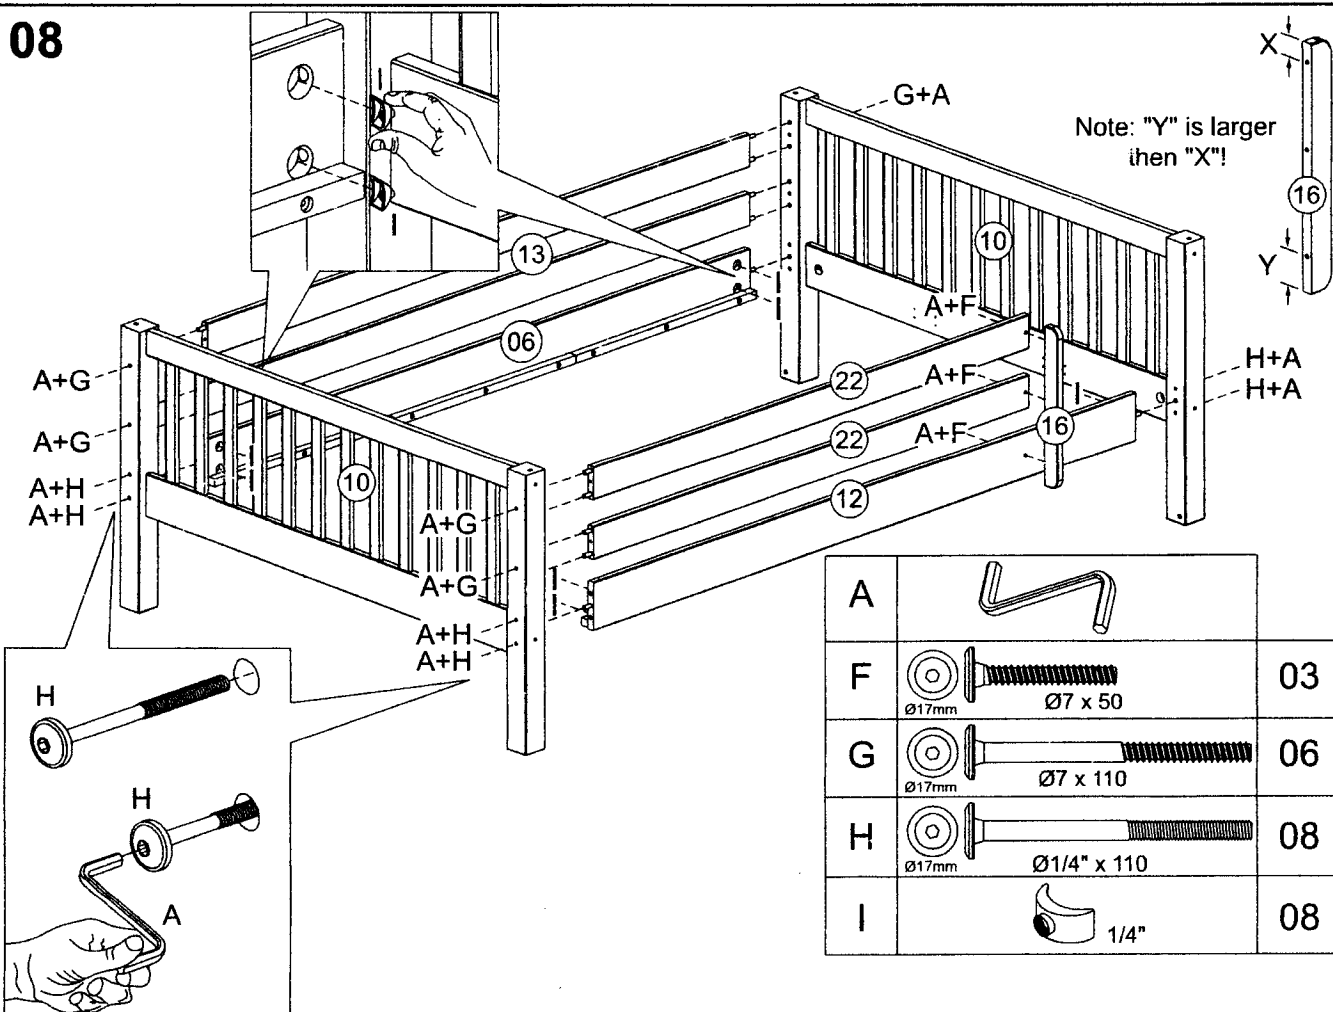


09

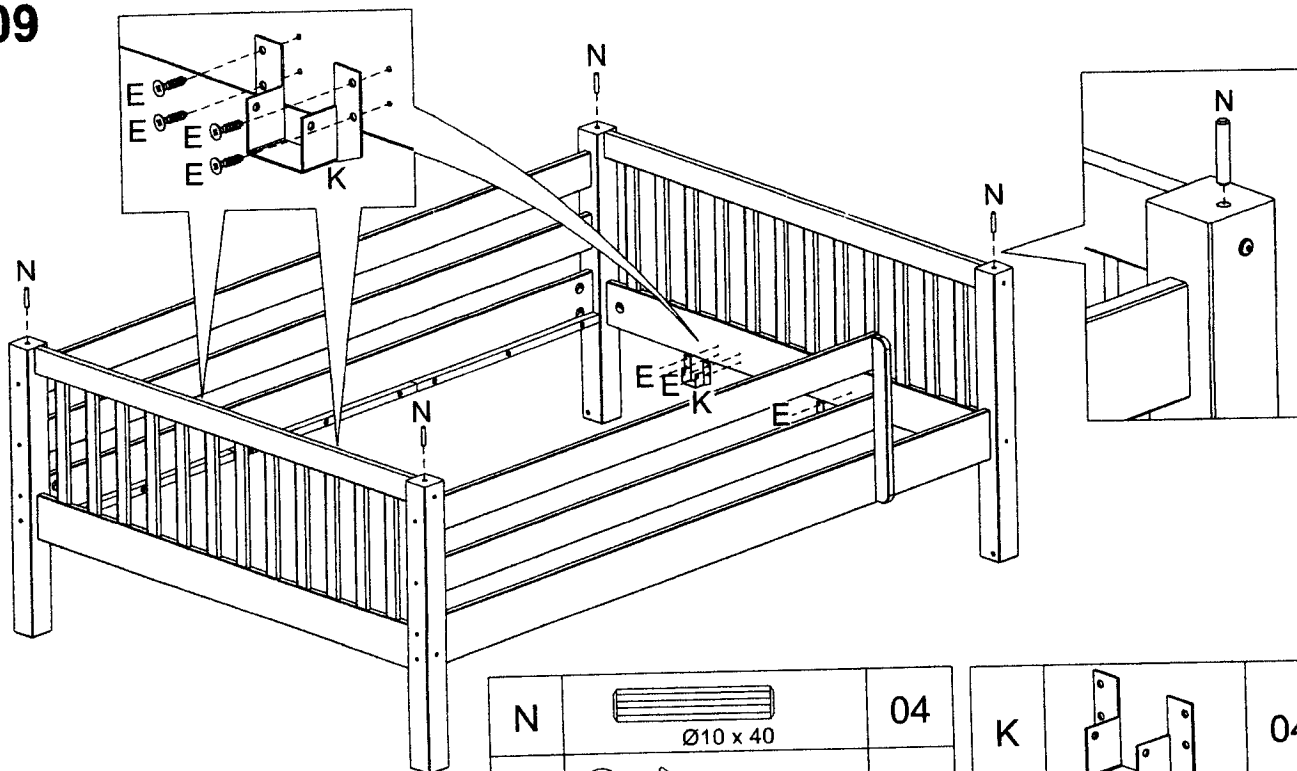

N	Ø10 x 40	04
E	Ø3,5 x 16	16


K		04
---	--	----

10

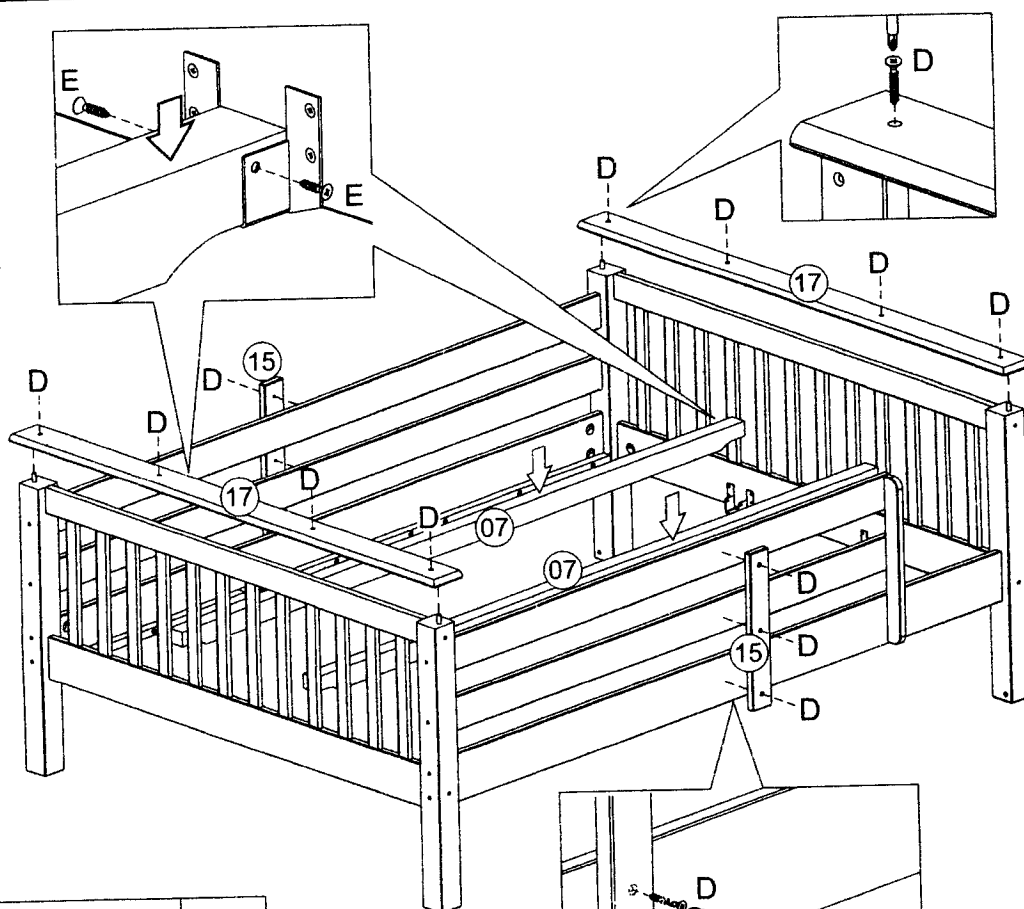


D	Ø4,0 x 35	14
E	Ø3,5 x 16	08


11

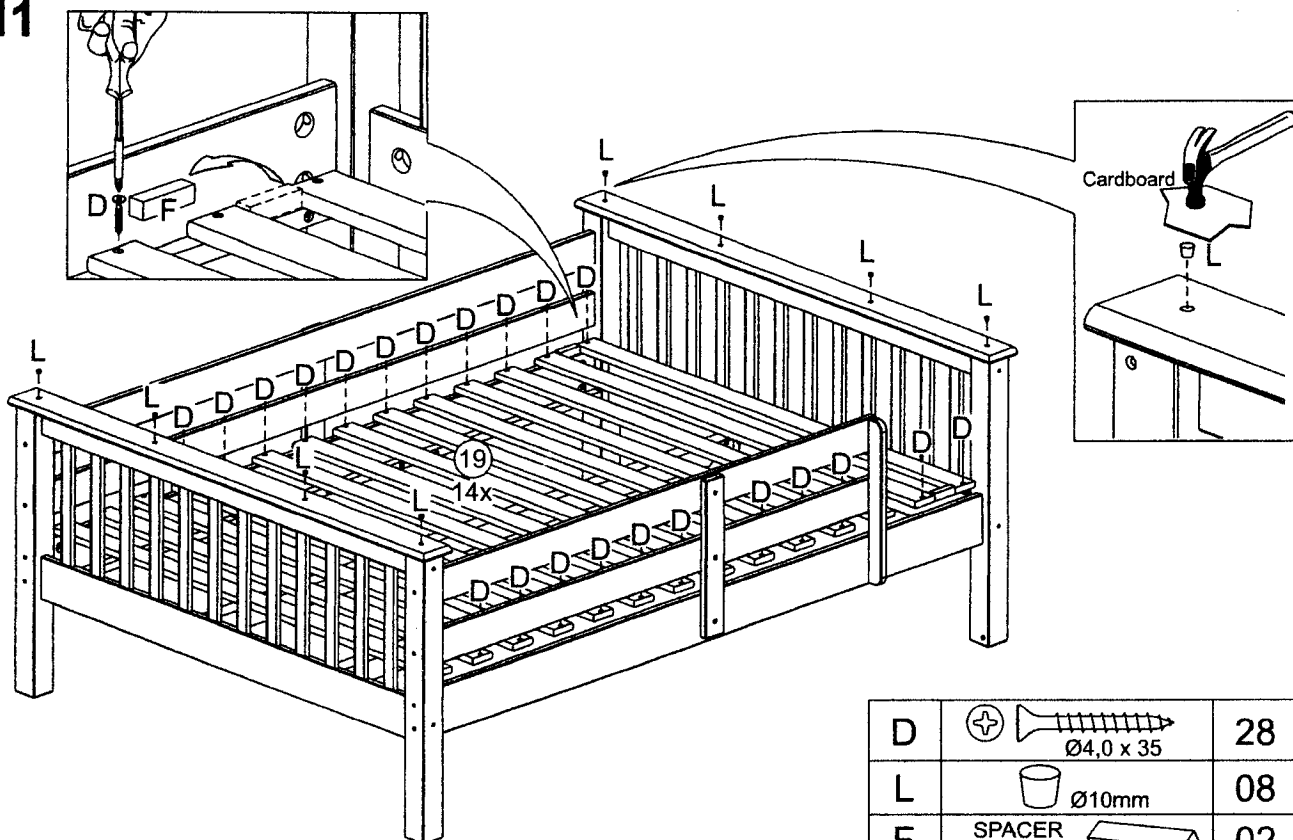

12

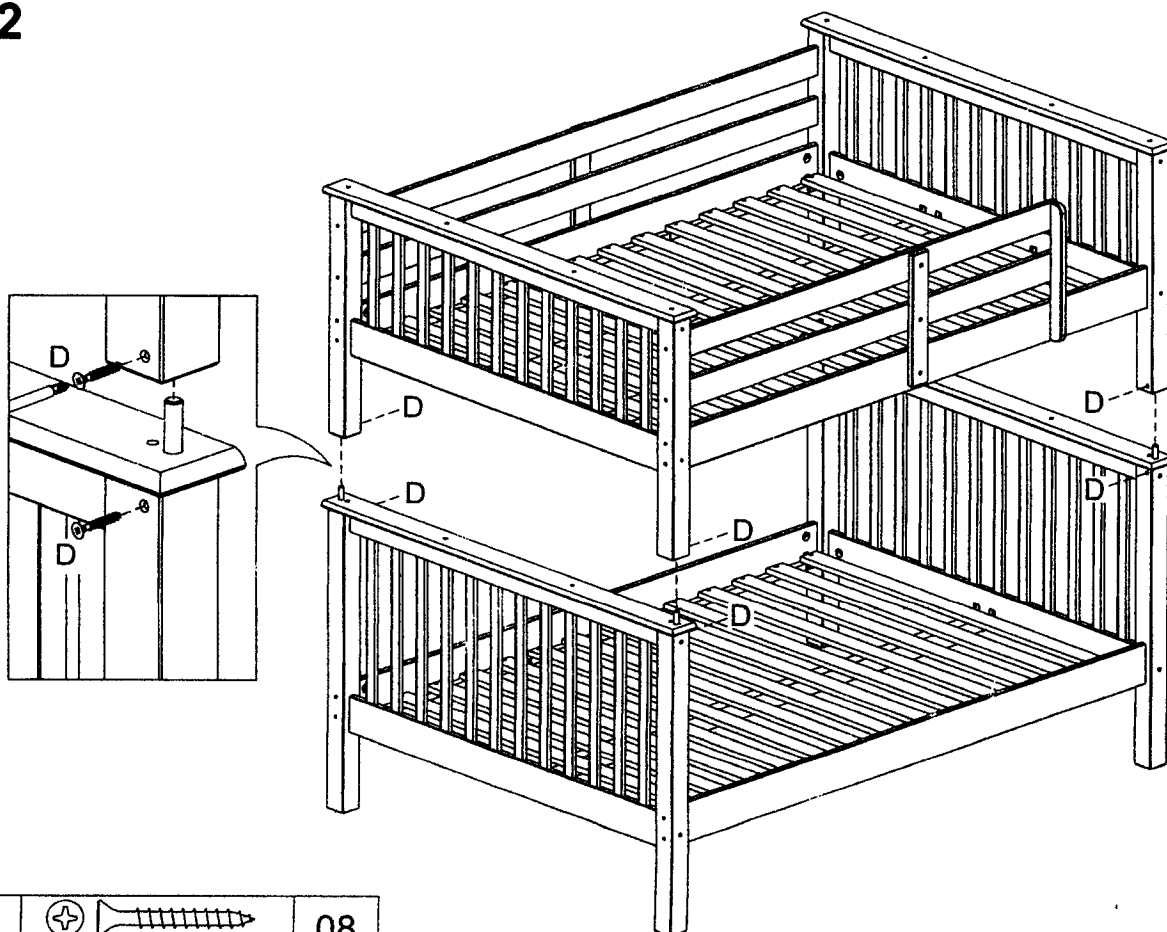

13

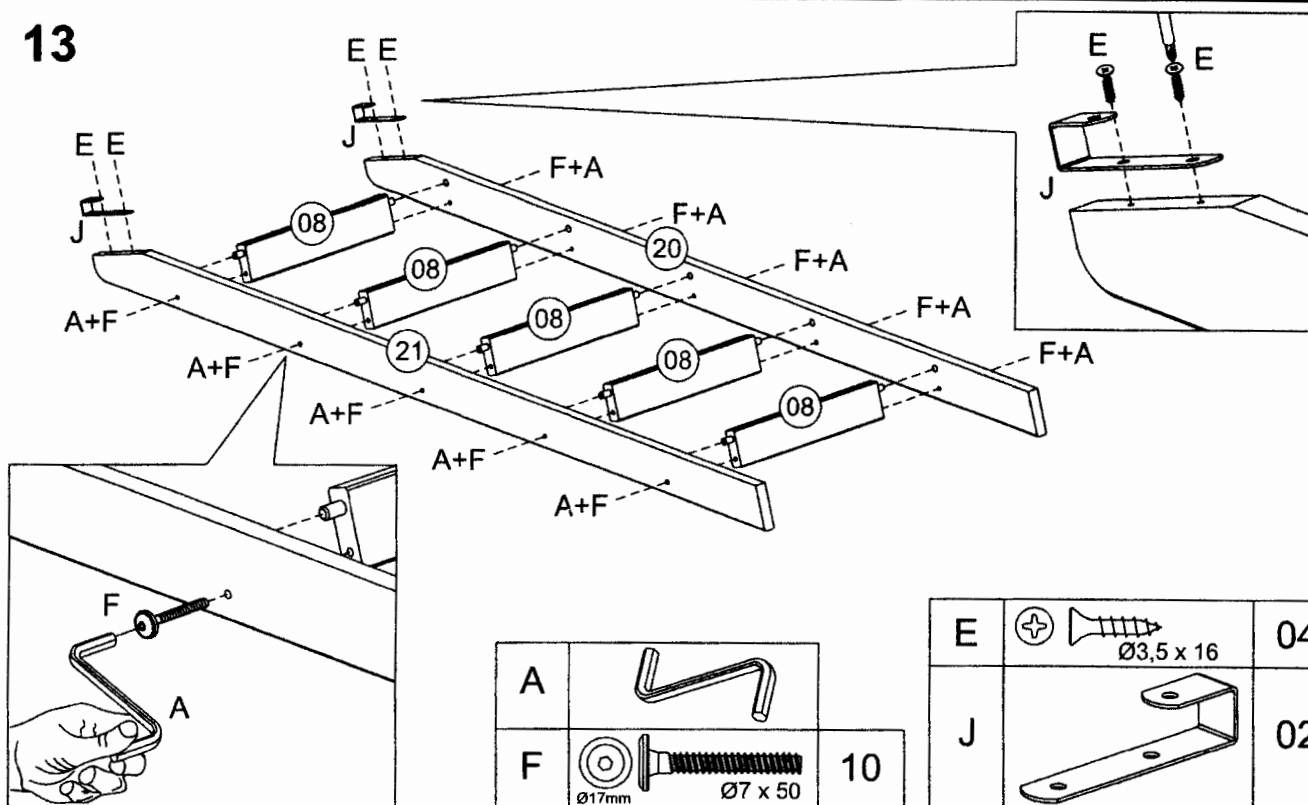

14

