



OSCAR STORAGE BED
3FT
ASSEMBLY INSTRUCTIONS

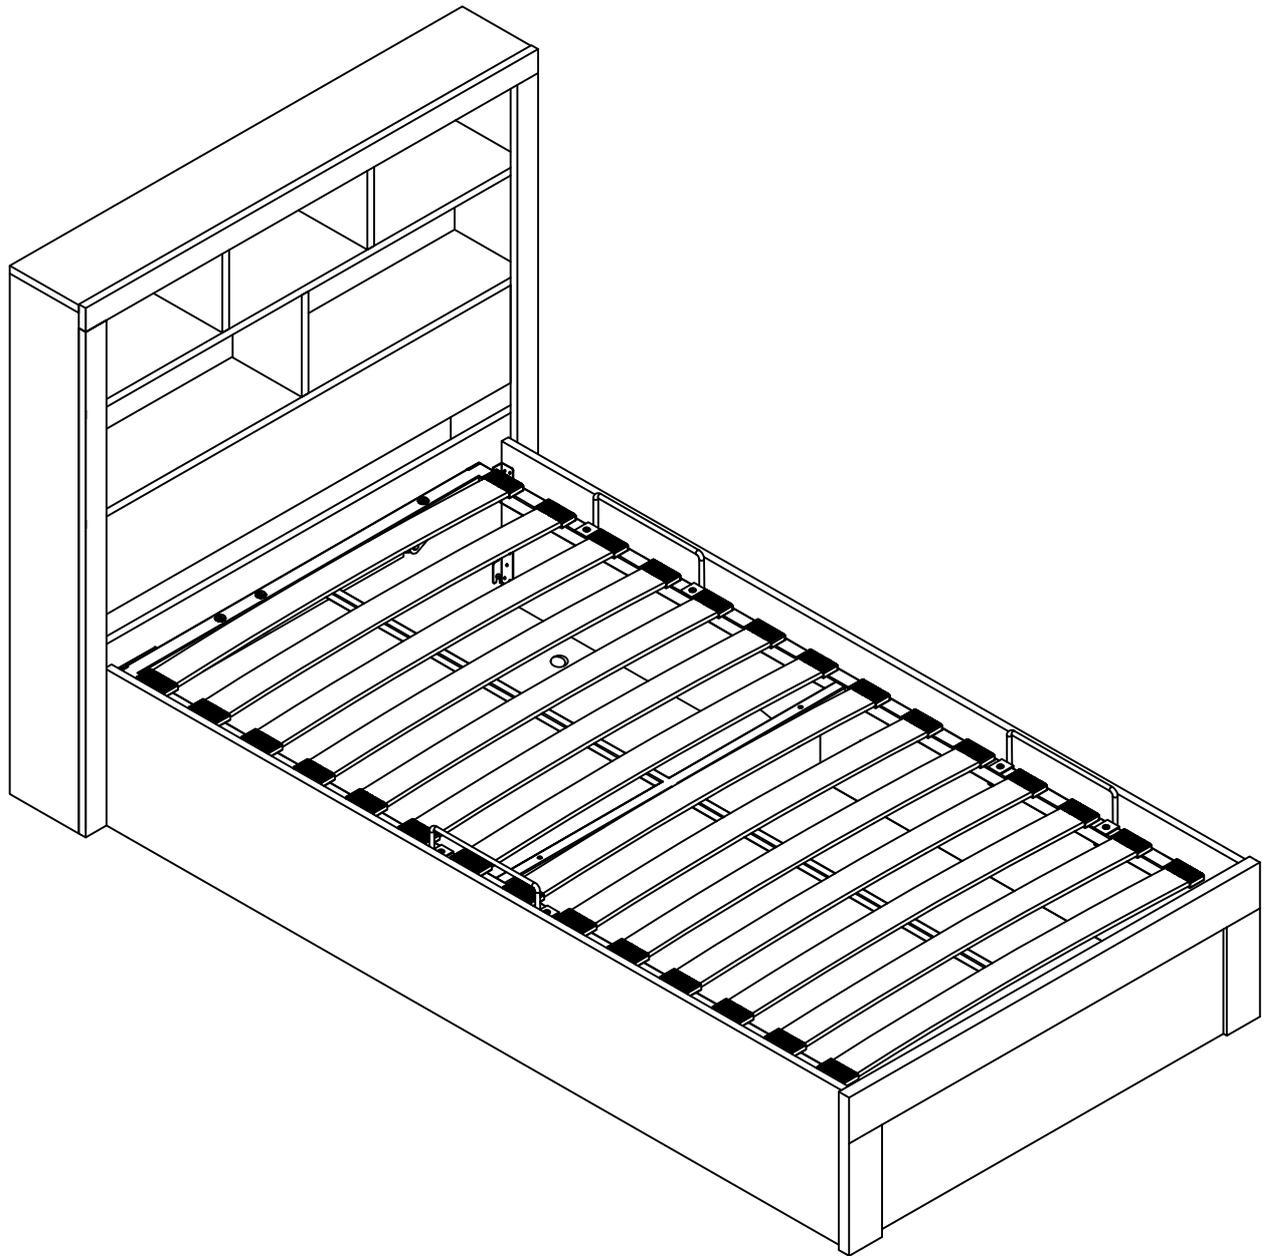

DIMENSIONS

OSCAR STORAGE BED

3FT

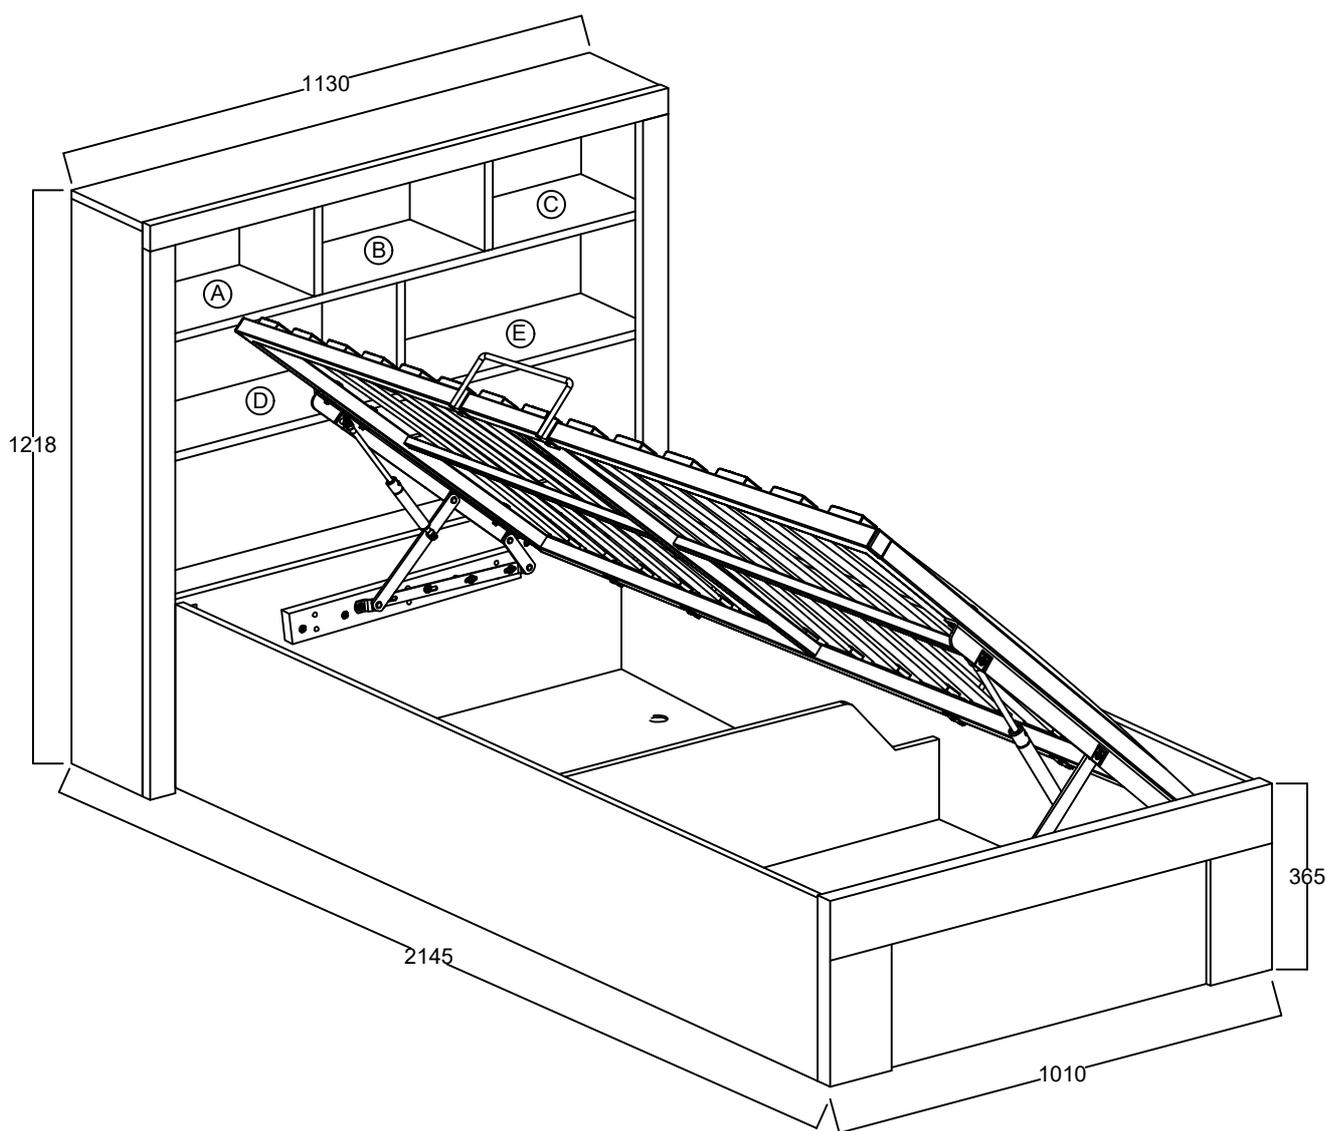

Dimension:

(A,B,C) L352 x H235 x W165

(D,E) L538 x H235 x W165

All measurements are approximates.

Important informations

Please take the time to carefully read through the whole of these instructions before you commence.

Keep these instructions for future reference.

Unpack, inspect and check all of the contents.

Please dispose of all packing safely.

Small components parts could choke a child if swallowed.

We strongly recommend that you keep children well away from the work area.

It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and protect your floor.

This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product.

This bed is heavy. Always lift the bed with two people.

Assemble the product as close to its intended final position in the room as possible.

Keep any sharp object away from the bed frame.

HANDY HINT: If you keep the hardware in a bowl during assembly you will be less likely to lose them.

HEALTH & SAFETY

DO NOT: jump on this bed frame.

DO NOT: use this bed frame if any parts are missing, damaged or worn.

DO NOT: use this bed frame unless all fixings are secured.

DO NOT: push the bed frame as this will damage the legs.

Always lift the bed frame with two people to reposition.

Always use on a level, even surface.

Following installation of the mechanism lift / pull the base up and down a few times to free of the system-the gas cylinders fitted to the system may be stiff when first time used or if the system has not been operated for a period of time. The mattress must be fitted to the base.

Use the strap handle to lift up the mattress base using two hands-Pull the mattress base down using two hands equally spaced from the mattress.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

WARNING: This storage bed frame has a powerful, mechanism and after assembly should only be opened when mattress is in place.

CAUTION

DO NOT: allow children to operate the mechanism.

DO NOT: allow children near the lift base when operating the mechanism.









DO NOT: allow children in the area of the internal storage base.

Keep hands clear of the mechanism when operating the system.






DO NOT: stand inside the bed / on the internal storage base.

DO NOT: overload the internal storage.

Parts List

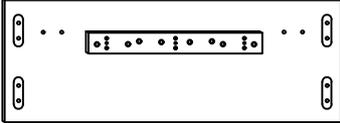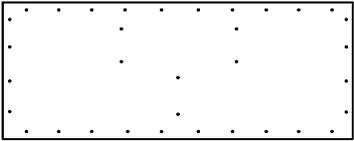Part	Description		Box	Qty
1	HEADBOARD SHELF PANEL (UPPER)		1	1pcs
2	HEADBOARD SHELF PANEL (LOWER)		1	1pcs
3	HEADBOARD FRONT PANEL		1	1pcs
4	HEADBOARD BOTTOM STORAGE PANEL		2	1pcs
5	HEADBOARD DIVIDER SHELF PANEL		1	3pcs
6	HEADBOARD SIDE PANEL LEFT		1	1pcs
7	HEADBOARD SIDE PANEL RIGHT		1	1pcs
8	HEADBOARD TOP PANEL		1	1pcs
9	HEADBOARD TOP LINING		1	1pcs
10	HEADBOARD SIDE LINING (L)		1	1pcs
	HEADBOARD SIDE LINING (R)		1	1pcs
11	HEADBOARD BACK COVER		1	1pcs
12	SIDE RAIL (LEFT & RIGHT)		3	2pcs
13	CENTER STORAGE PANEL		2	1pcs
14	FOOTBOARD		2	1pcs

Parts List

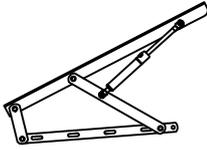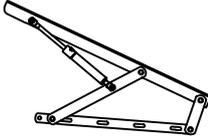Part	Description		Box	Qty
15	BASE PANEL		1	4pcs
16	HYDRAULIC BASE SUPPORT (L)		3	1pcs
17	HYDRAULIC BASE SUPPORT (R)		3	1pcs
18	HYDRAULIC PUMP		3	2pcs
19	BED BASE FRONT BAR		4	1pcs
20	BED BASE BACK BAR		4	1pcs
21	BED BASE CENTER BAR		4	1pcs
22	BED BASE MIDDLE BAR		4	2pcs
23	BED BASE SIDE BAR		4	2pcs
24	WOOD SLATS		4	14pcs

***All parts are numbered accordingly**

Hardware List


NO	HARDWARE DESCRIPTION		QTY	Box
A.	Minifix Screw		45pcs	4
B.	Wood Dowel M8 x 30mm		36pcs	4
C.	Pan Head Screw M3.5 X 12mm		46pcs	4
D.	JCBB Bolt M8 X 16mm		34pcs	4
E.	Hydraulic Metal Corner Support		2pcs	4
F.	JCBB Bolt M8 X 45mm c/w NUT BRACKET, Spring & Flat Washer		6pcs	4
G.	JCBC Bolt M6 X 30mm		10pcs	4
H.	JCBC Bolt M6 X 35mm		2pcs	4
I.	JCBC Bolt M6 X 40mm		14pcs	4
J.	M6 Flat Washer		6pcs	4
K.	Nut Bracket (2hole)		4pcs	4
L.	Single End Plastic Cap		28pcs	4
M.	Handle		3pcs	4
N.	Allen Key M8		1pcs	4
O.	Allen Key M6		1pcs	4
P.	Spanner M12.8		1pcs	4
Q.	L Bracket (2 holes)		3pcs	4
R.	Round White Stickers		1pcs	4

**You will also need a screwdriver and small mallet (not provided).




NOT PROVIDED

NOT METAL



NOT PROVIDED


People Required
to Assemble

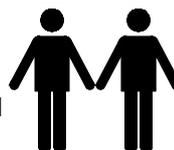

DO NOT use any power tools as this may
damage the frame.

IMPORTANT NOTE

Please join all of the minifix screw to the plastic holes first and then joint together the panel and install the minifix lock nut in the holes and lock it, follow the example below.

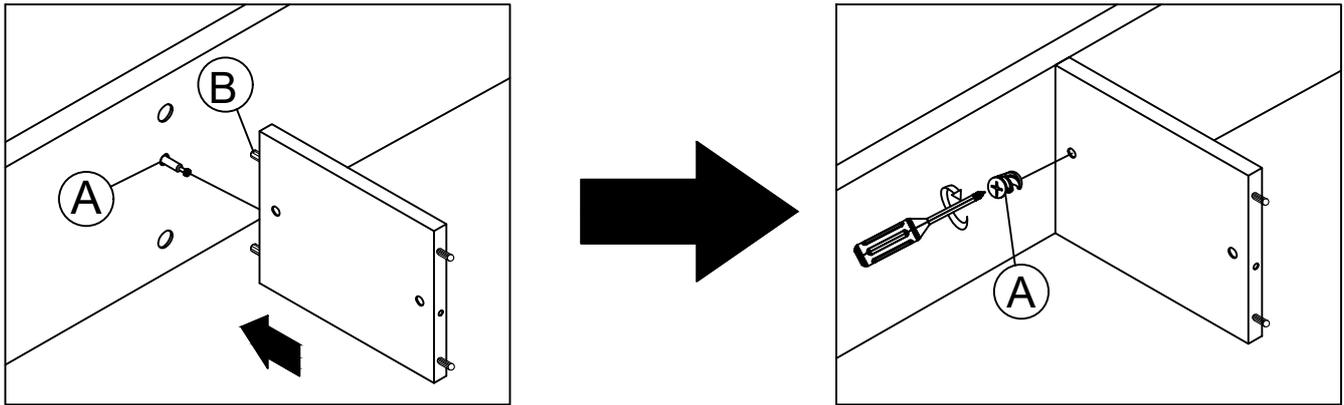


STEP 1: Join together the divider shelf panel (5) with the upper shelf panel (1) and lower shelf panel (2) by using hardware part (A & B). Then, join the headboard front panel (3) to the bottom of lower shelf panel by using hardware parts (A & B).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

BACK VIEW:

IMPORTANT NOTE




Please join all of the minifix screws(A) to the plastic holes before you start assembly.

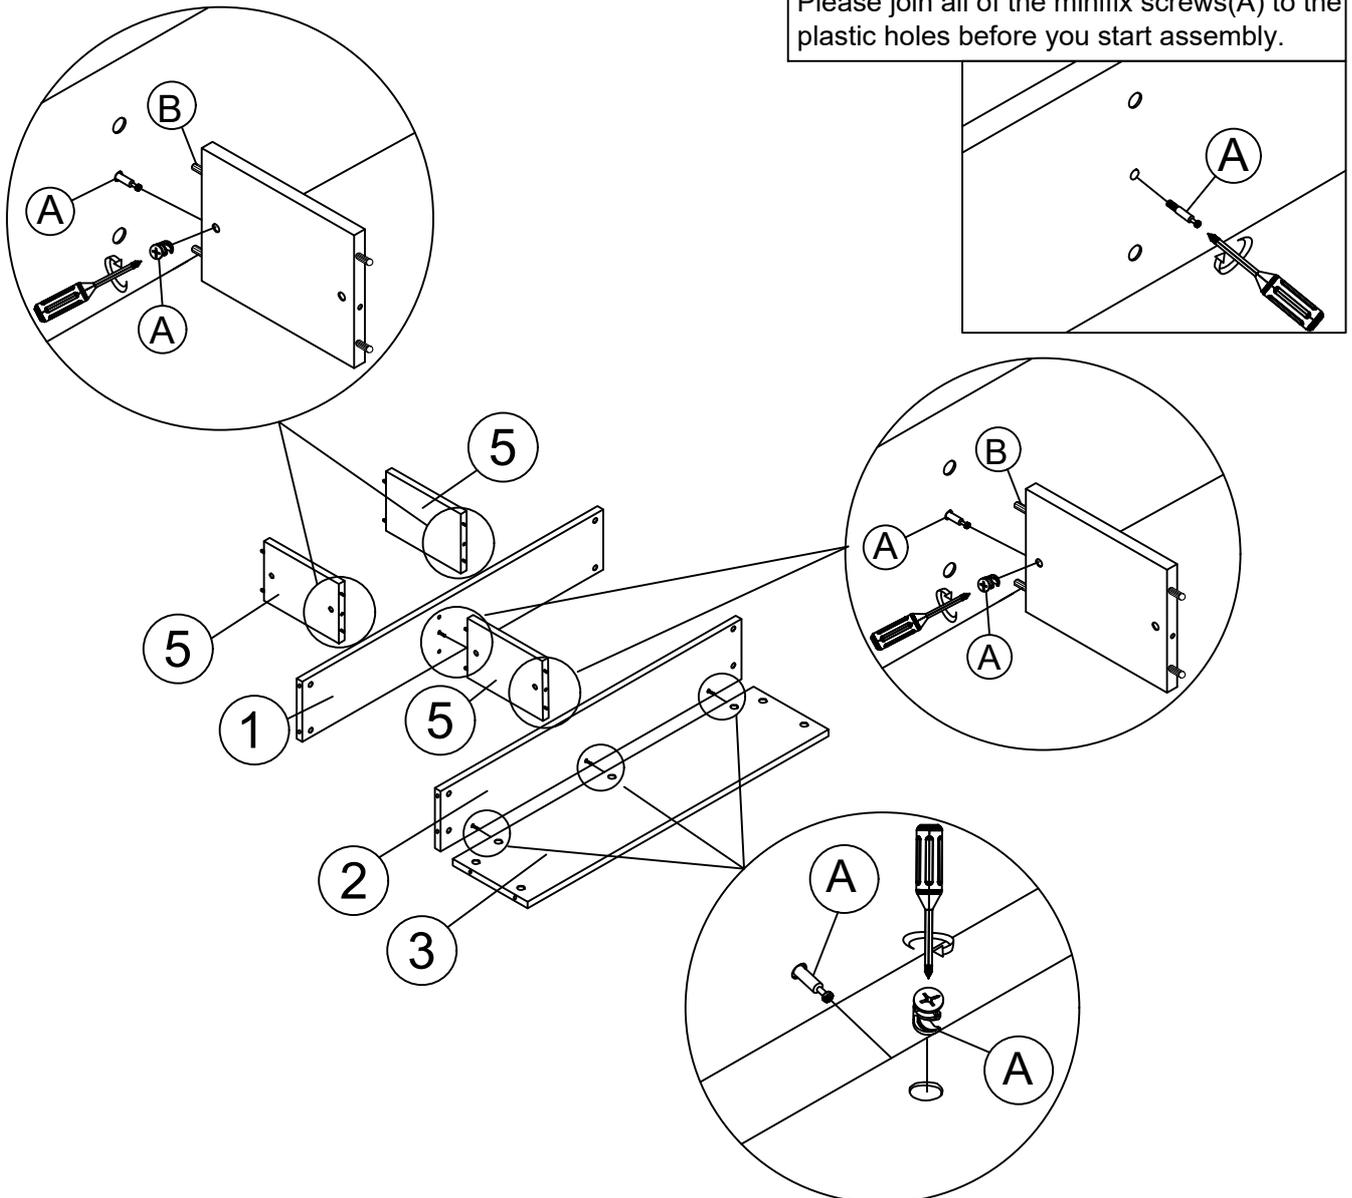


STEP 2: Attach the headboard top lining(9) to the headboard top panel(8) and the headboard side lining (10) to the headboard side panel (6 & 7) by using hardware part (A).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

IMPORTANT NOTE

Please join all of the minifix screws(A) to the plastic holes before you start assembly.

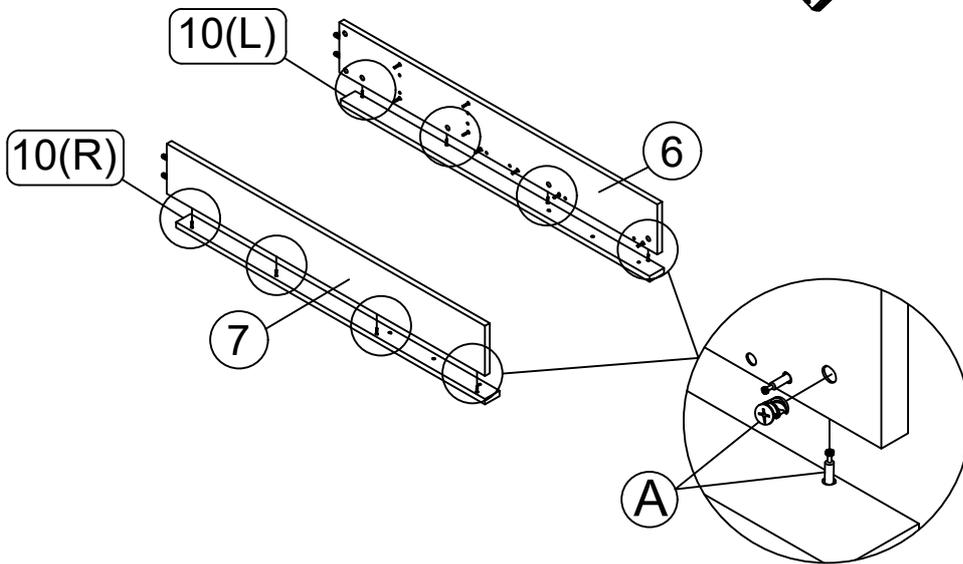
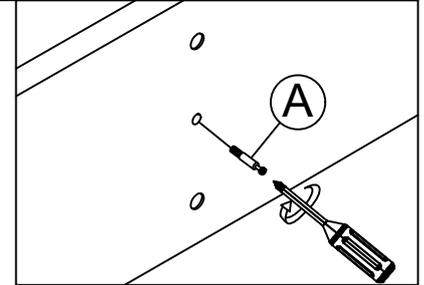
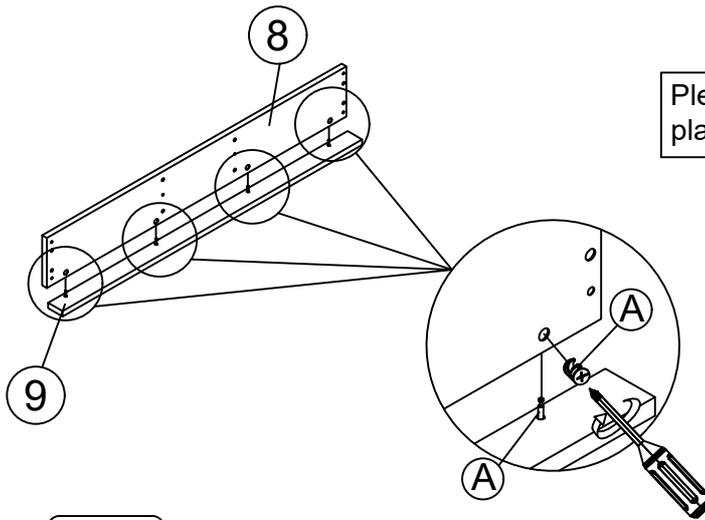


STEP 3: Please use the hardware parts (C&Q) to fix the headboard top panel(8) and headboard top lining(9) to make sure to be level.

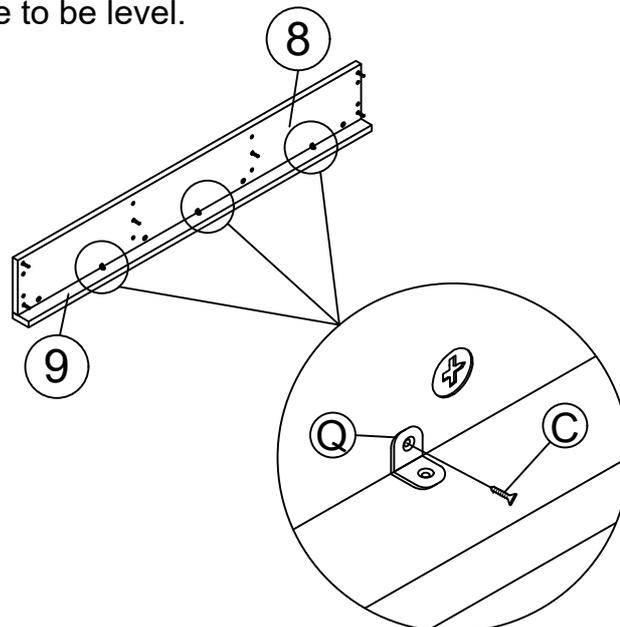


NOTE : If the top lining and top panel are level, it is NOT necessary to assembly the L Bracket !


STEP 4: Attach the both headboard side panel Left (6) & Right (7) to the headboard panel (1, 2, 3 & 4) by using hardware parts (A & B). Then, join the headboard bottom storage panel (4) with hardware part (G & J) to make the headboard more stable. **DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

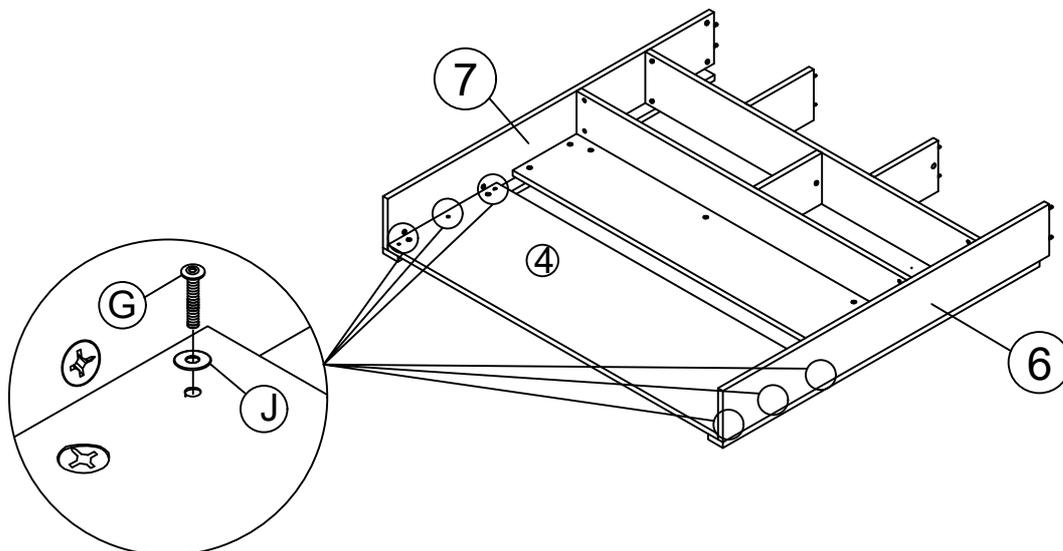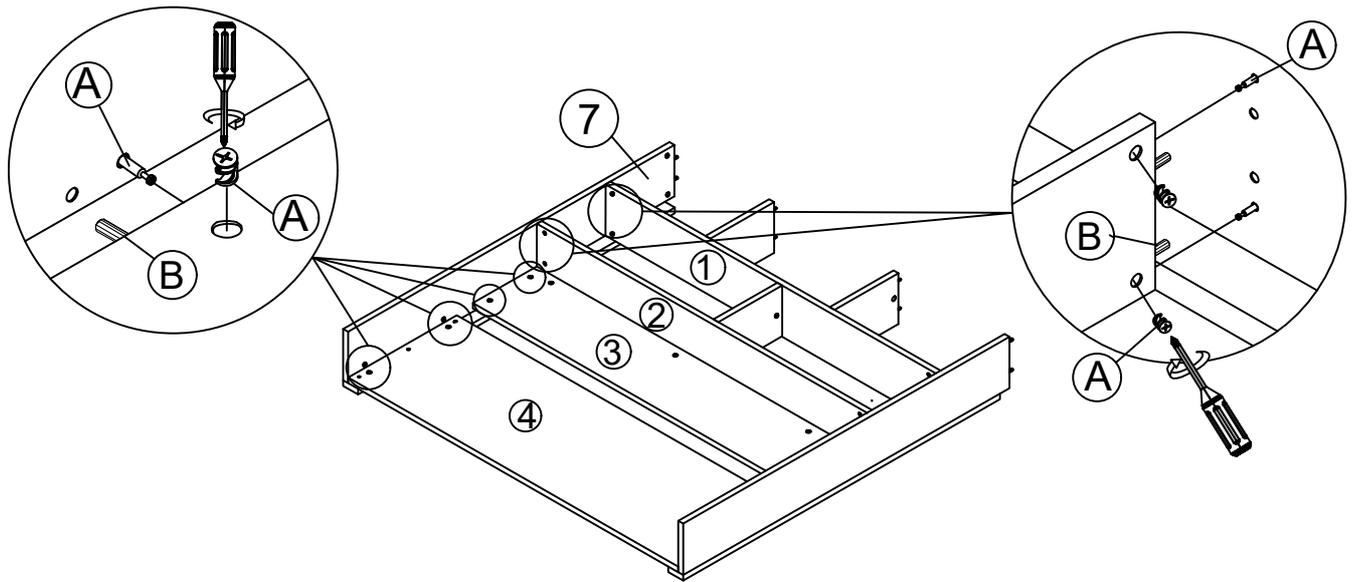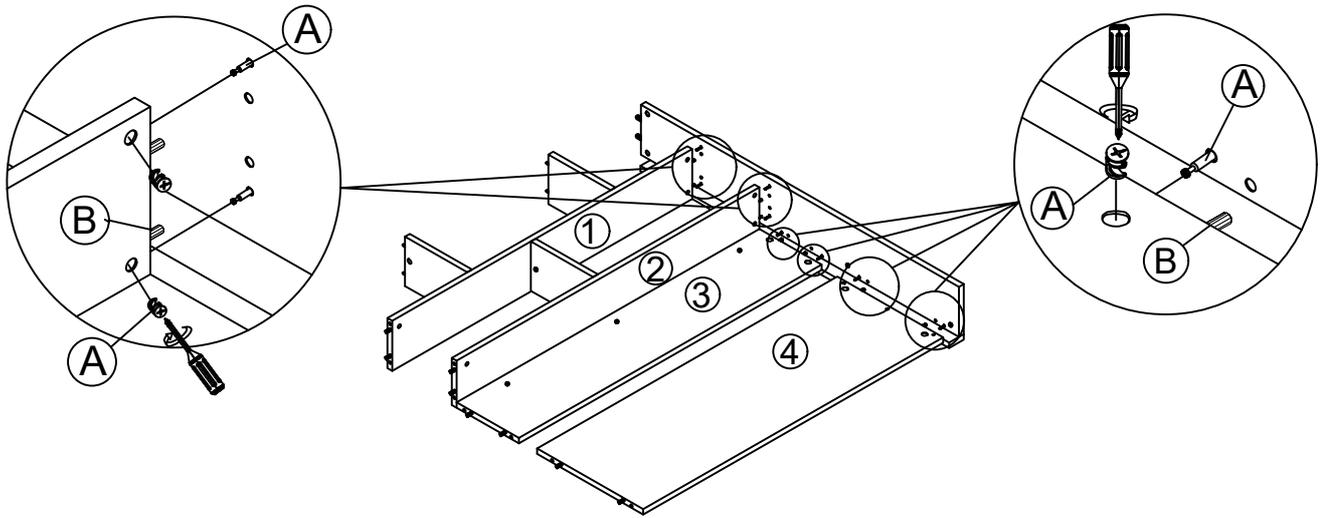

STEP 5: Join the headboard top panel (8) to the top of divider shelf panel (5) and headboard side panel Left (6) & Right (7) by using hardware parts (A & B).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

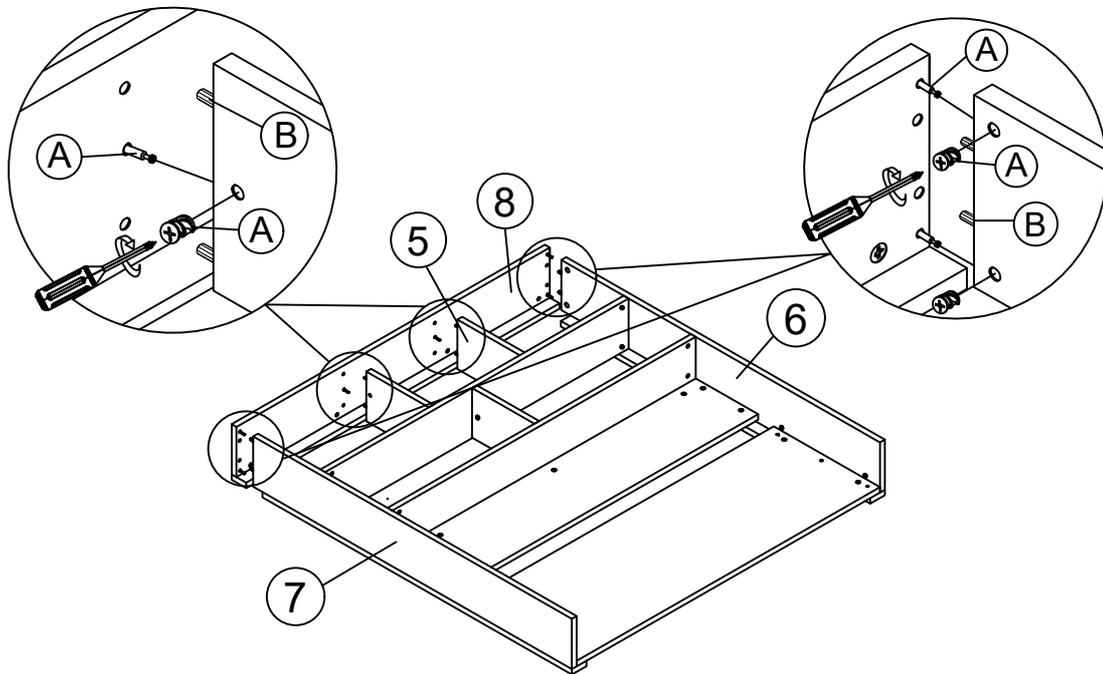


STEP 6: Attach the headboard back cover (11) to the back of the completed headboard by using hardware part (C). First, join the pan head screw to the holes on the 4 corners had been prepared on headboard back cover and finally join all the others screws to the following mark.

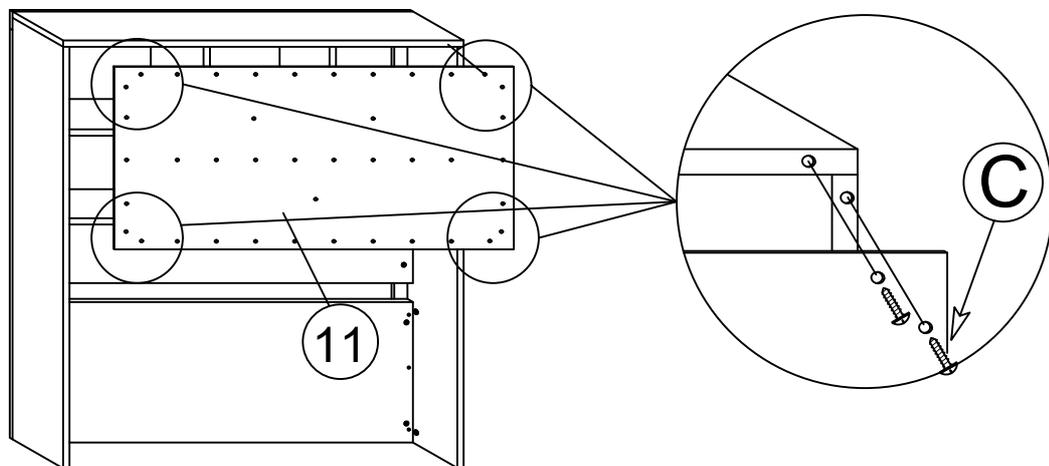


STEP 7: Join together the left side rail and right side rail (12) with the centre storage panel (13) using hardware parts (A & B).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

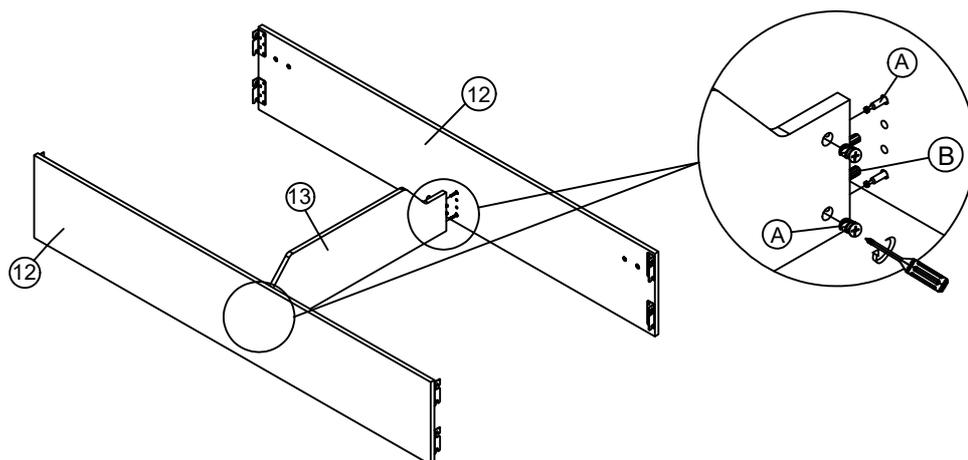


STEP 8: Attach the headboard frame and footboard (14) to the side rails using hardware part (D).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

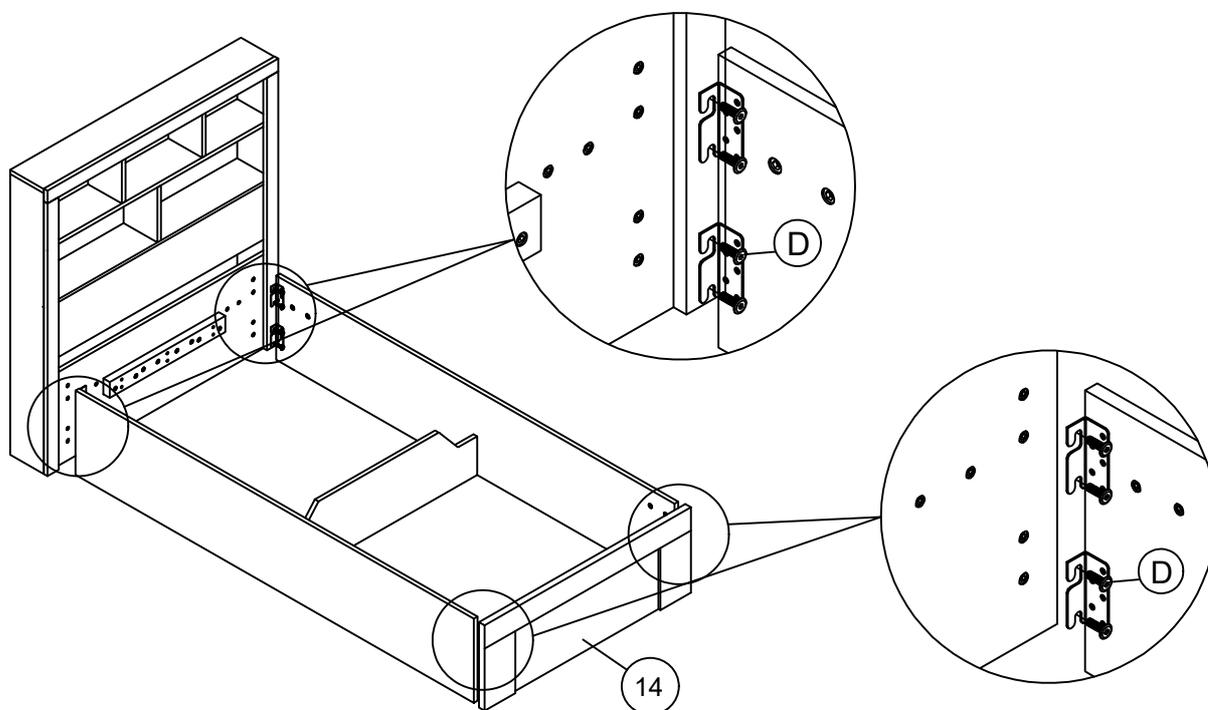

STEP 9: Insert the bed base panel (15) to the position.

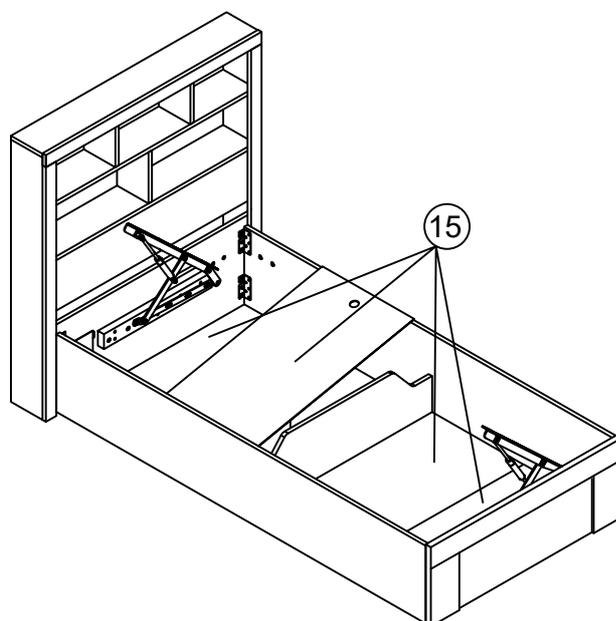


STEP 10: Firstly, Loosen the Hex Nut from the Left & Right Hydraulic Base Support ,then fix the hydraulic pump to each hydraulic base using the same Hex Nut & P. (shown in diagram 7.1) Next, fix the left & right hydraulic spacer together with hydraulic base supporter to both side rails using bolt D and then screw the minifix part A to the both side rails as (shown in diagram 7.2).

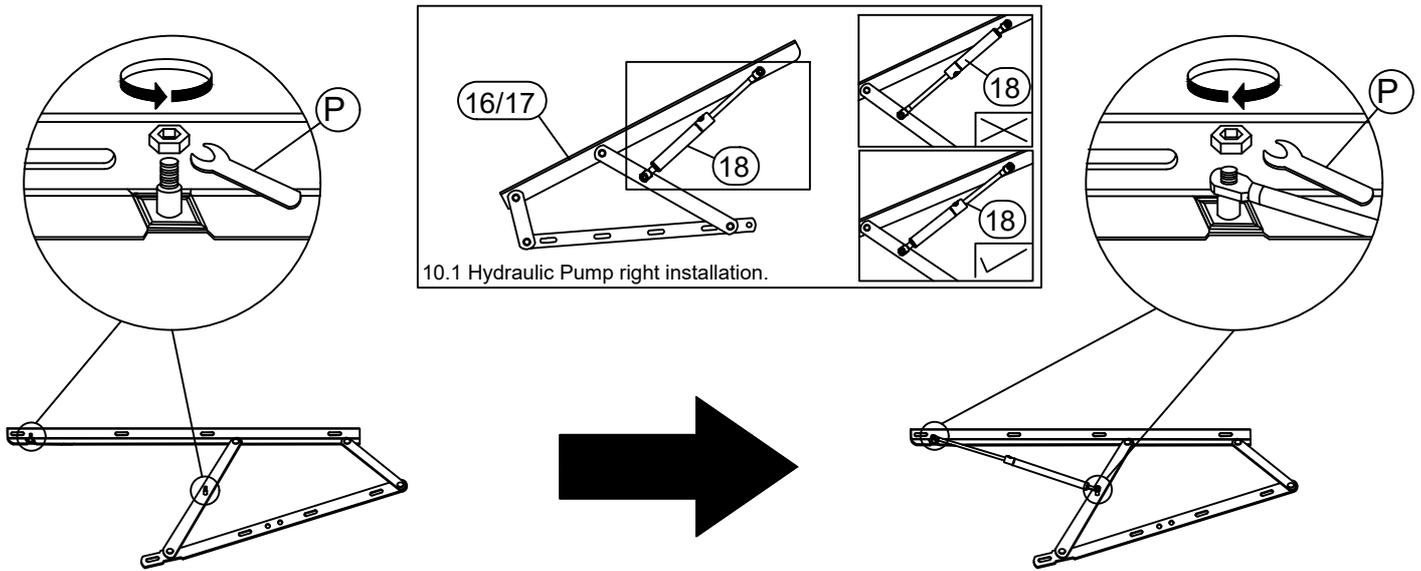


- Next, ansure your hydraulic opening side. Locate your hydraulic base support through the JCBC holes L1,L2, L3 &L4 or R1, R2, R3 & R4 at headboard and footboard as shown in Fig 9.2.


OPTION 1 (LEFT OPENING)

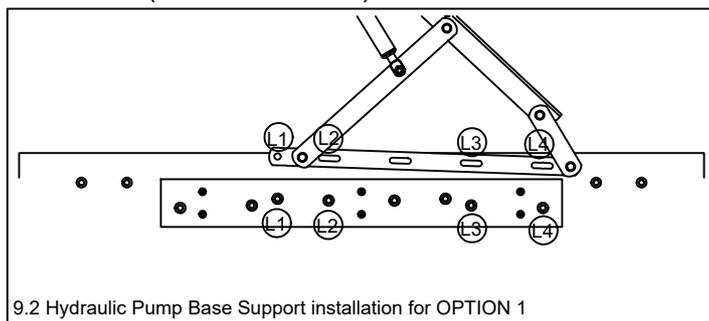


9.2 Hydraulic Pump Base Support installation for OPTION 1

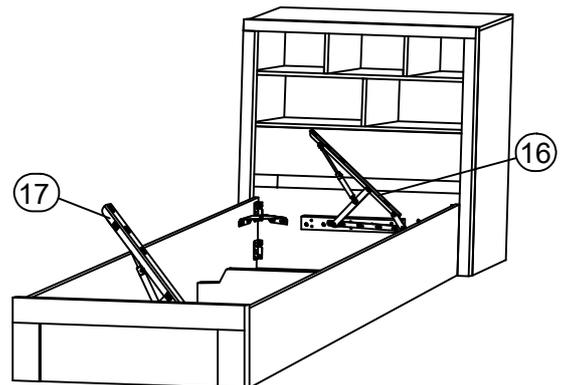



OPTION 2 (RIGHT OPENING)

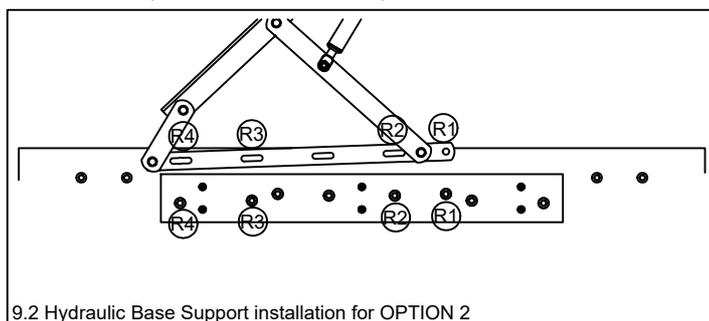


9.2 Hydraulic Base Support installation for OPTION 2

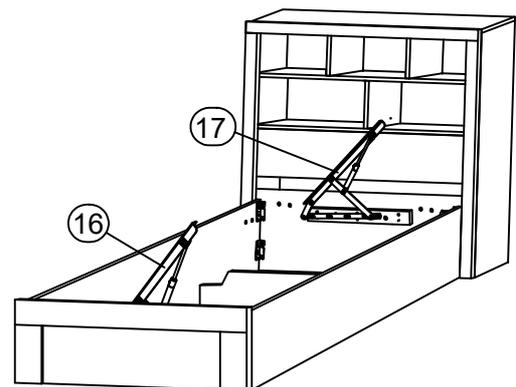


- Make sure fix hardware (D) at round end hole first (L1/R1) as shown in Fig 9.3 and do not tighten yet. Finaly, fix all hardware (D) and tighten all bolts as shown in Fig 9.4.

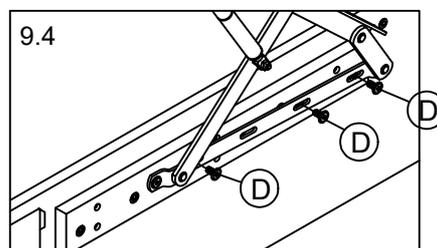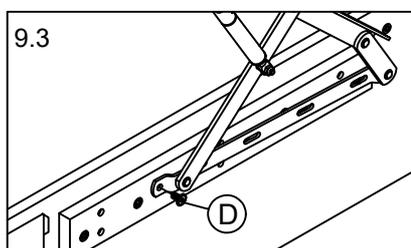


STEP 11: Attach hardware part (E) using hardware part (D).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

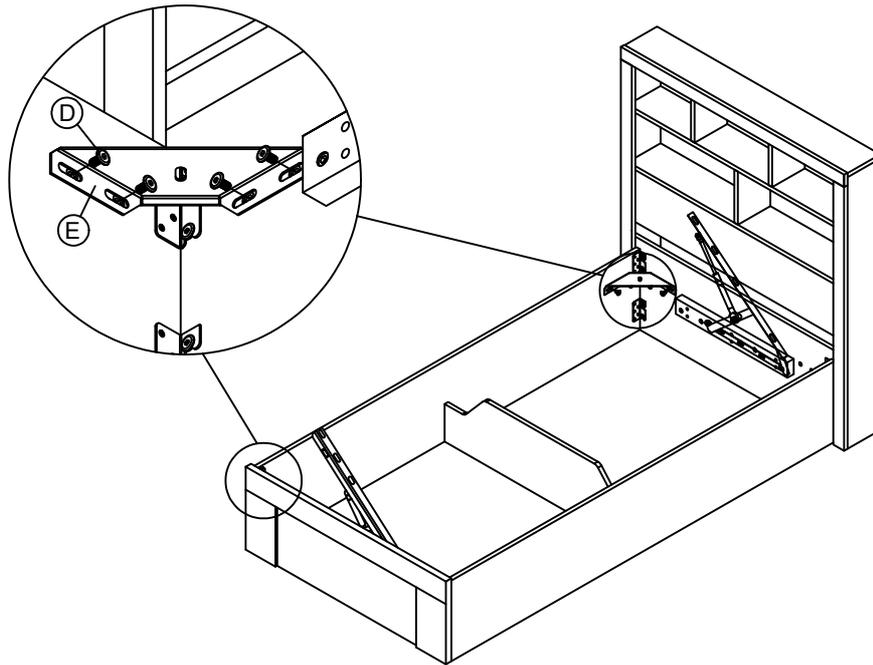

STEP 12: Join together the front bed base (19), back bed base (20) and end bar left & right (23) using hardware parts I and K. Attach parts (21) and (22) using hardware part (G & H).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

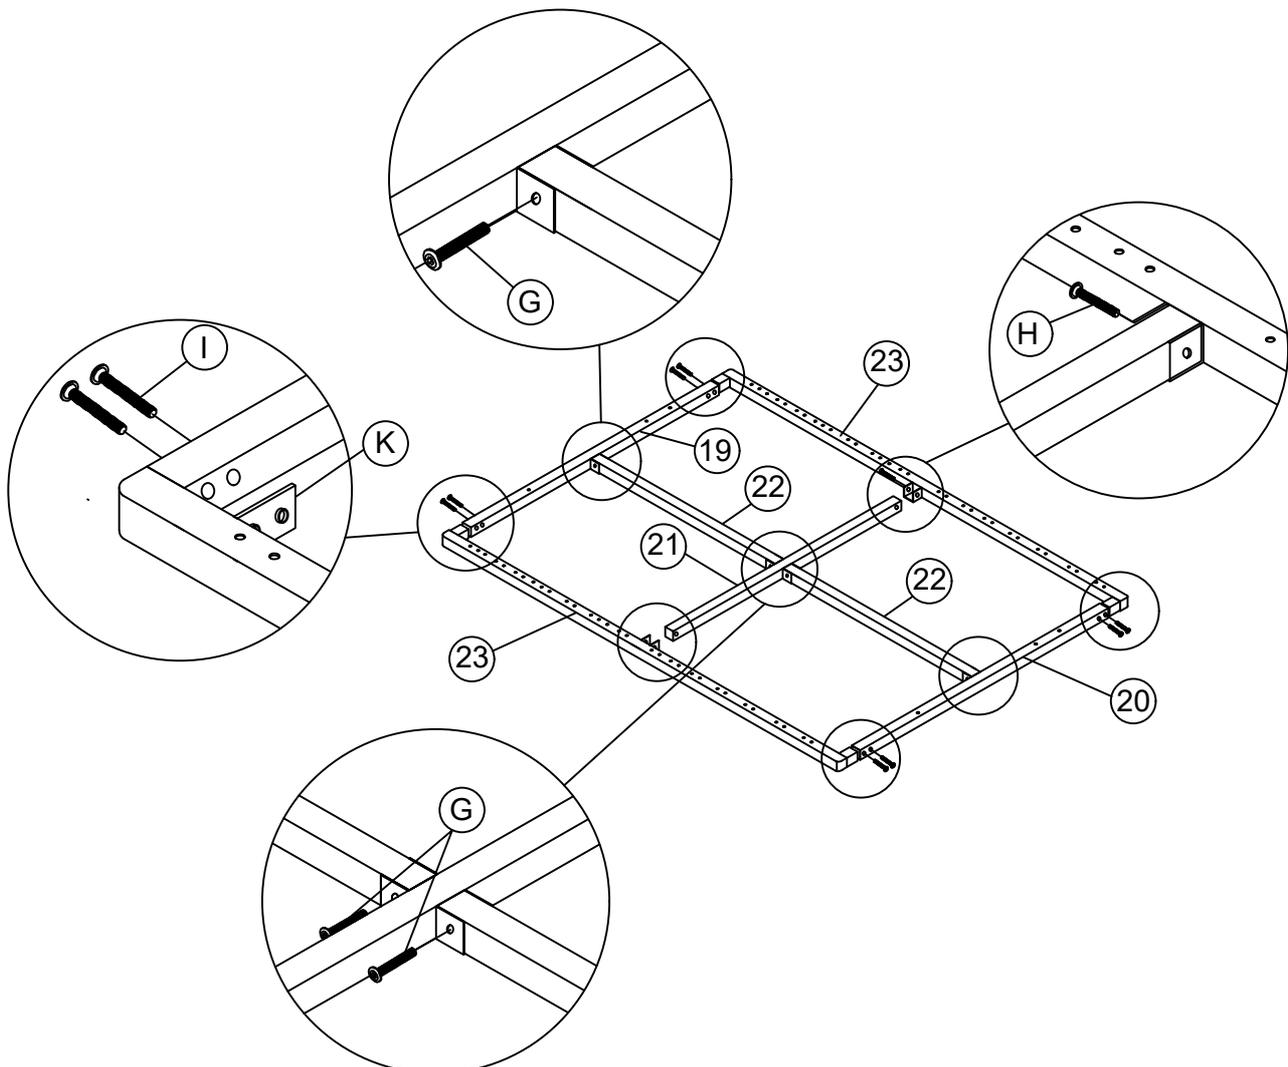


STEP 13: Fit the slat cap (L) onto the spring slat (24) and insert into the pre-drilled holes. Please note you may need to press firmly into place. After that fix base handle (M) to the bed base with bolt (I) as shown.

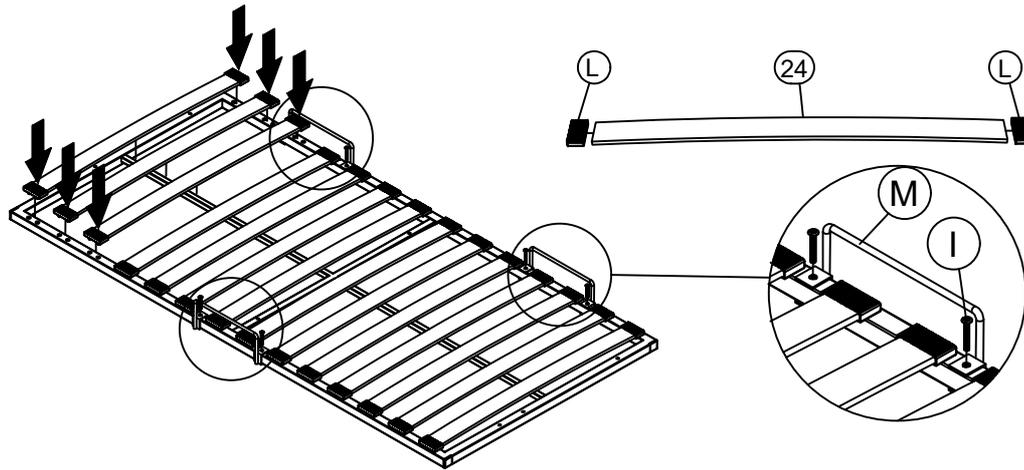


STEP 14: Assemble the bed base on the left & right hydraulic frame and fix bolts (F) starting from '1' to '3' as shown.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

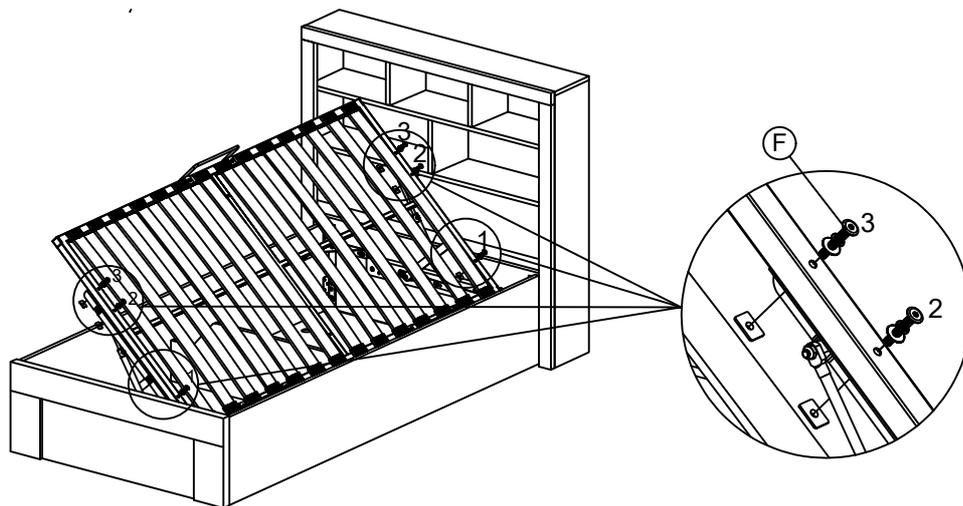

STEP 15: Stick the round white stickers (R) to the minifix bolt to make the holes colour look same.


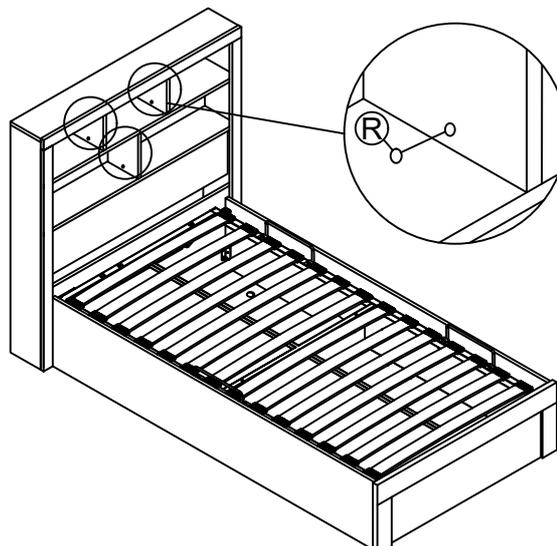


STEP 16: Adjust the bed base, make sure that the distance with the side rail approximately 15mm to above. Tighten all bolts and screws


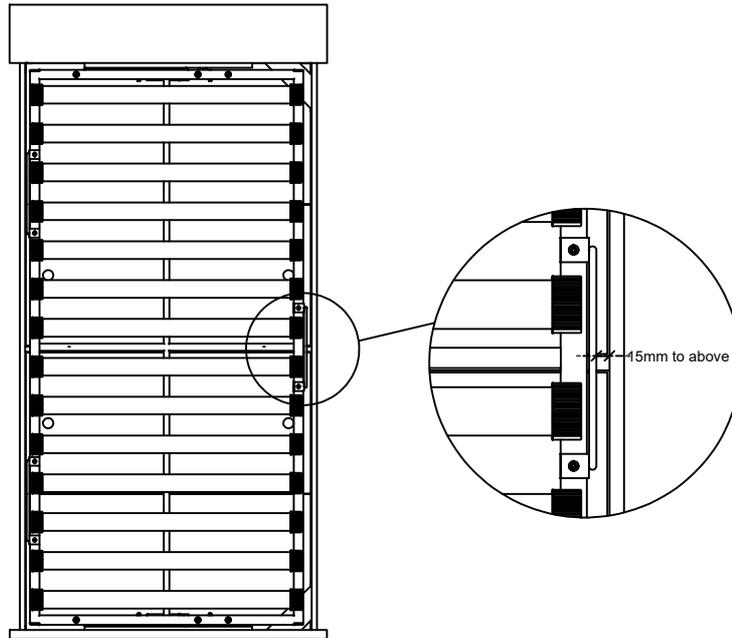


THE BED HAS BEEN FULLY ASSEMBLED

Option 1 (LEFT OPENING)

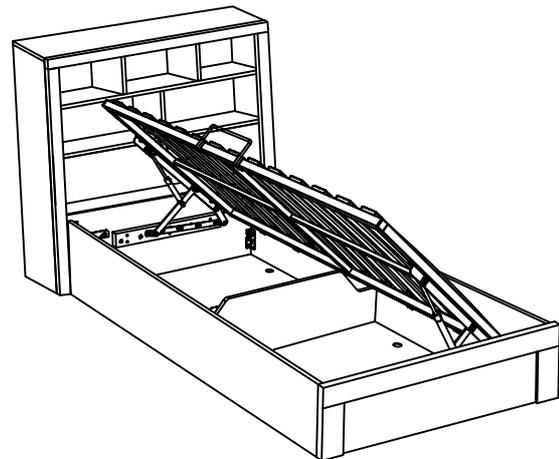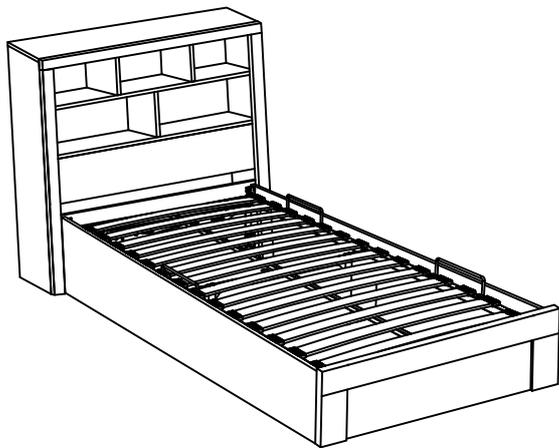

Option 2 (RIGHT OPENING)

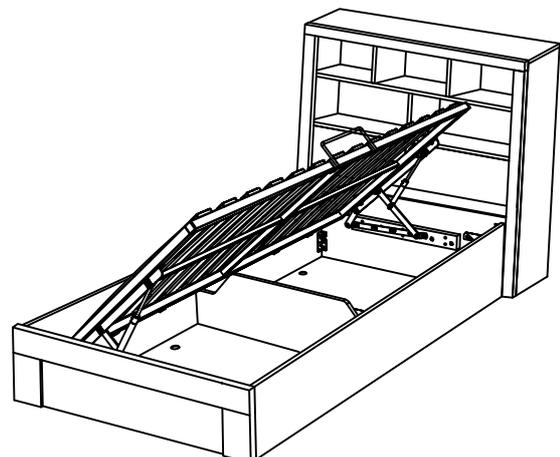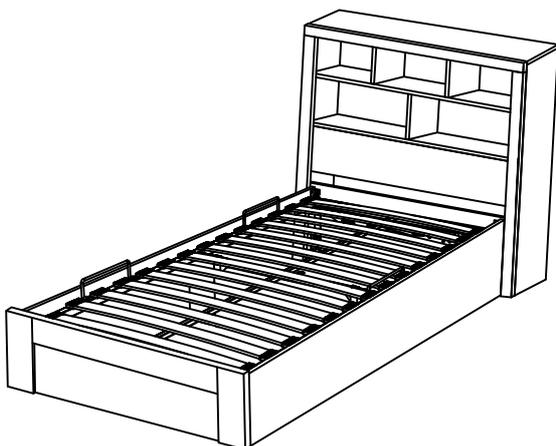

" IMPORTANT NOTE "

WHEN THE BED IS BUILT AND THE MATTRESS FRAME IS AT 45 DEGREE ANGLE PLEASE PLACE THE MATTRESS ON THE BED.

PLEASE NOTE THAT THE WEIGHT OF THE MATTRESS IS REQUIRED TO HELP CLOSE THE BED.

TO LOWER THE SLEEPING PLATFORM STAND AT THE SIDE RAIL OF THE BED AND PUSH SHARPLY DOWNWARDS USING BOTH HANDS.



WARNING: Take care when assembling the base. Assemble the ottoman as closed to its final position. The Ottoman has a powerful, mechanism and after assembly should only be opened when the mattress is in place.

General Care

Wipe clean with a slightly damp soft cloth.

Avoid the use of all household cleaners and abrasives.

When moving your furniture, carefully lift into place. never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Warning

This bed frame is heavy. Please use an assistant when lifting.

Notes

We've tried to make this bed frame as easy to assemble as possible. In the unlikely event that you have problems putting it together or damaged or missing pieces, please contact your retailer directly you purchased it from who will be able to resolve any issue.