

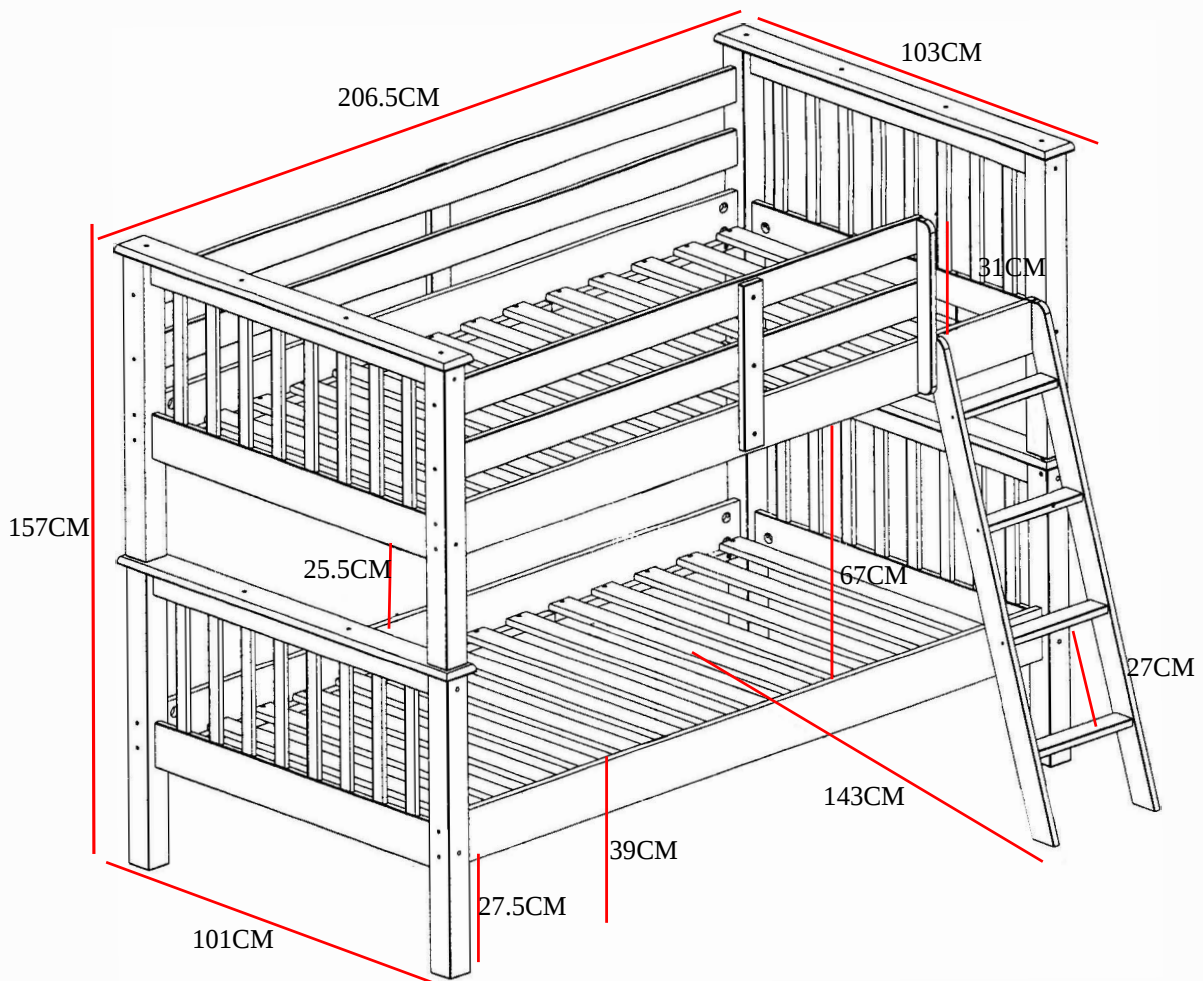
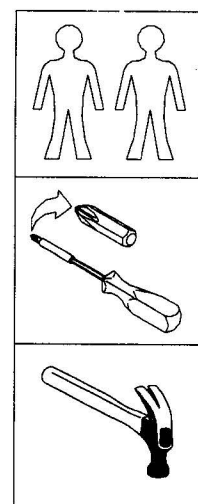
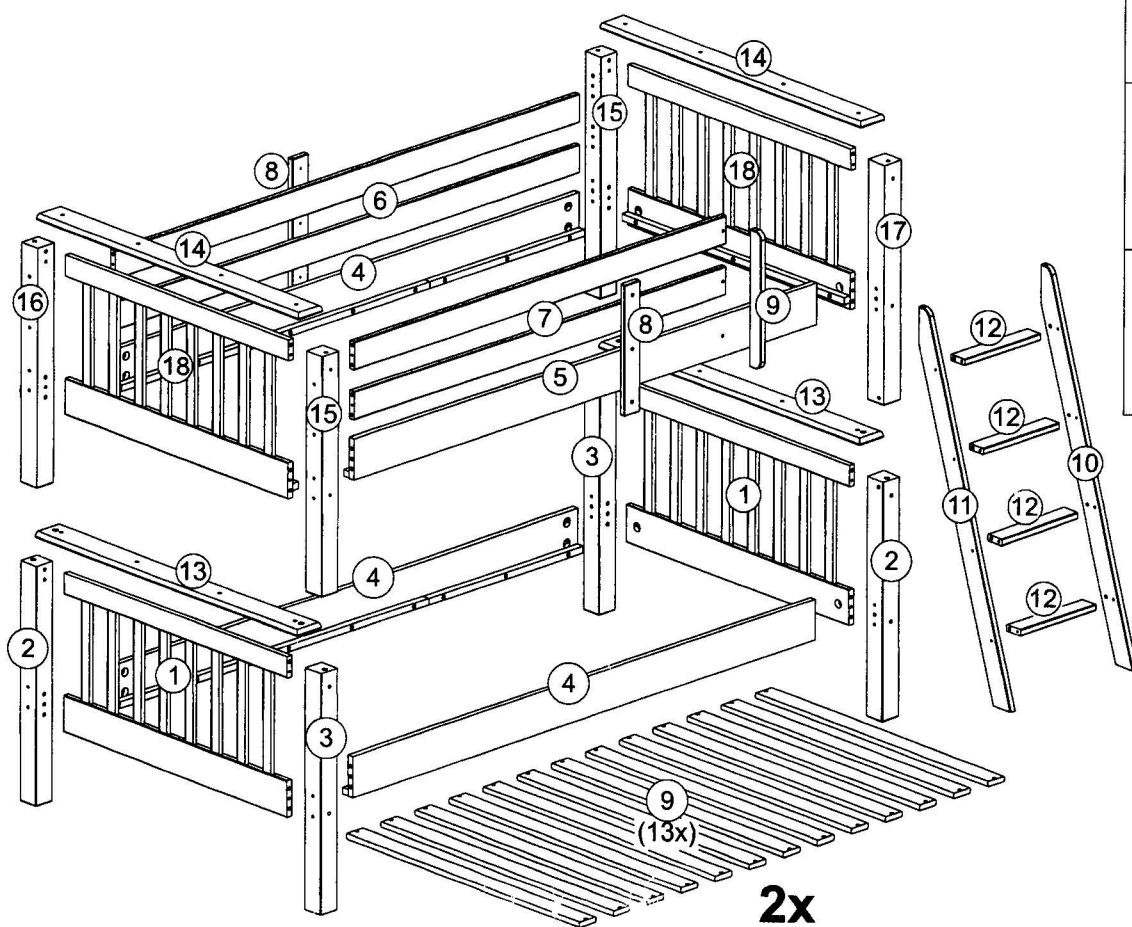
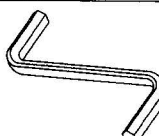














A		01
B	 Ø10 x 50	56
C	 Ø15 x 90	04
D	 Ø3,5 x 35	82
E	 Ø4,0 x 16	06
F	 Ø17mm Ø7 x 50	11
G	 Ø17mm Ø7 x 100	14


H	 Ø17mm Ø1/4" x 110	24
I		24
J		02
K	SPACER (WOODEN) 	02
L	 Ø10mm	16




01

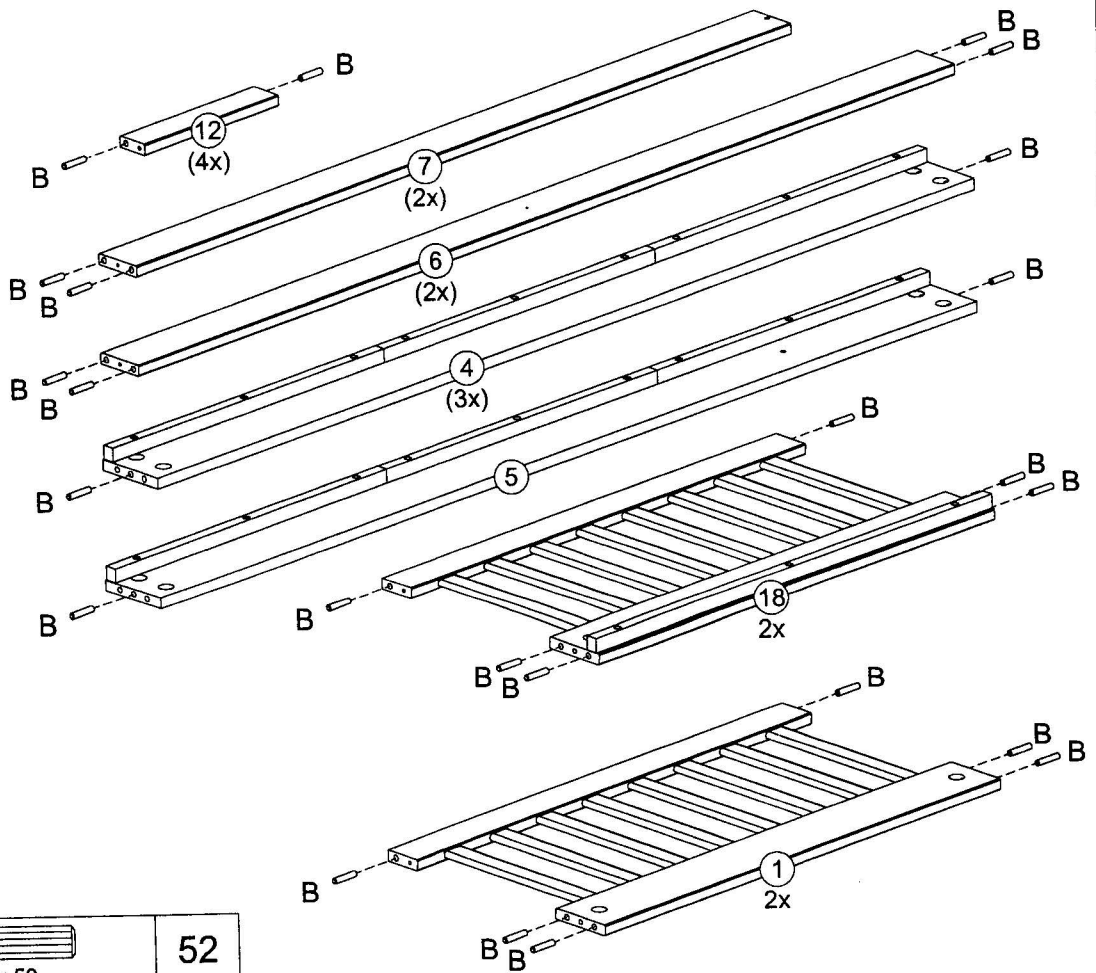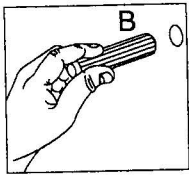


B		52
Ø10 x 50		

02

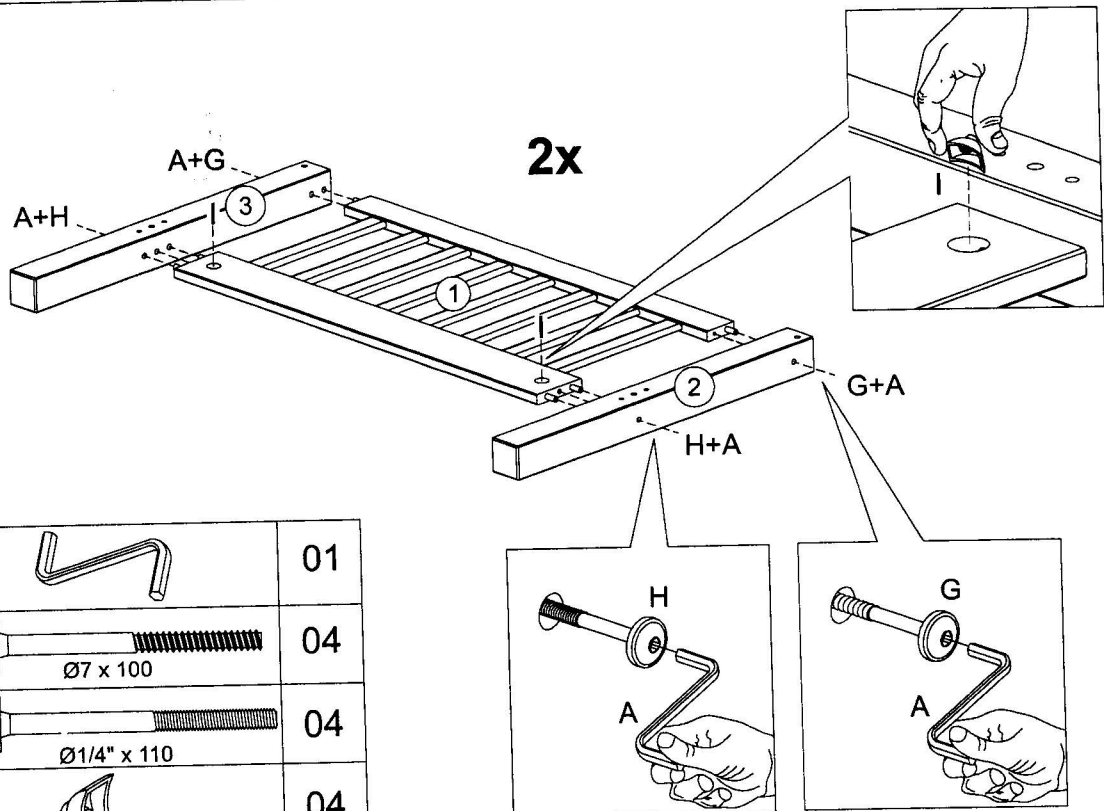


A		01
G	 Ø17mm Ø7 x 100	04
H	 Ø17mm Ø1/4" x 110	04
I	 1/4"	04


03

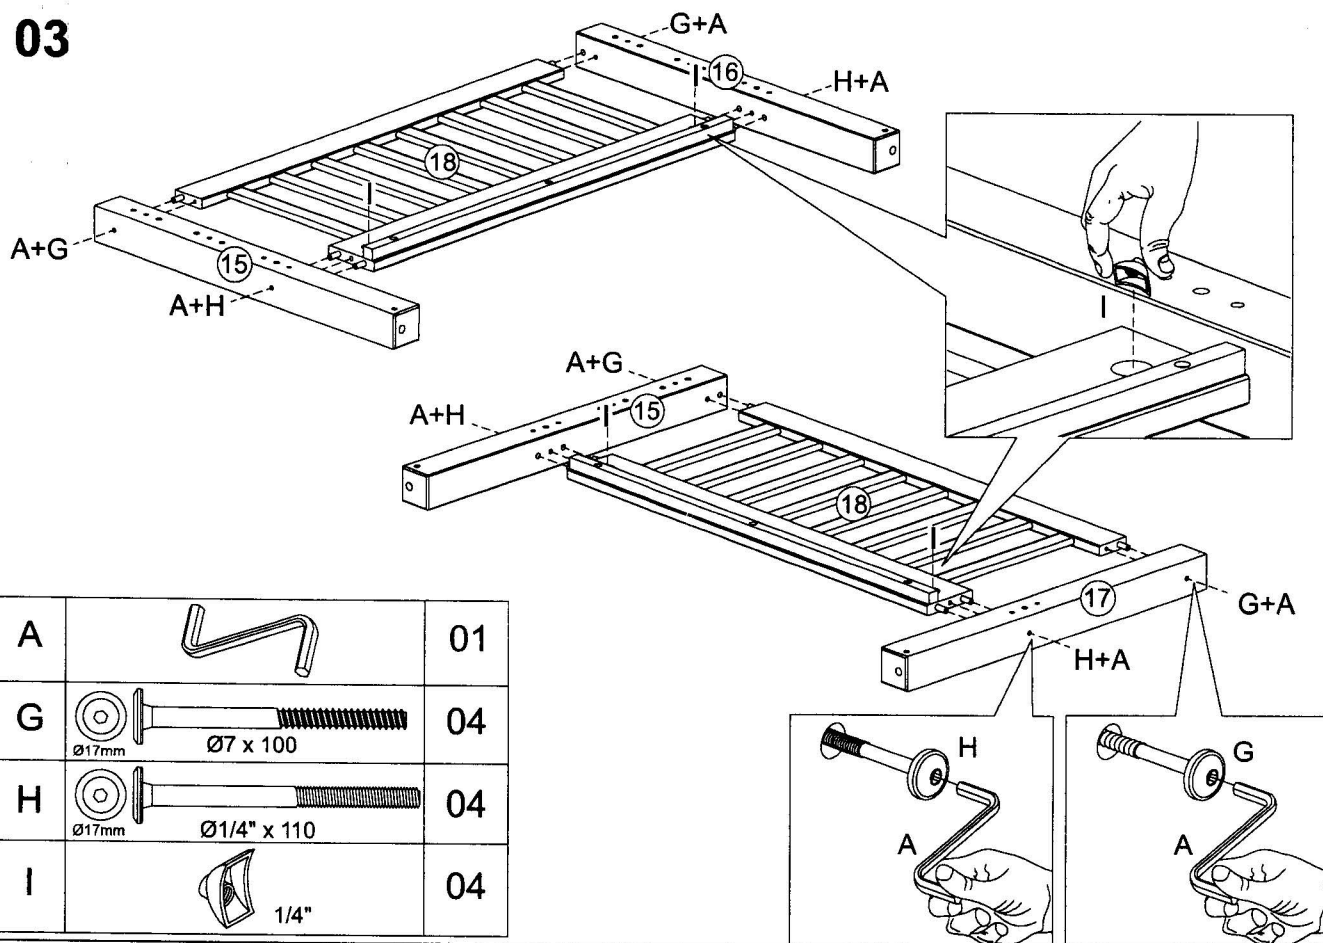


04

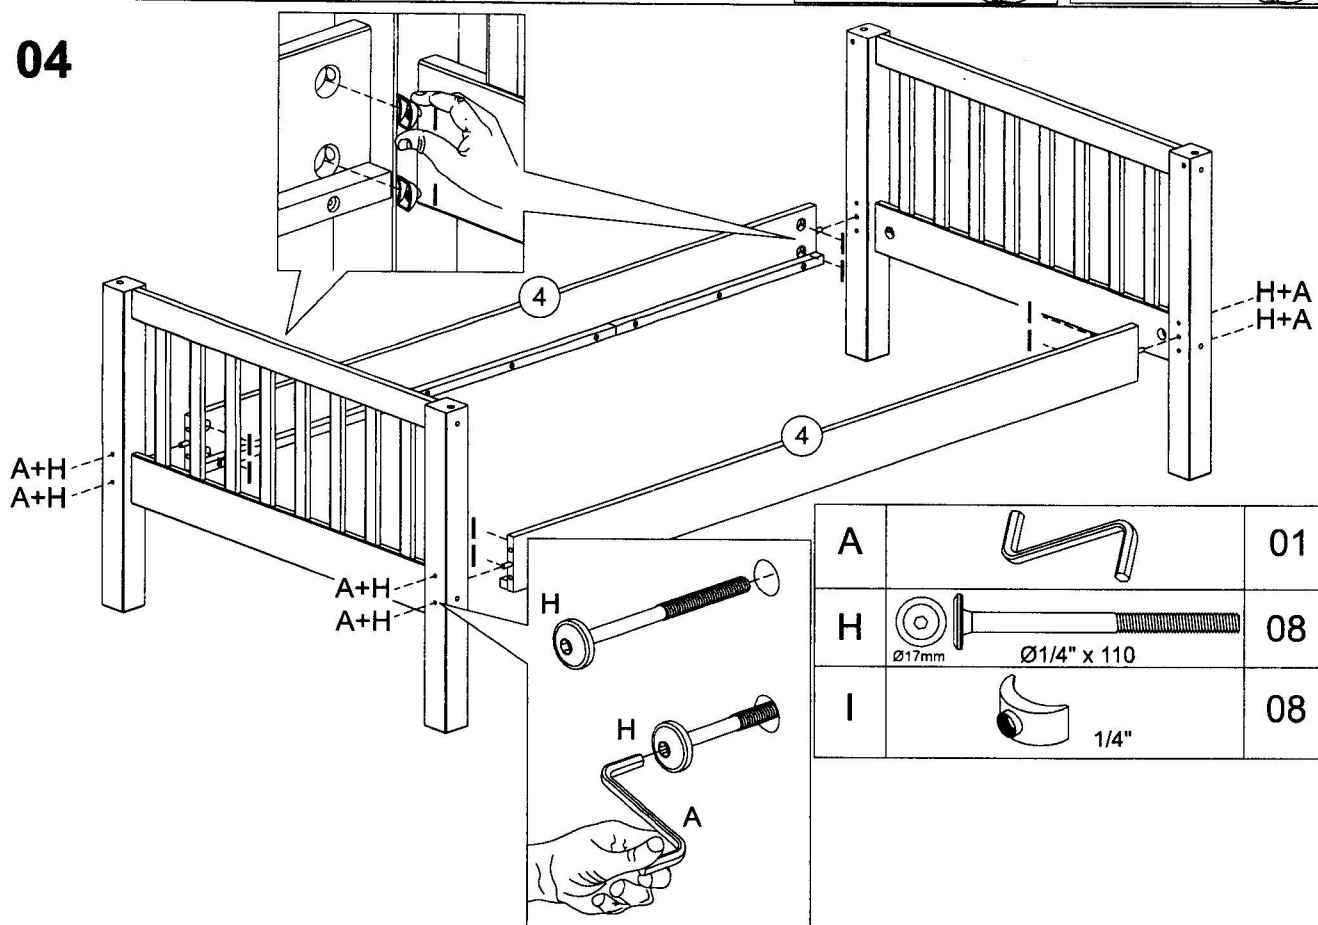


05

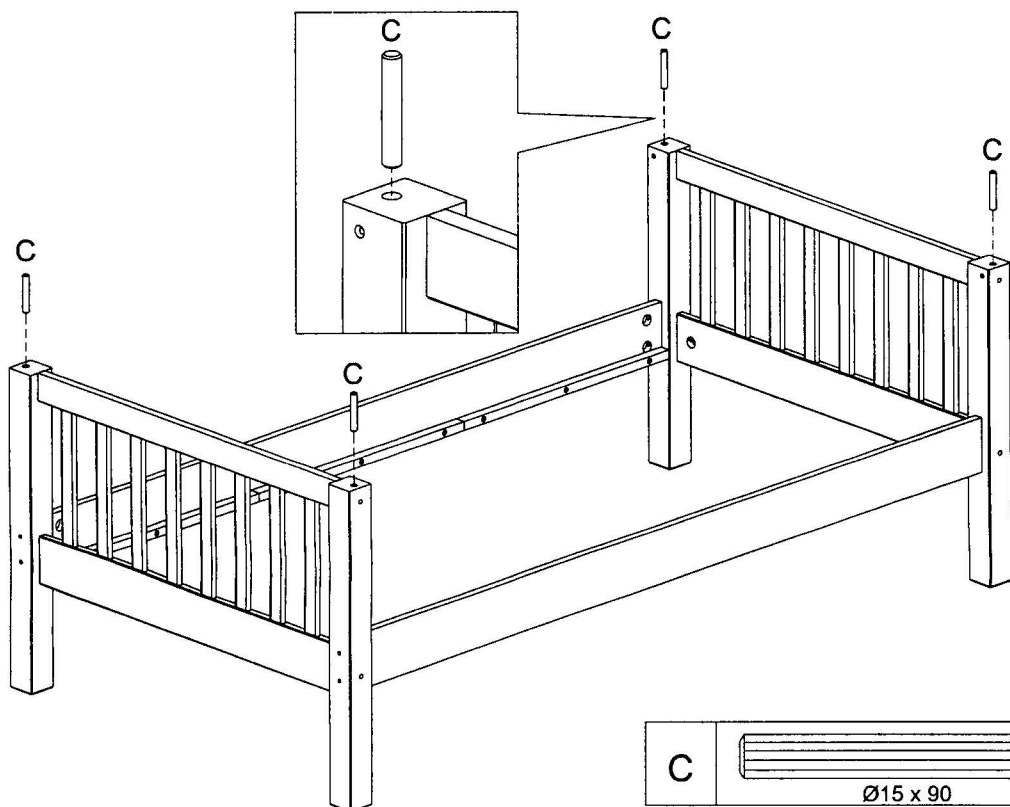


06

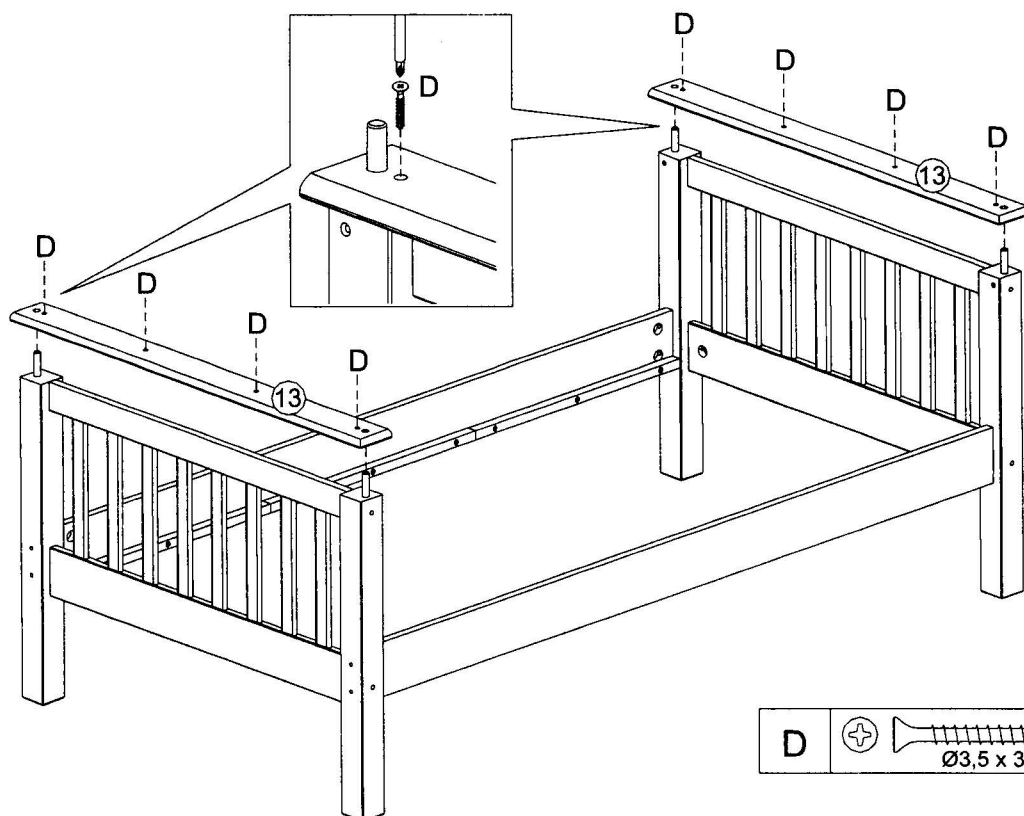


07

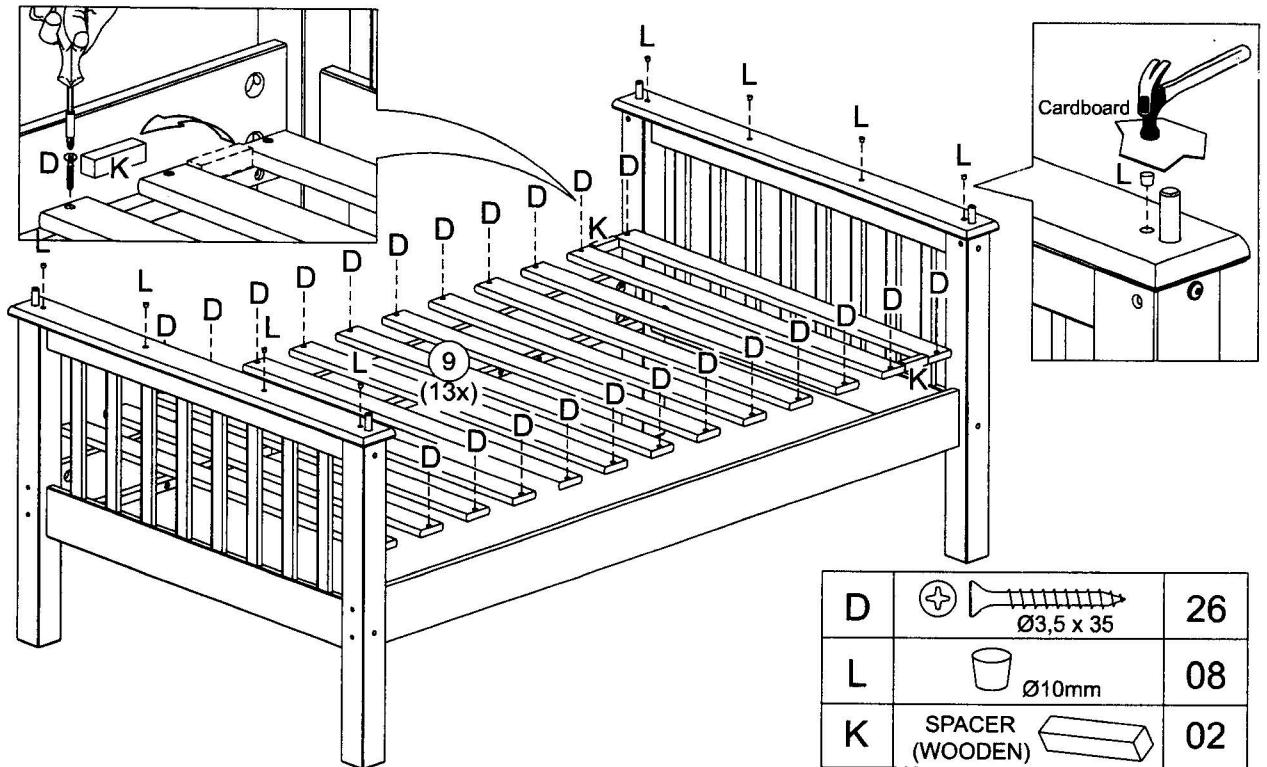

08

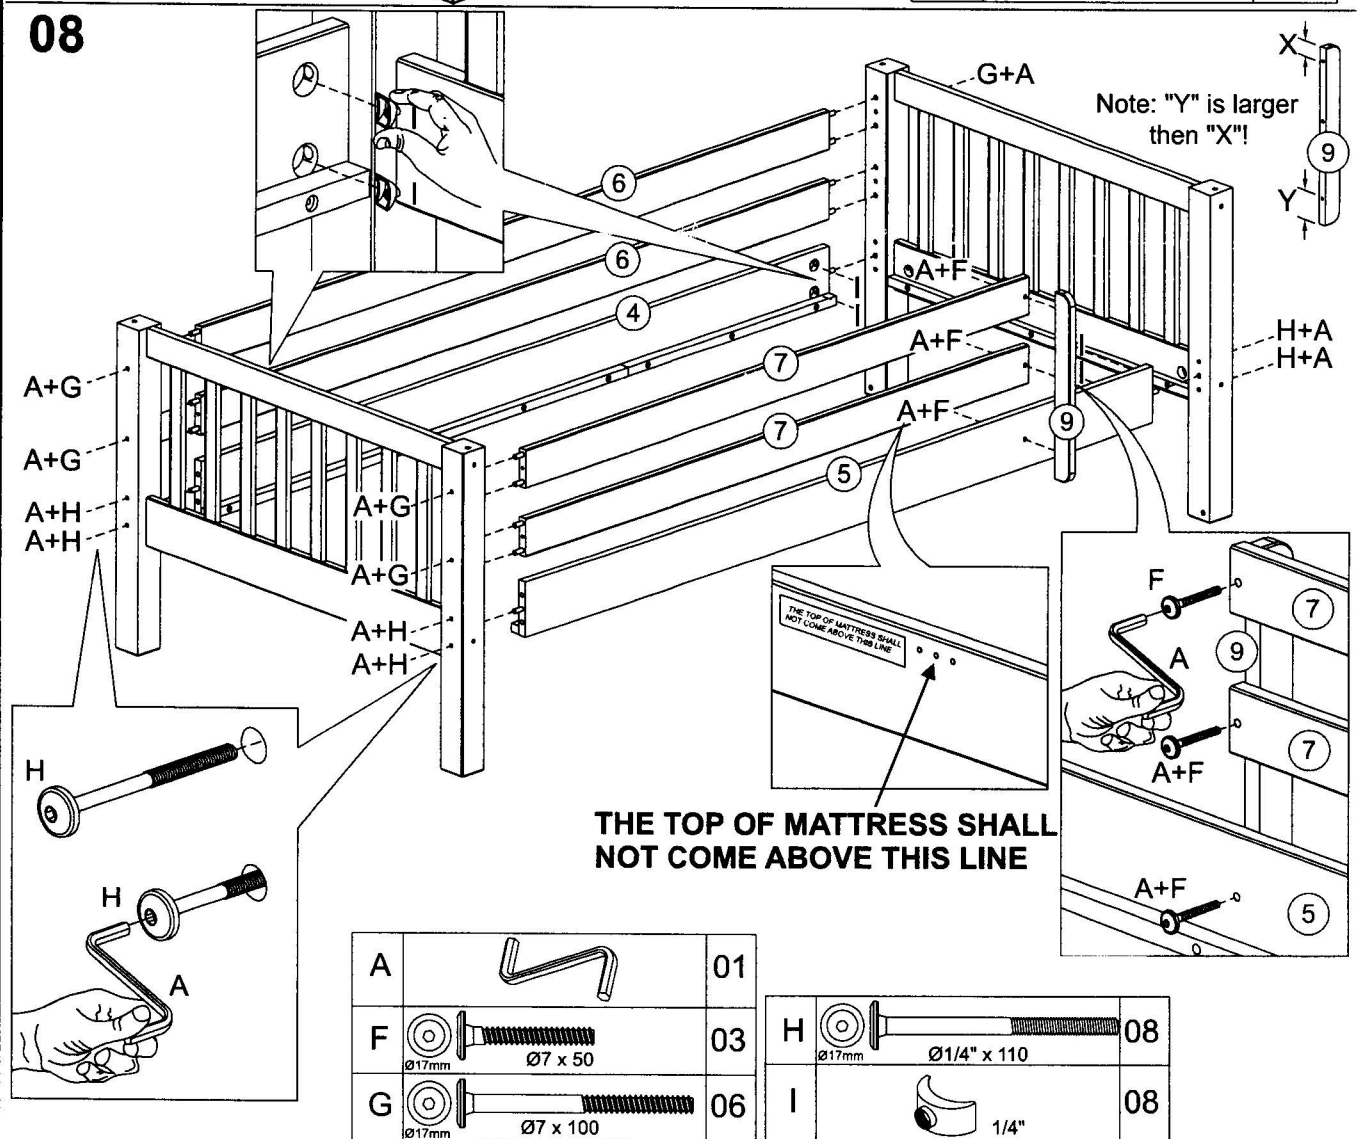

09

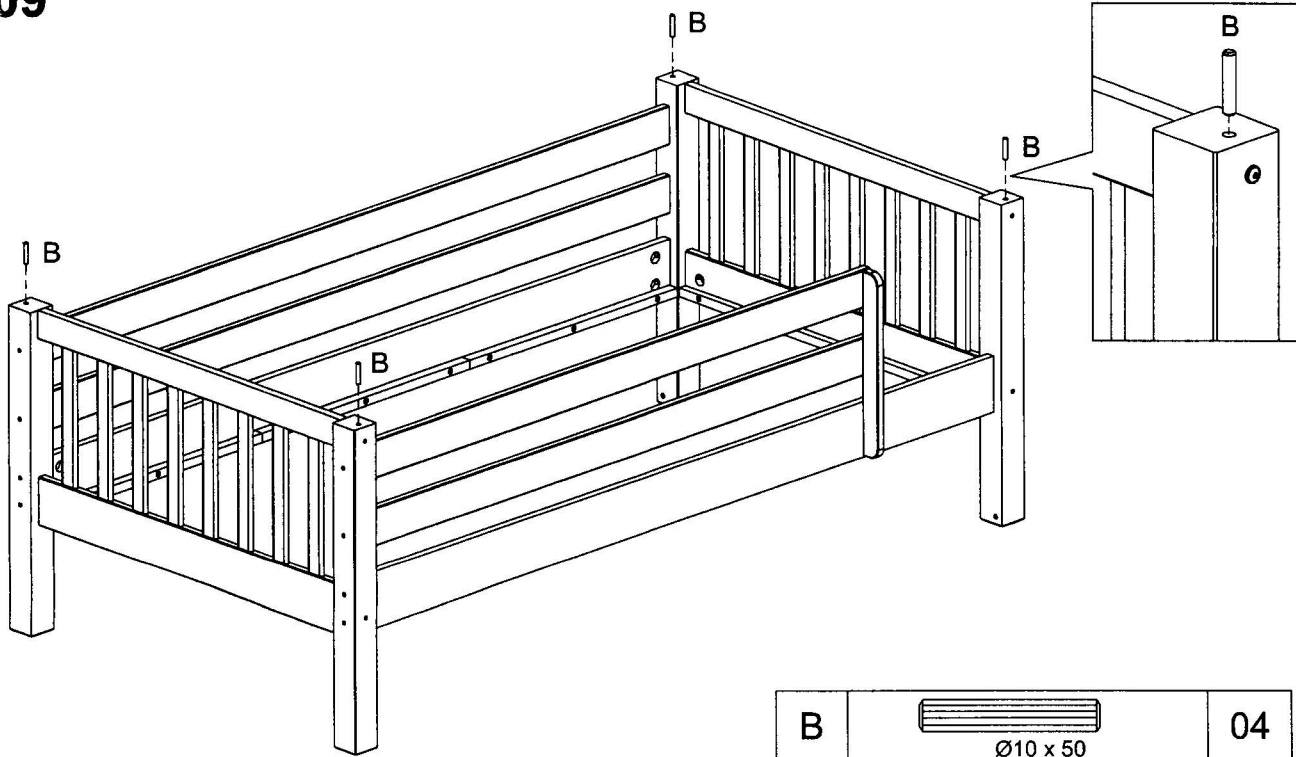

10

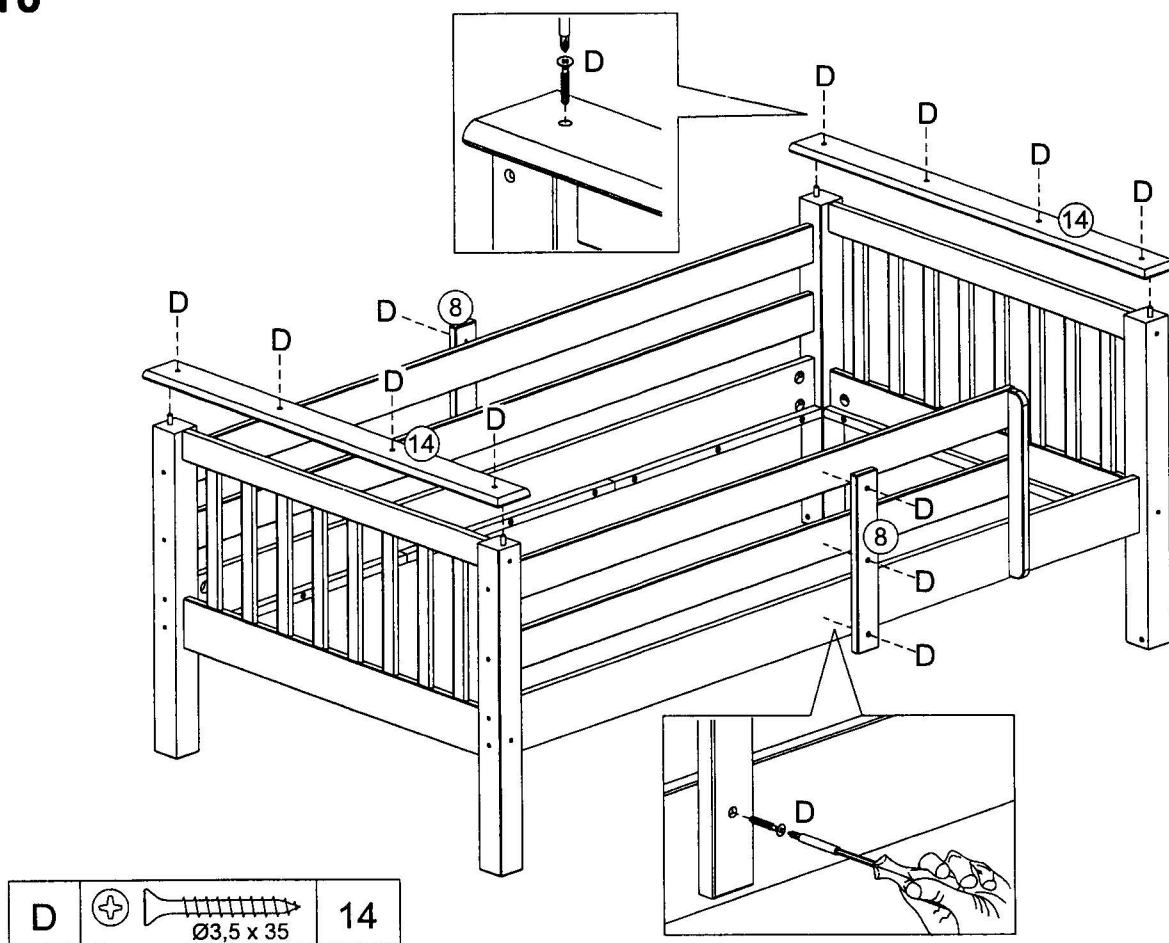


Diagram illustrating the assembly of the bed frame, showing the connection of the headboard and footboard to the side rails using screws (D) and wooden spacers (K). The diagram includes a detailed view of the headboard/footboard attachment and a table of parts.



D	 Ø3,5 x 35	26
L	 Ø10mm	08
K	SPACER (WOODEN) 	02

Diagram illustrating the assembly of a wooden bunk bed. The main view shows the upper frame being attached to the lower frame using screws labeled 'D'. An inset shows a close-up of the screw being driven into the wood. A legend at the bottom identifies the screw as Ø3,5 x 35.

D		Ø3,5 x 35	08
---	--	-----------	----

13

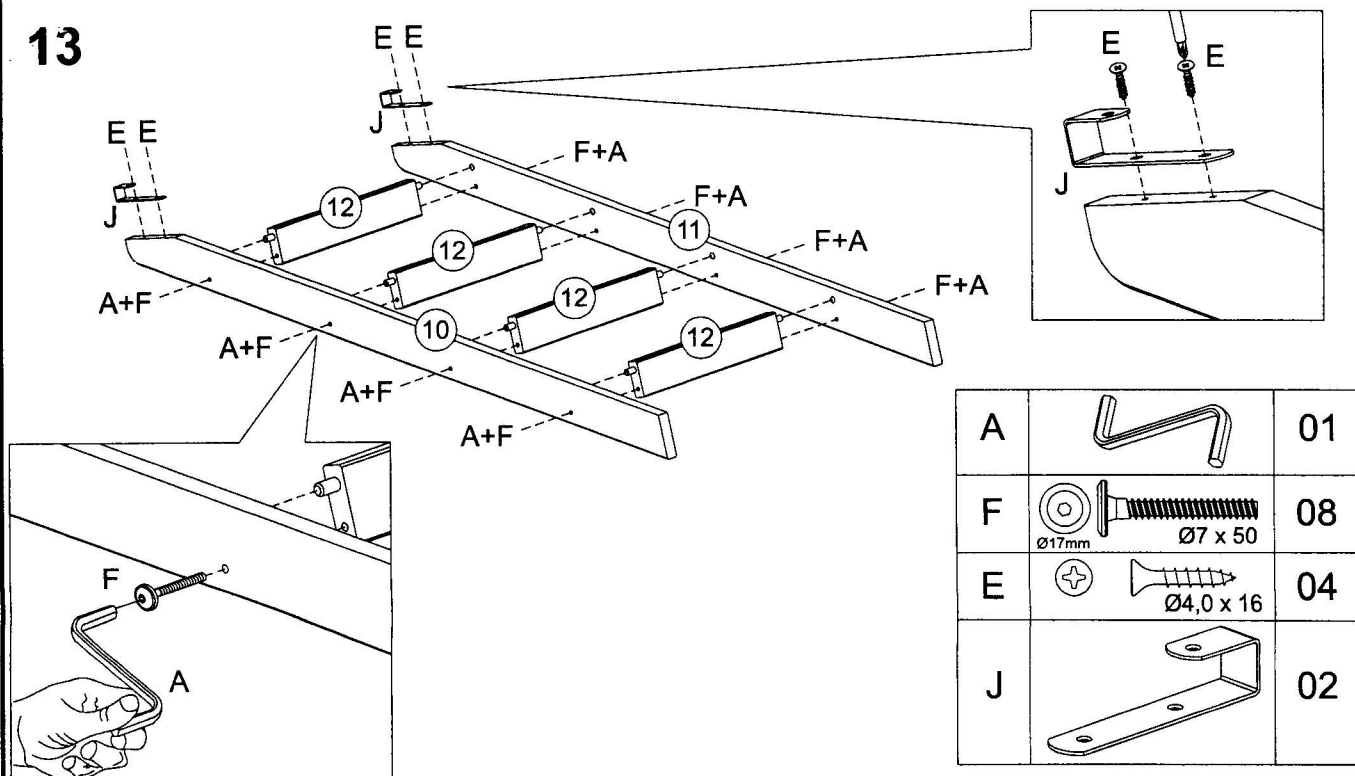

14

