

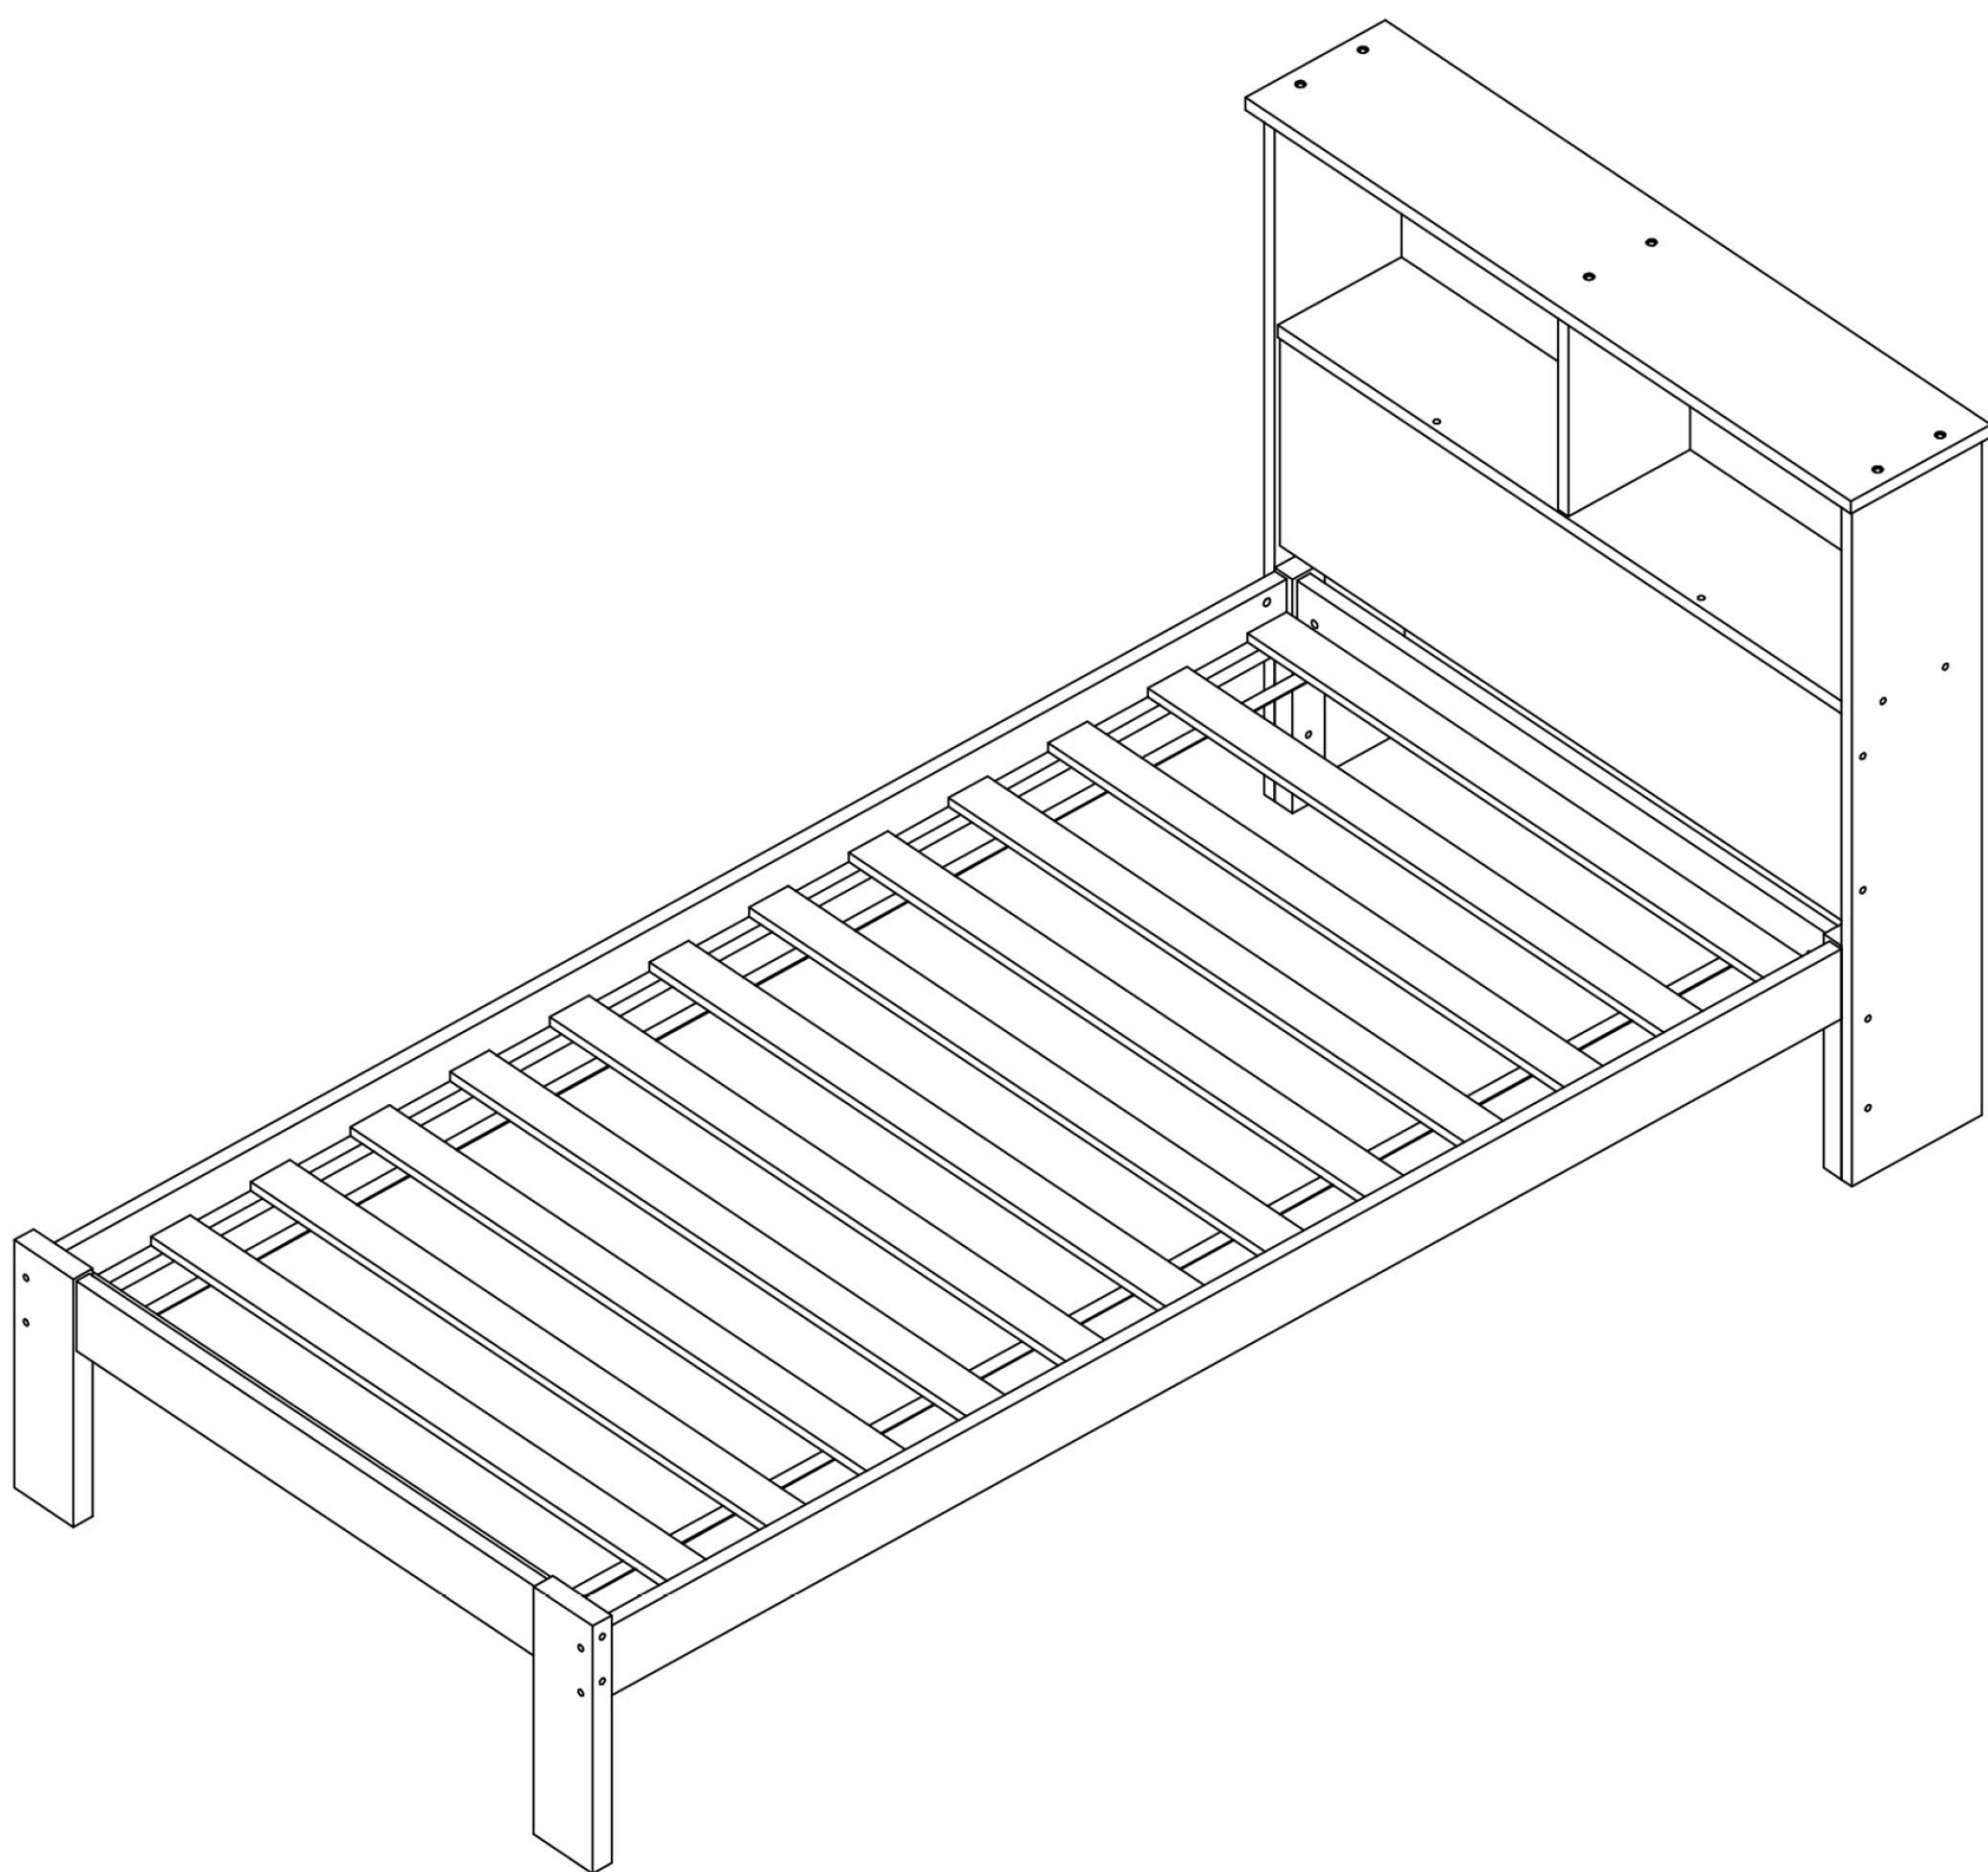
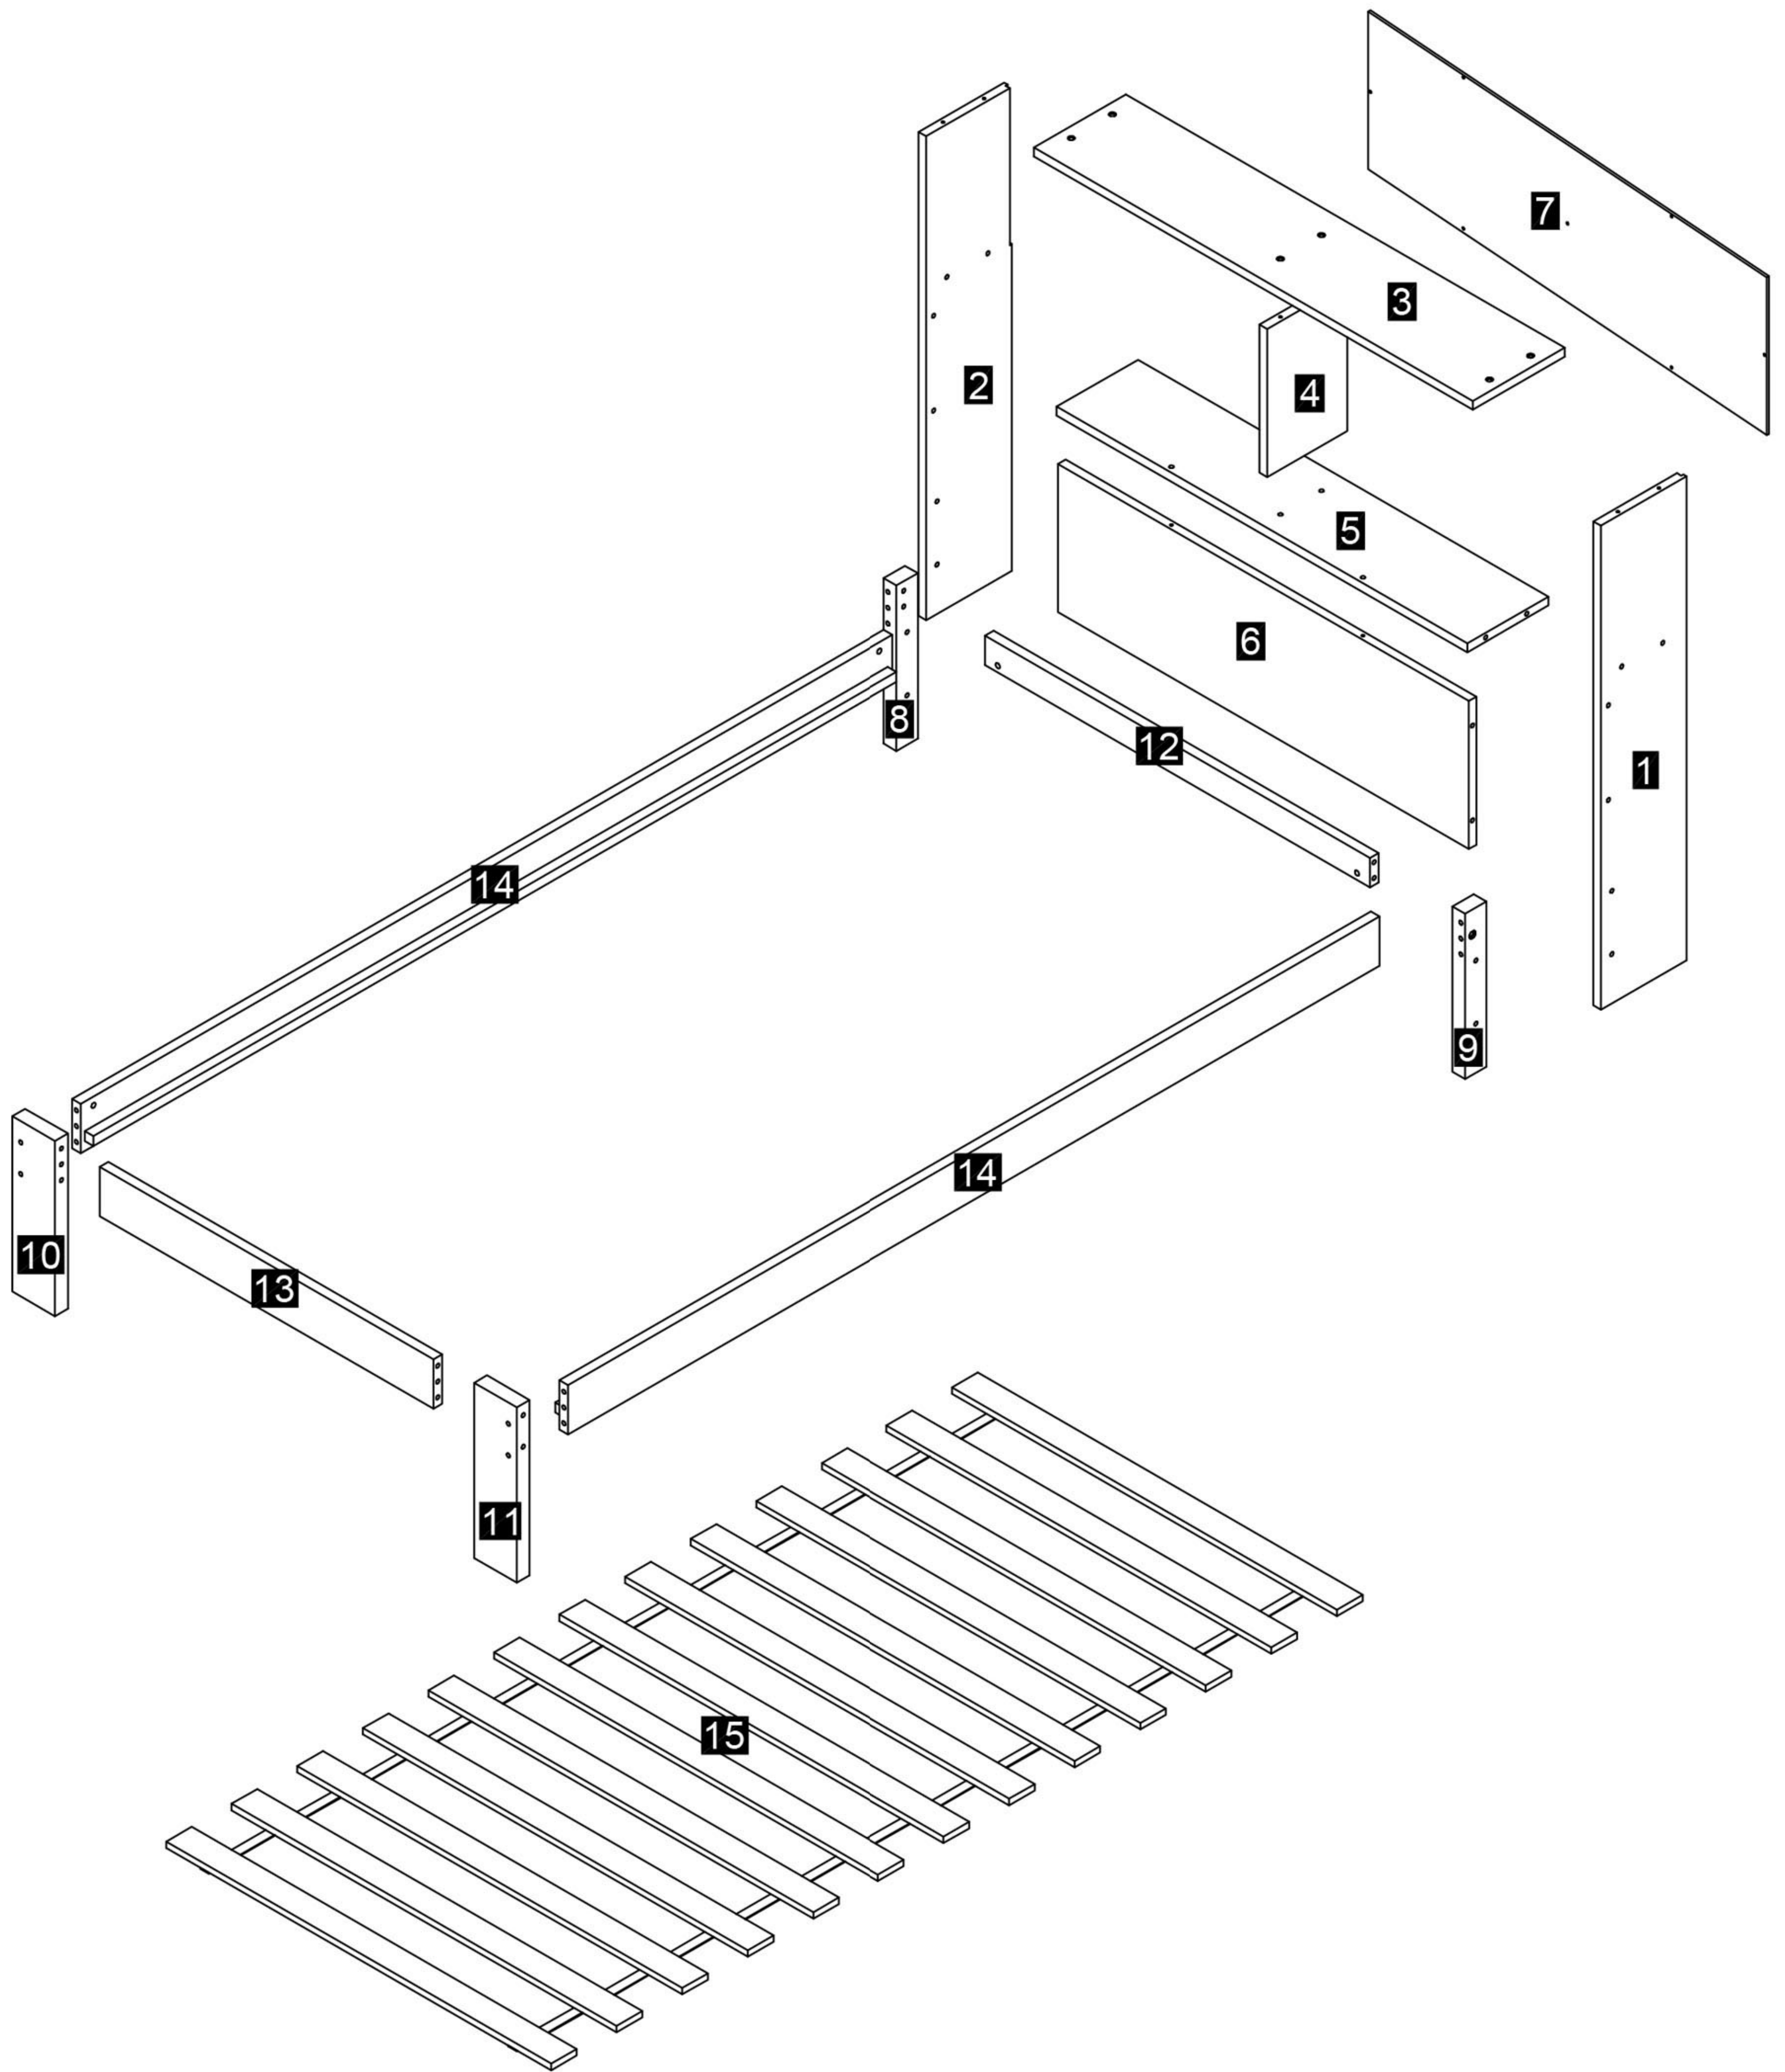
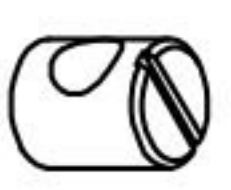





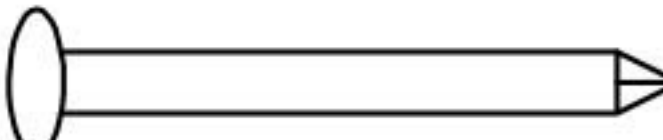

A		Ø7x70	10
B		M6x50	8
C			22
D		4x30	26
E		Ø8x30	8
F		M6x70	6


G		M6x140	4
H		M6x90	4
I		M6x35	4
J		M6x20	4
K			28
L		4mm	1
M			12

STEP 1

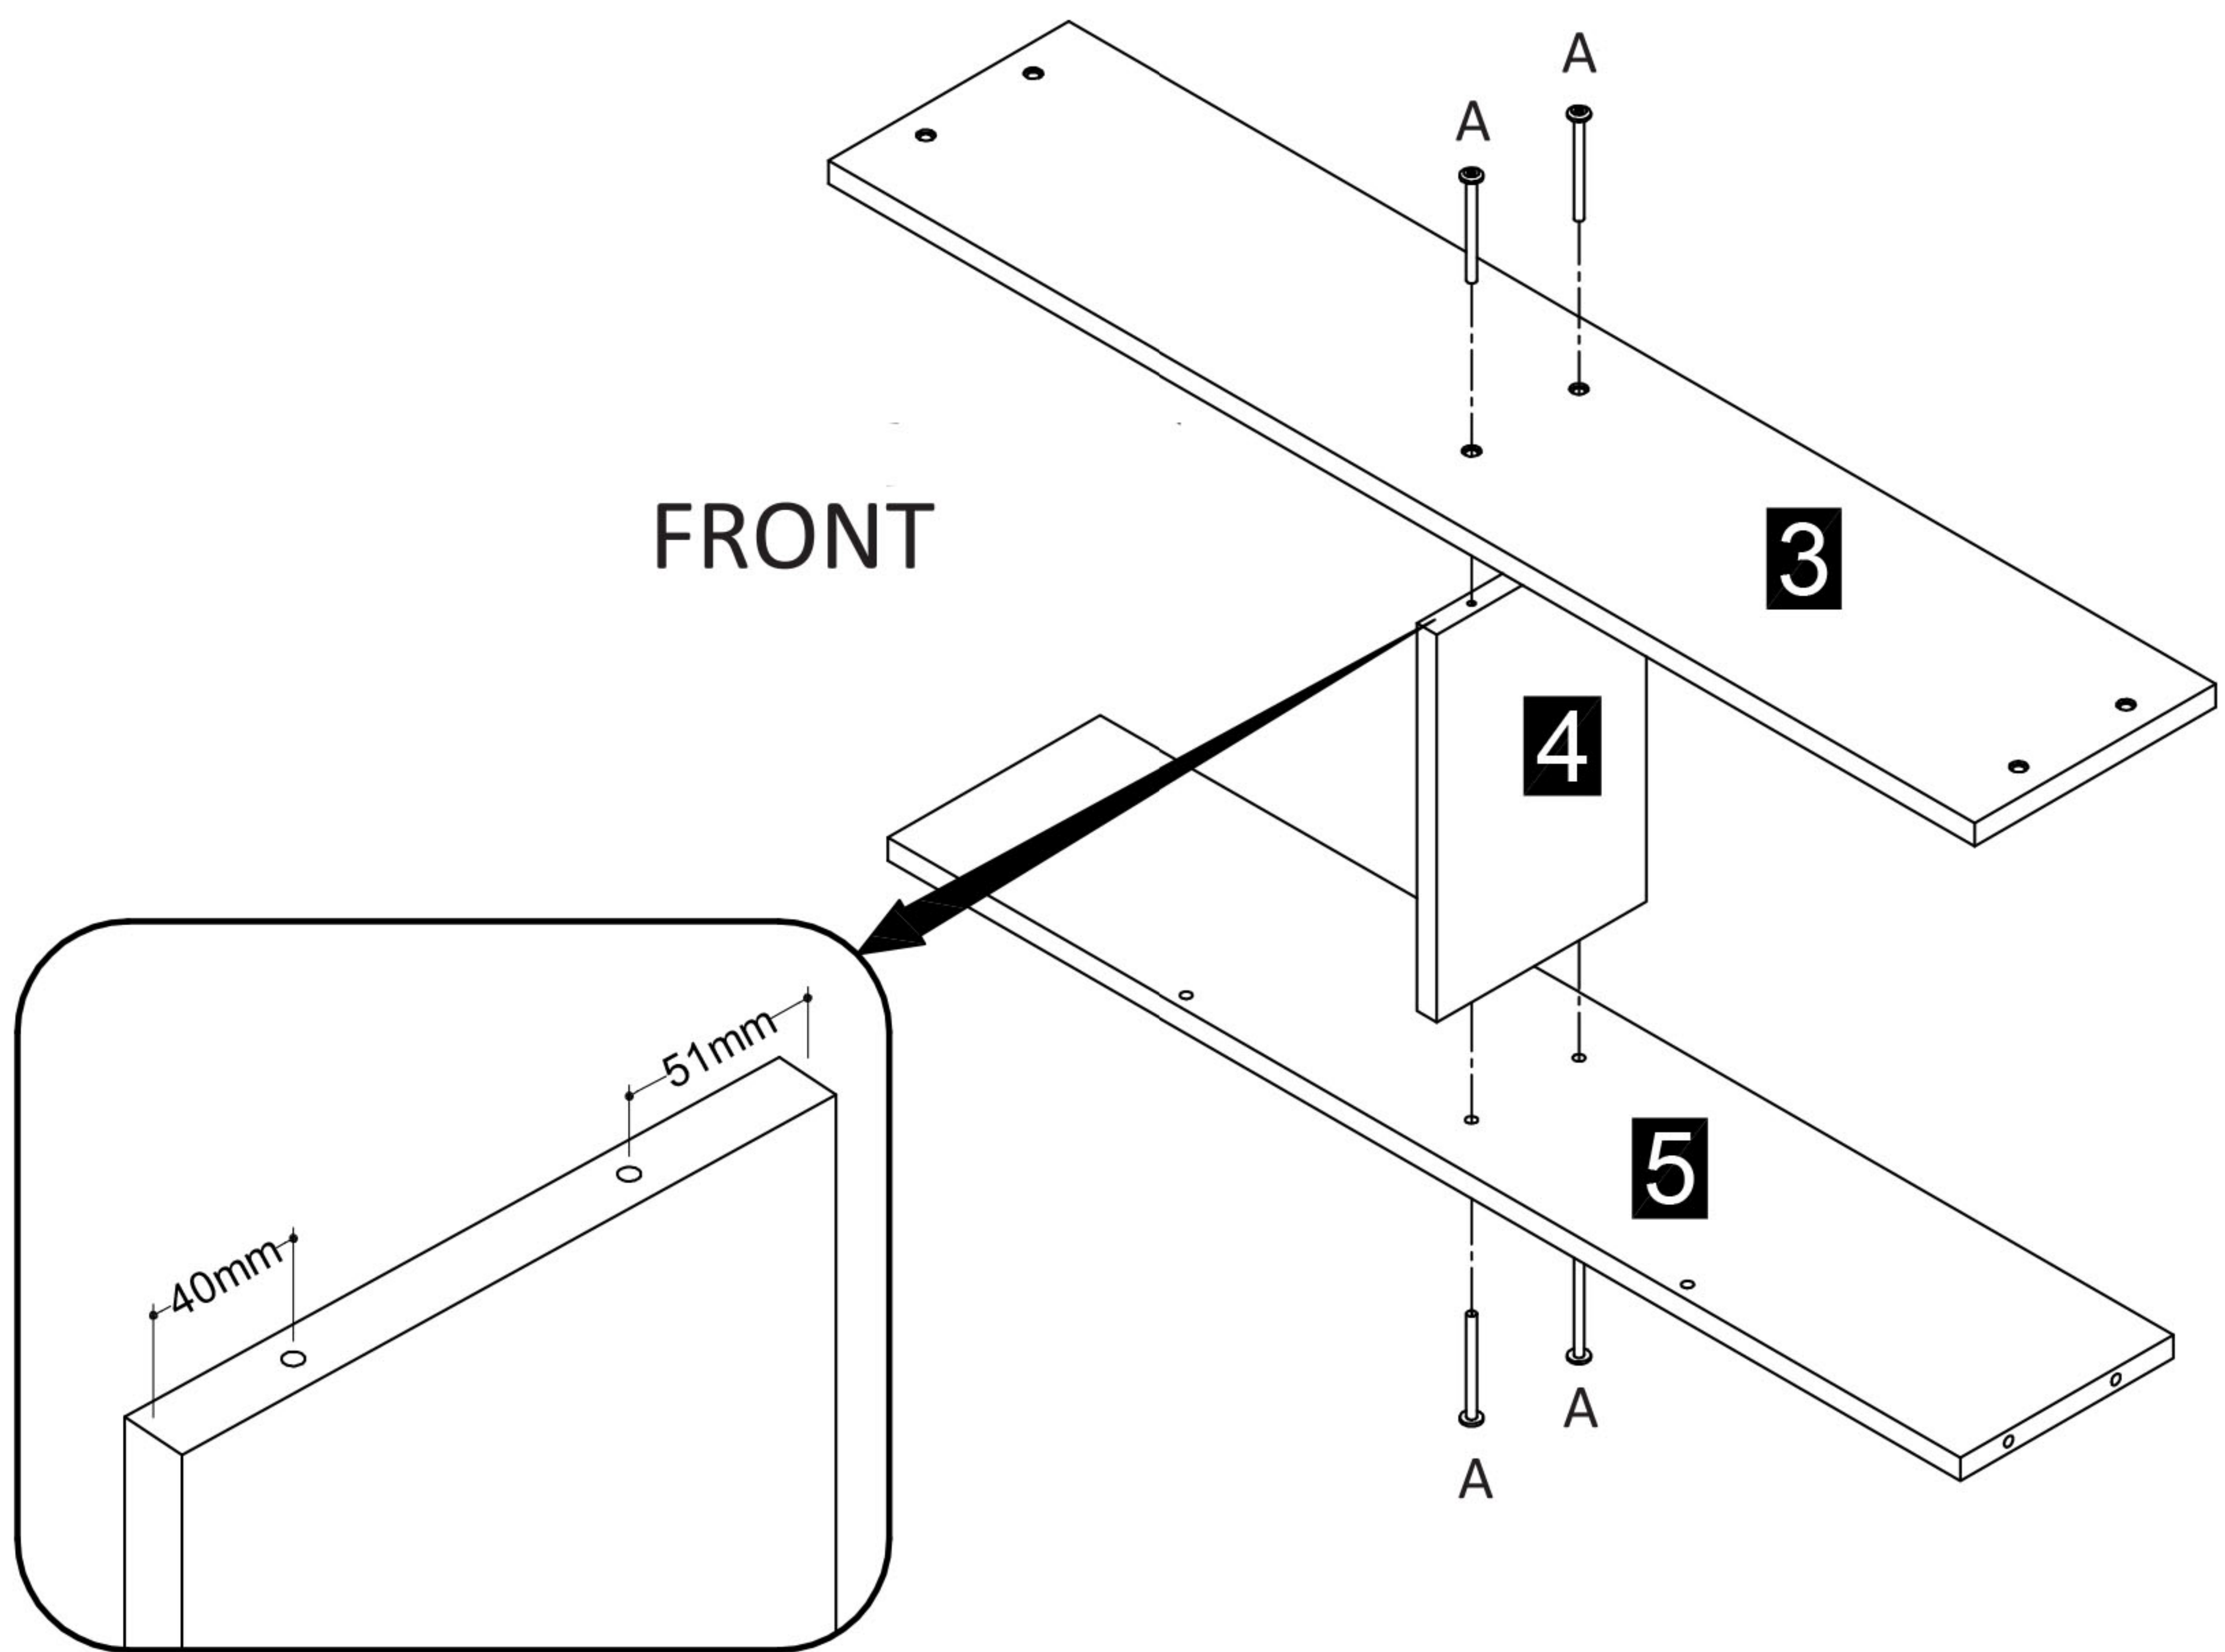



A		Ø7x70	4
---	---	-------	---


STEP 2

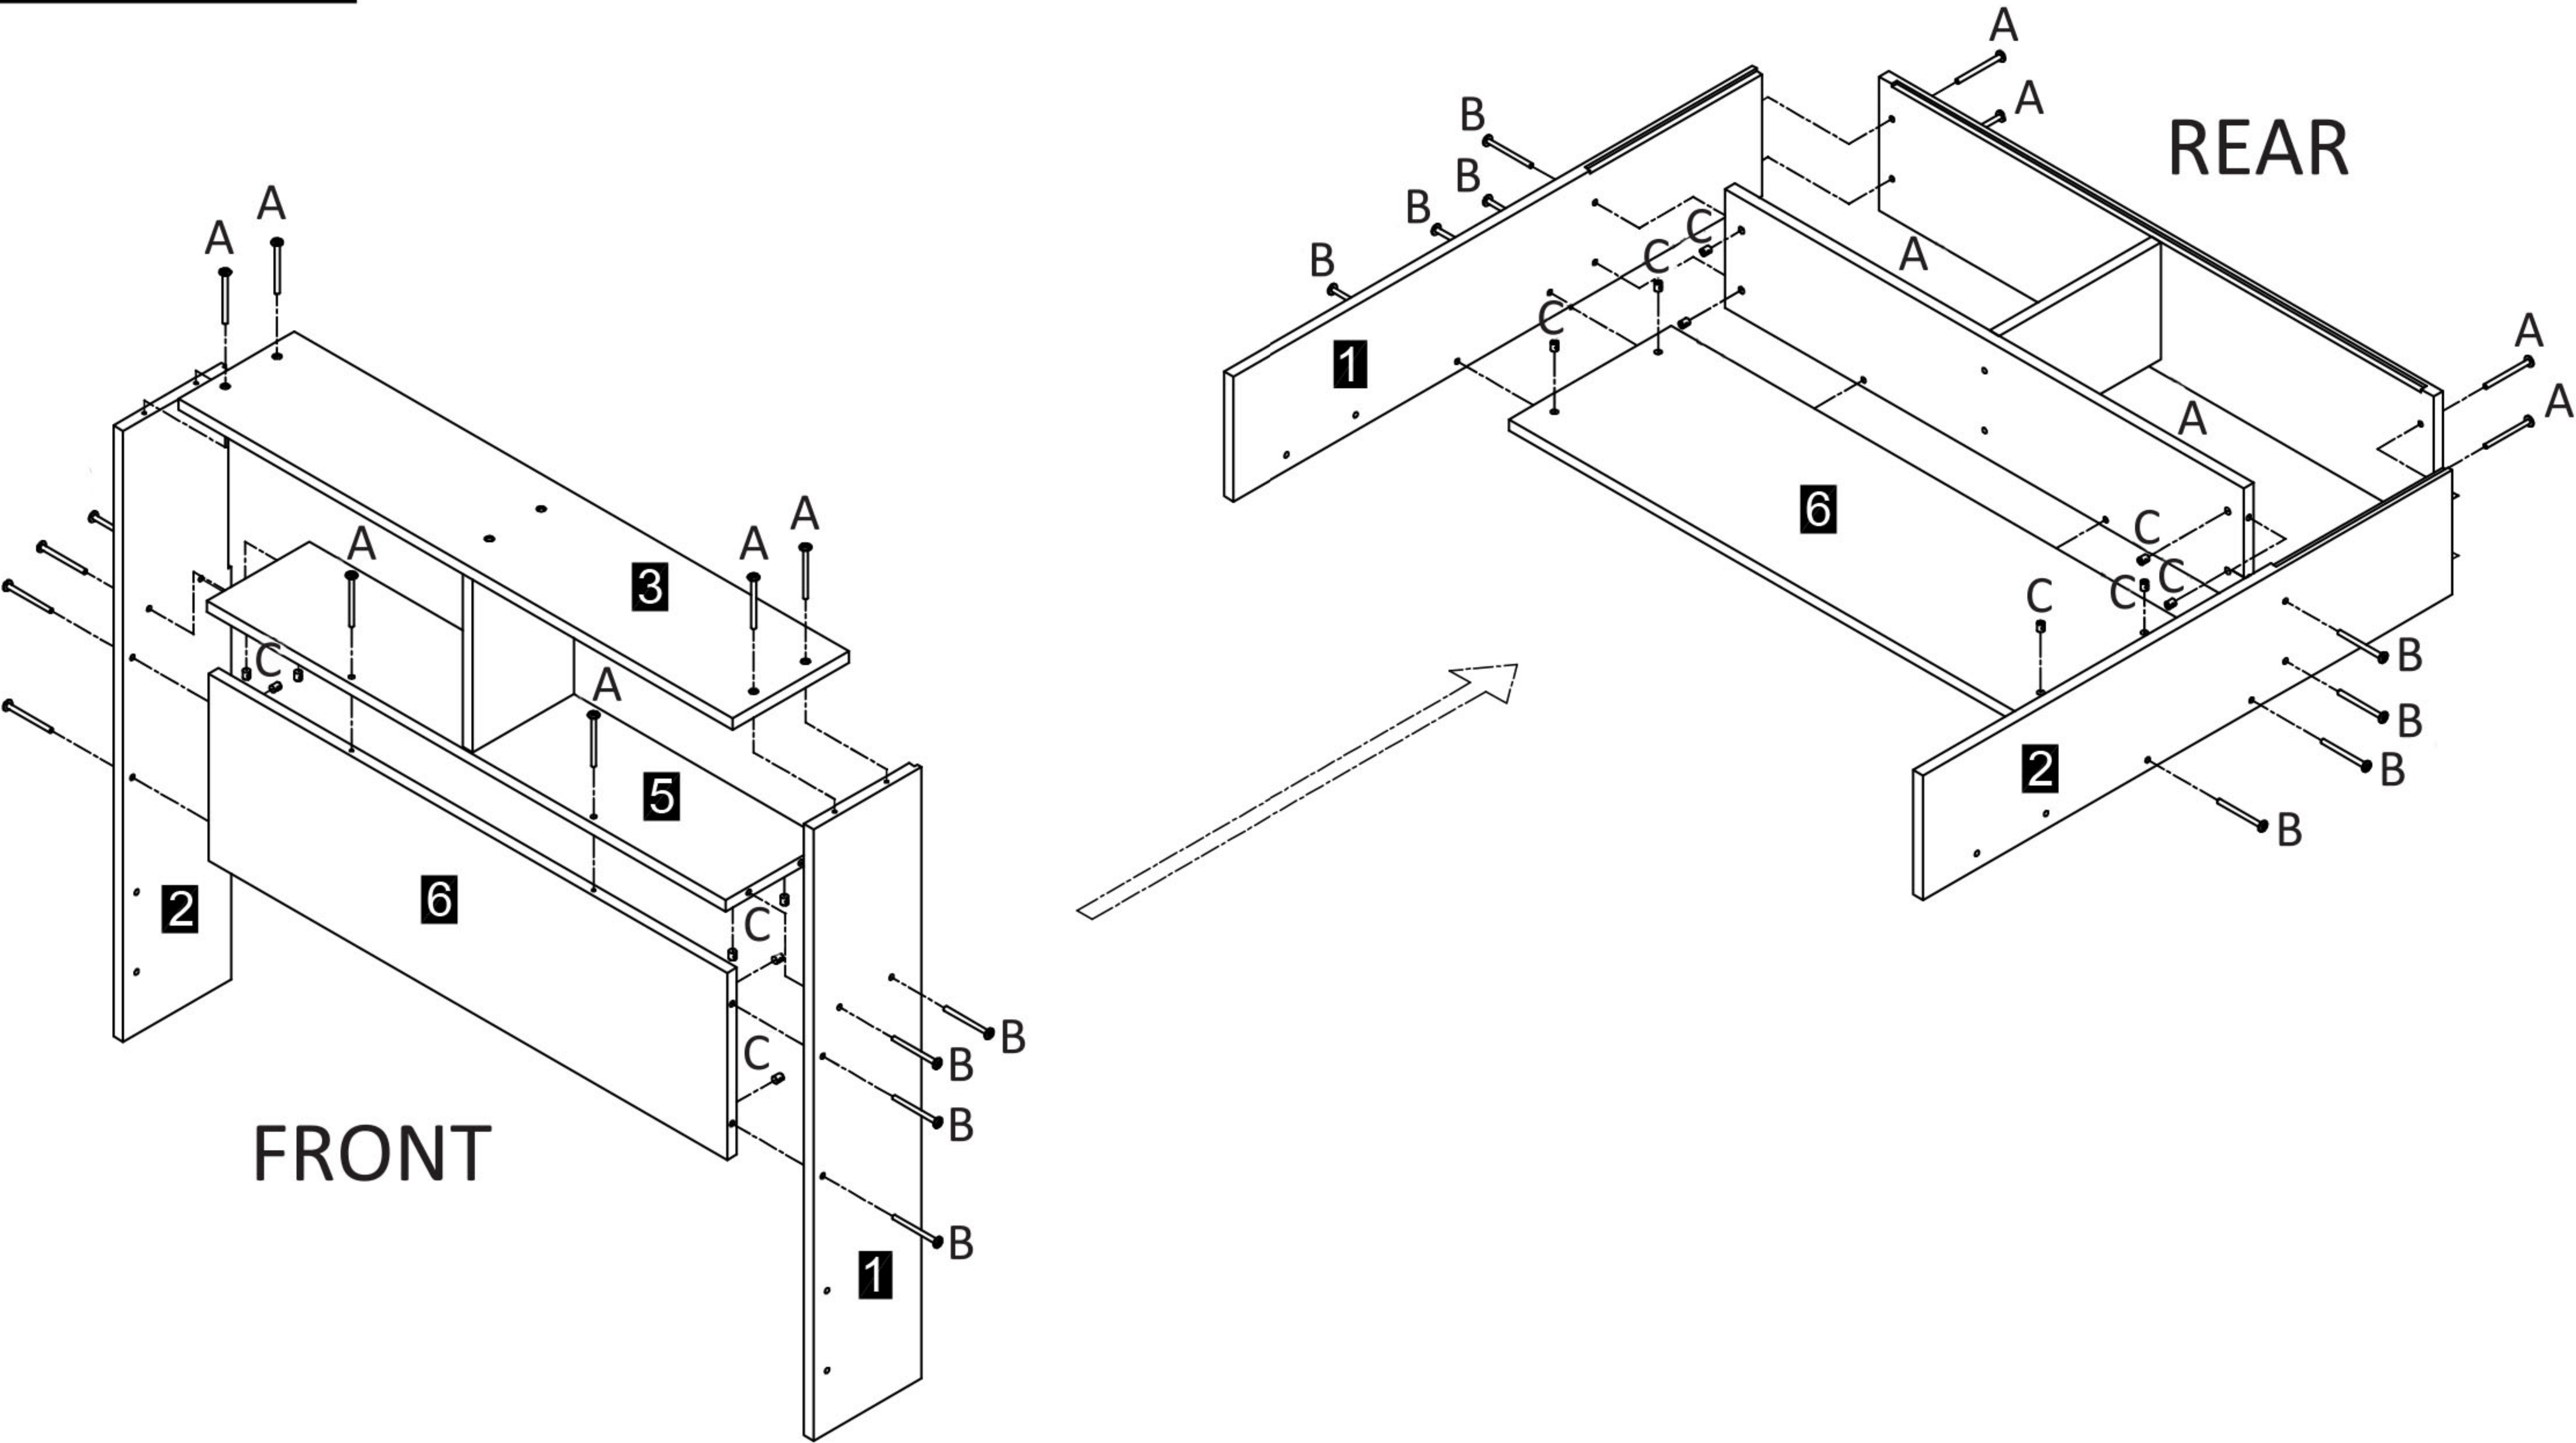


A		Ø7x70	6
B		M6x50	8
C			8

STEP 3

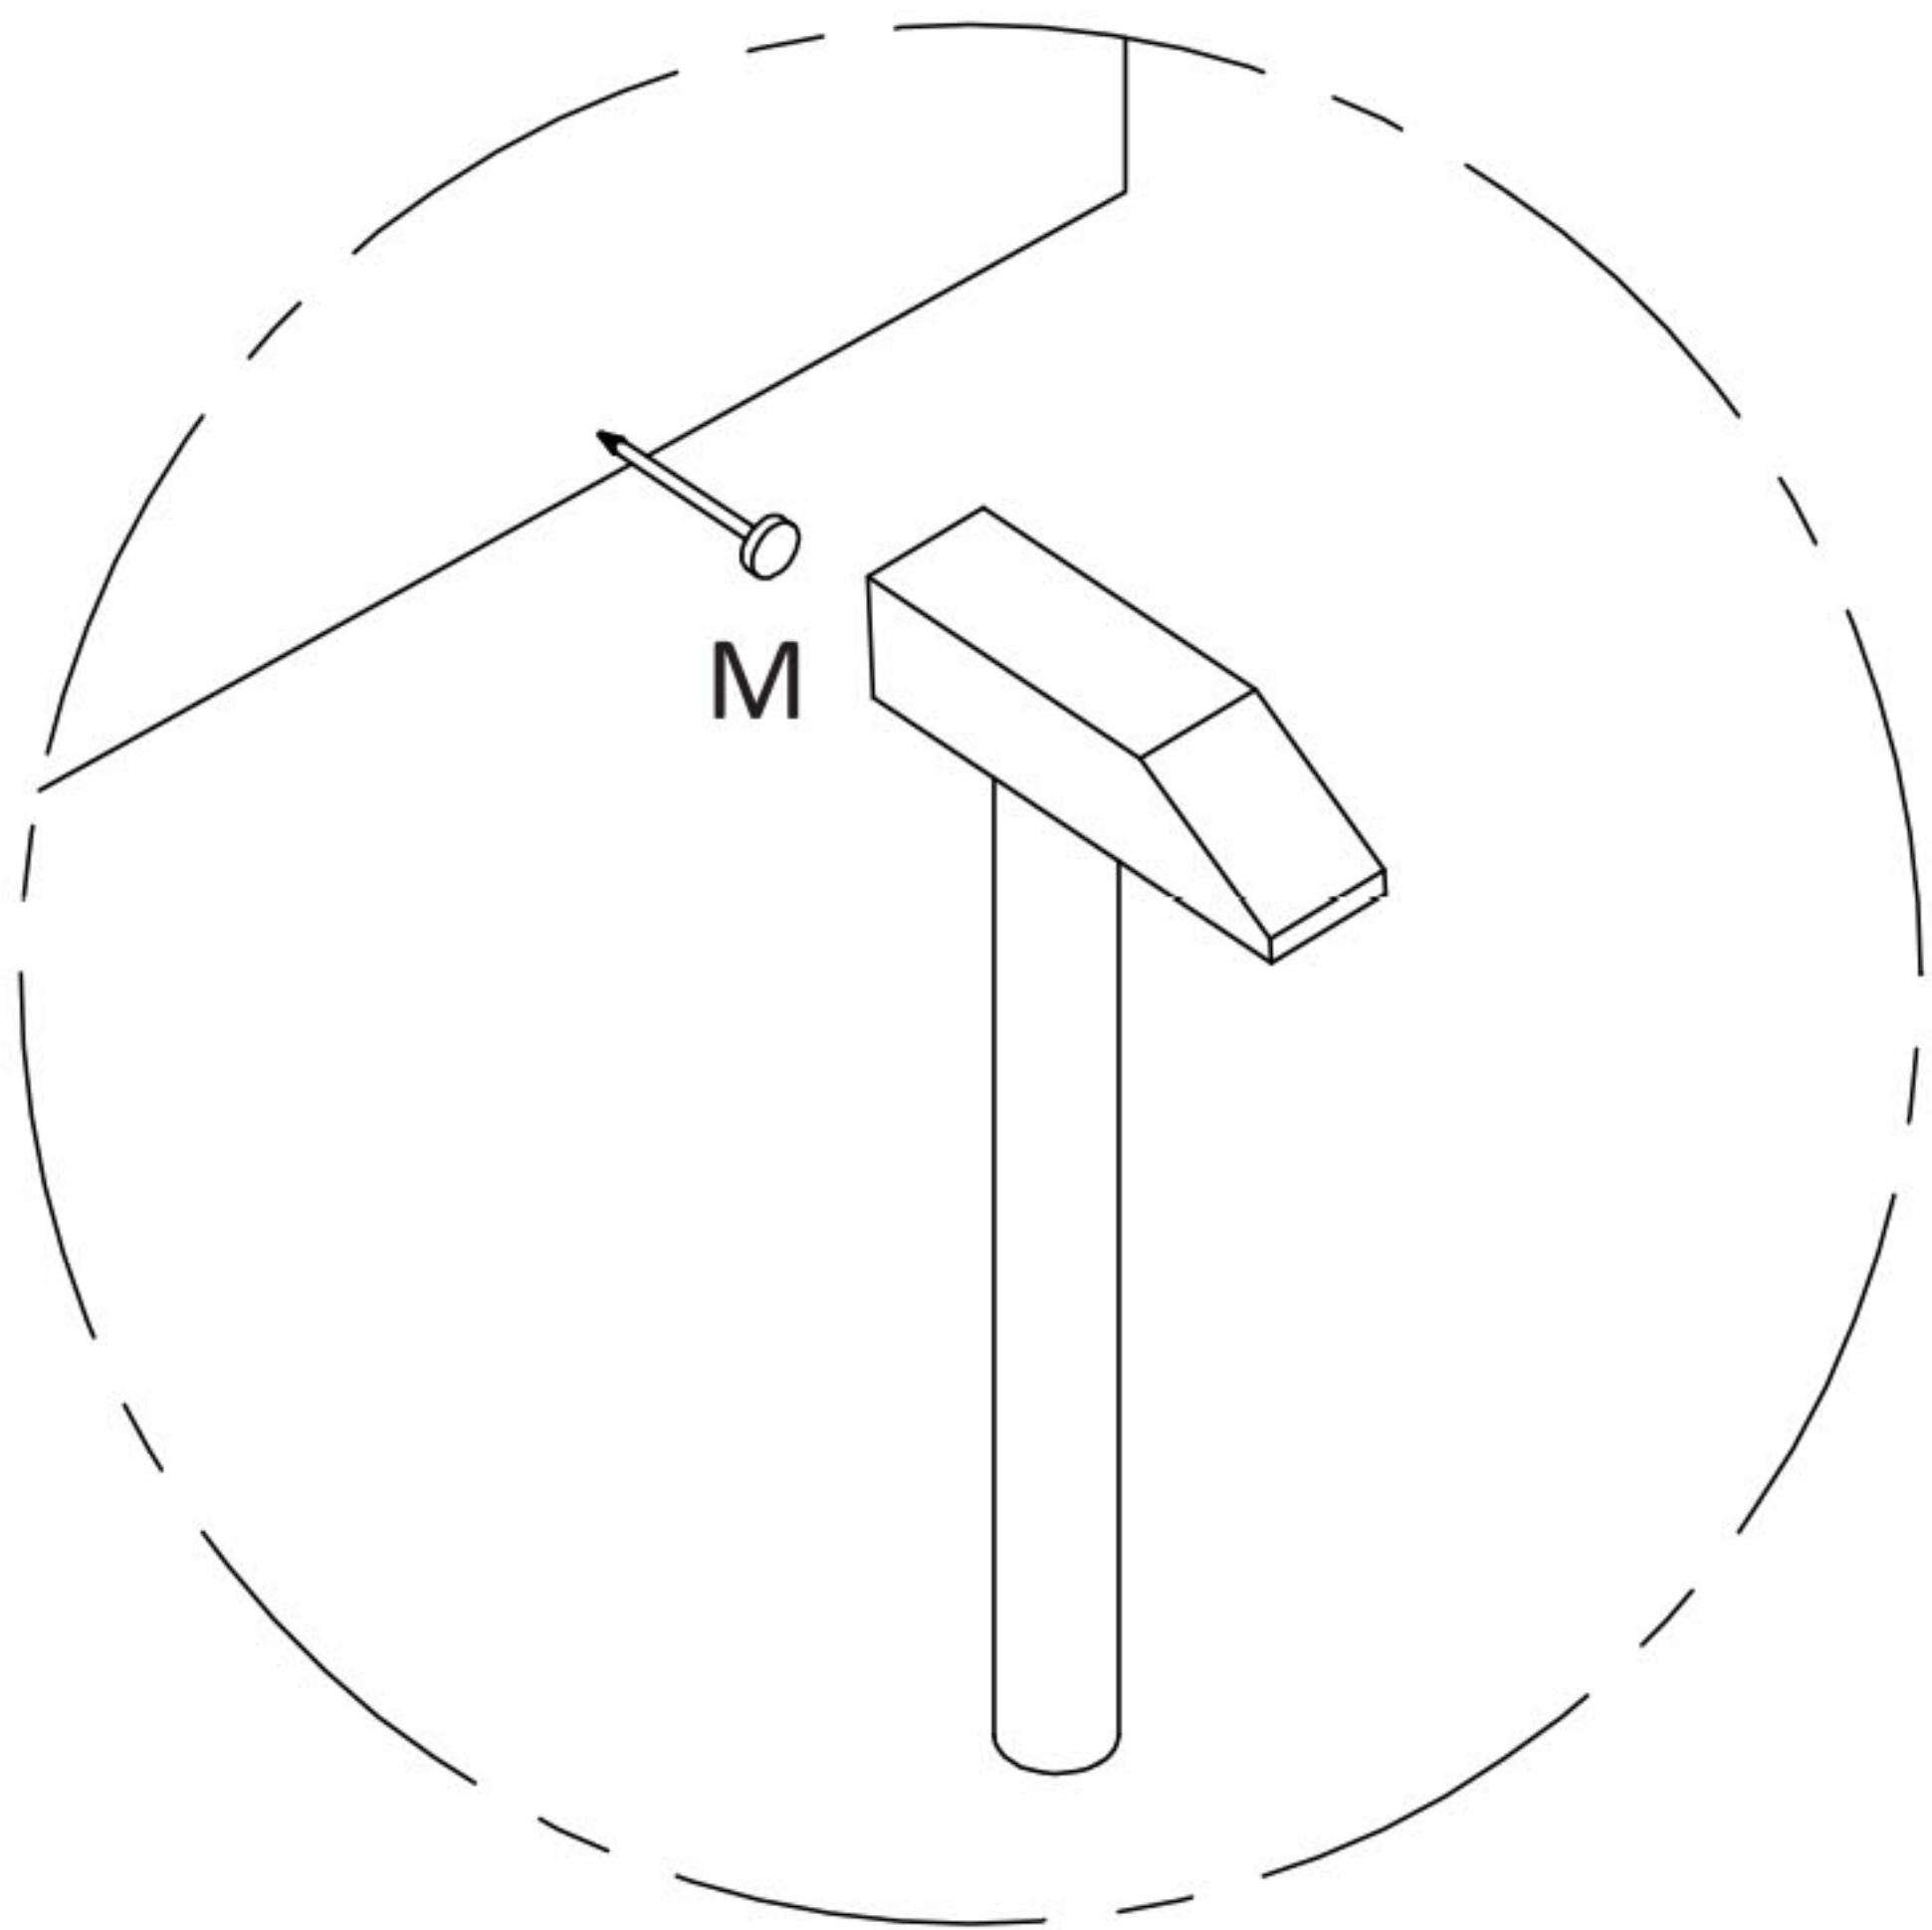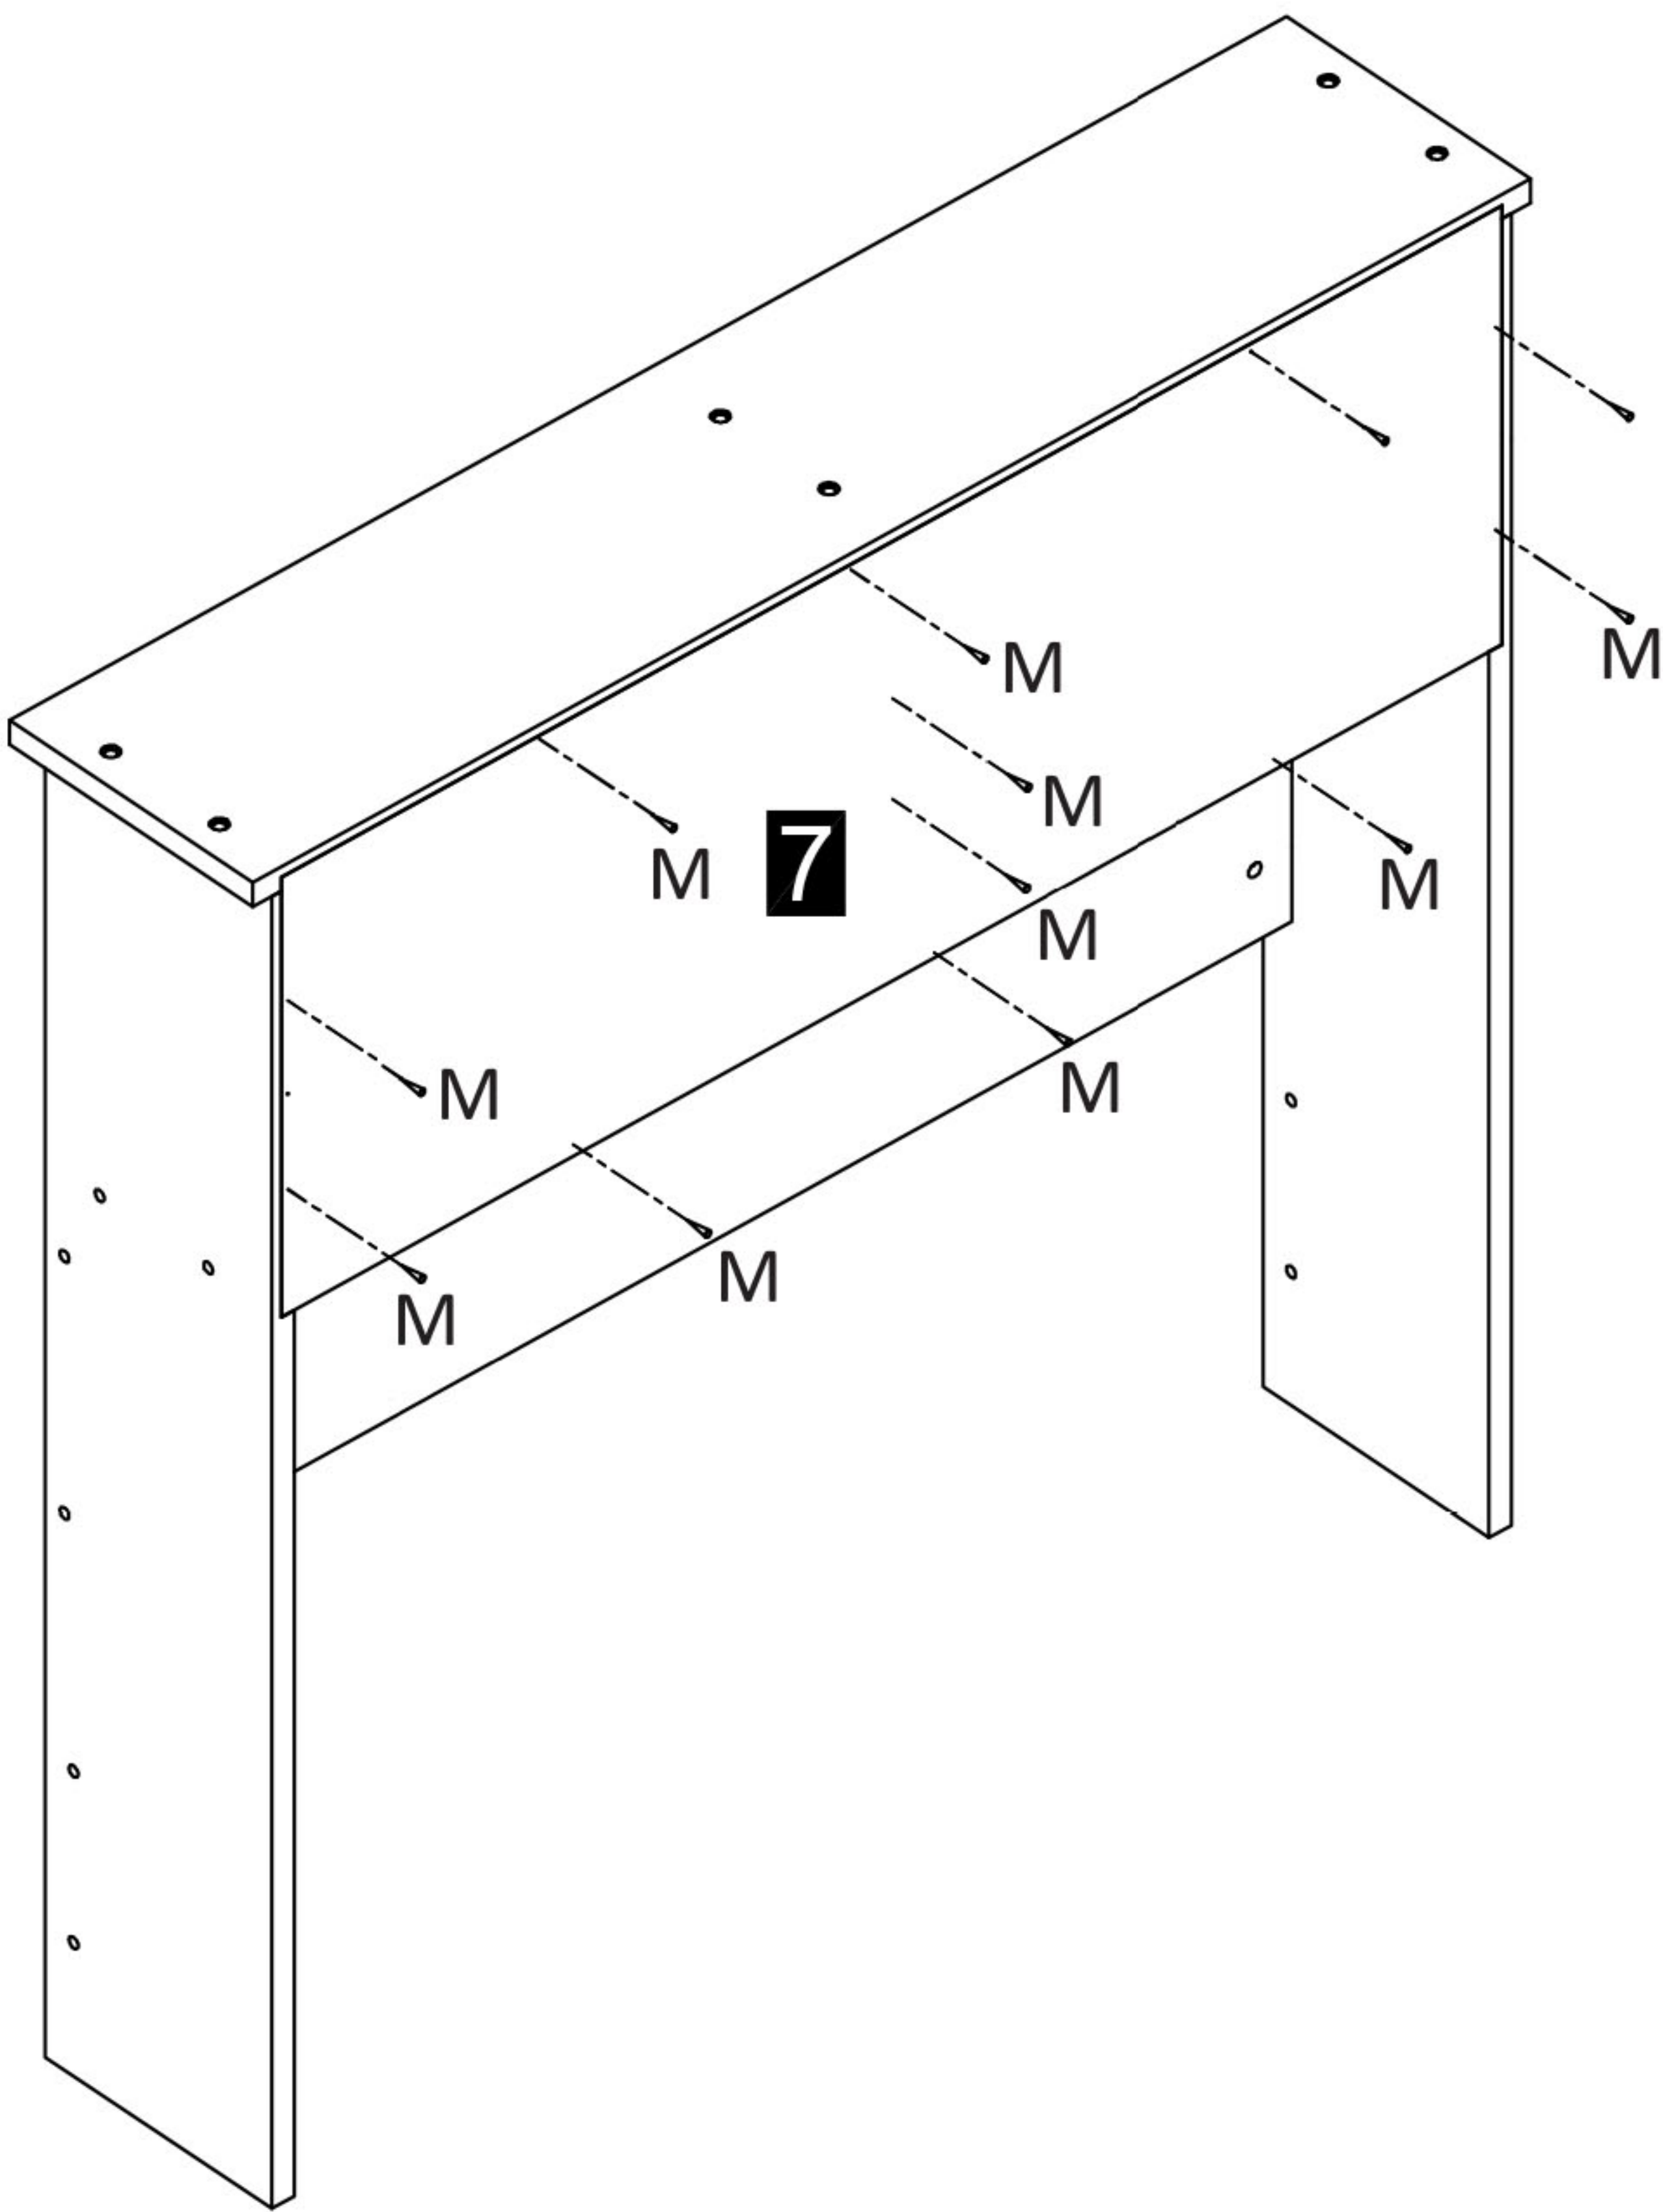

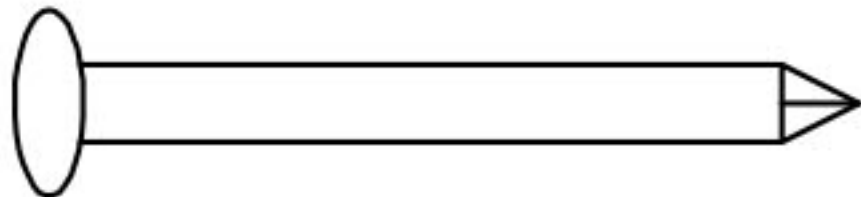
M		12
---	---	----


STEP 4

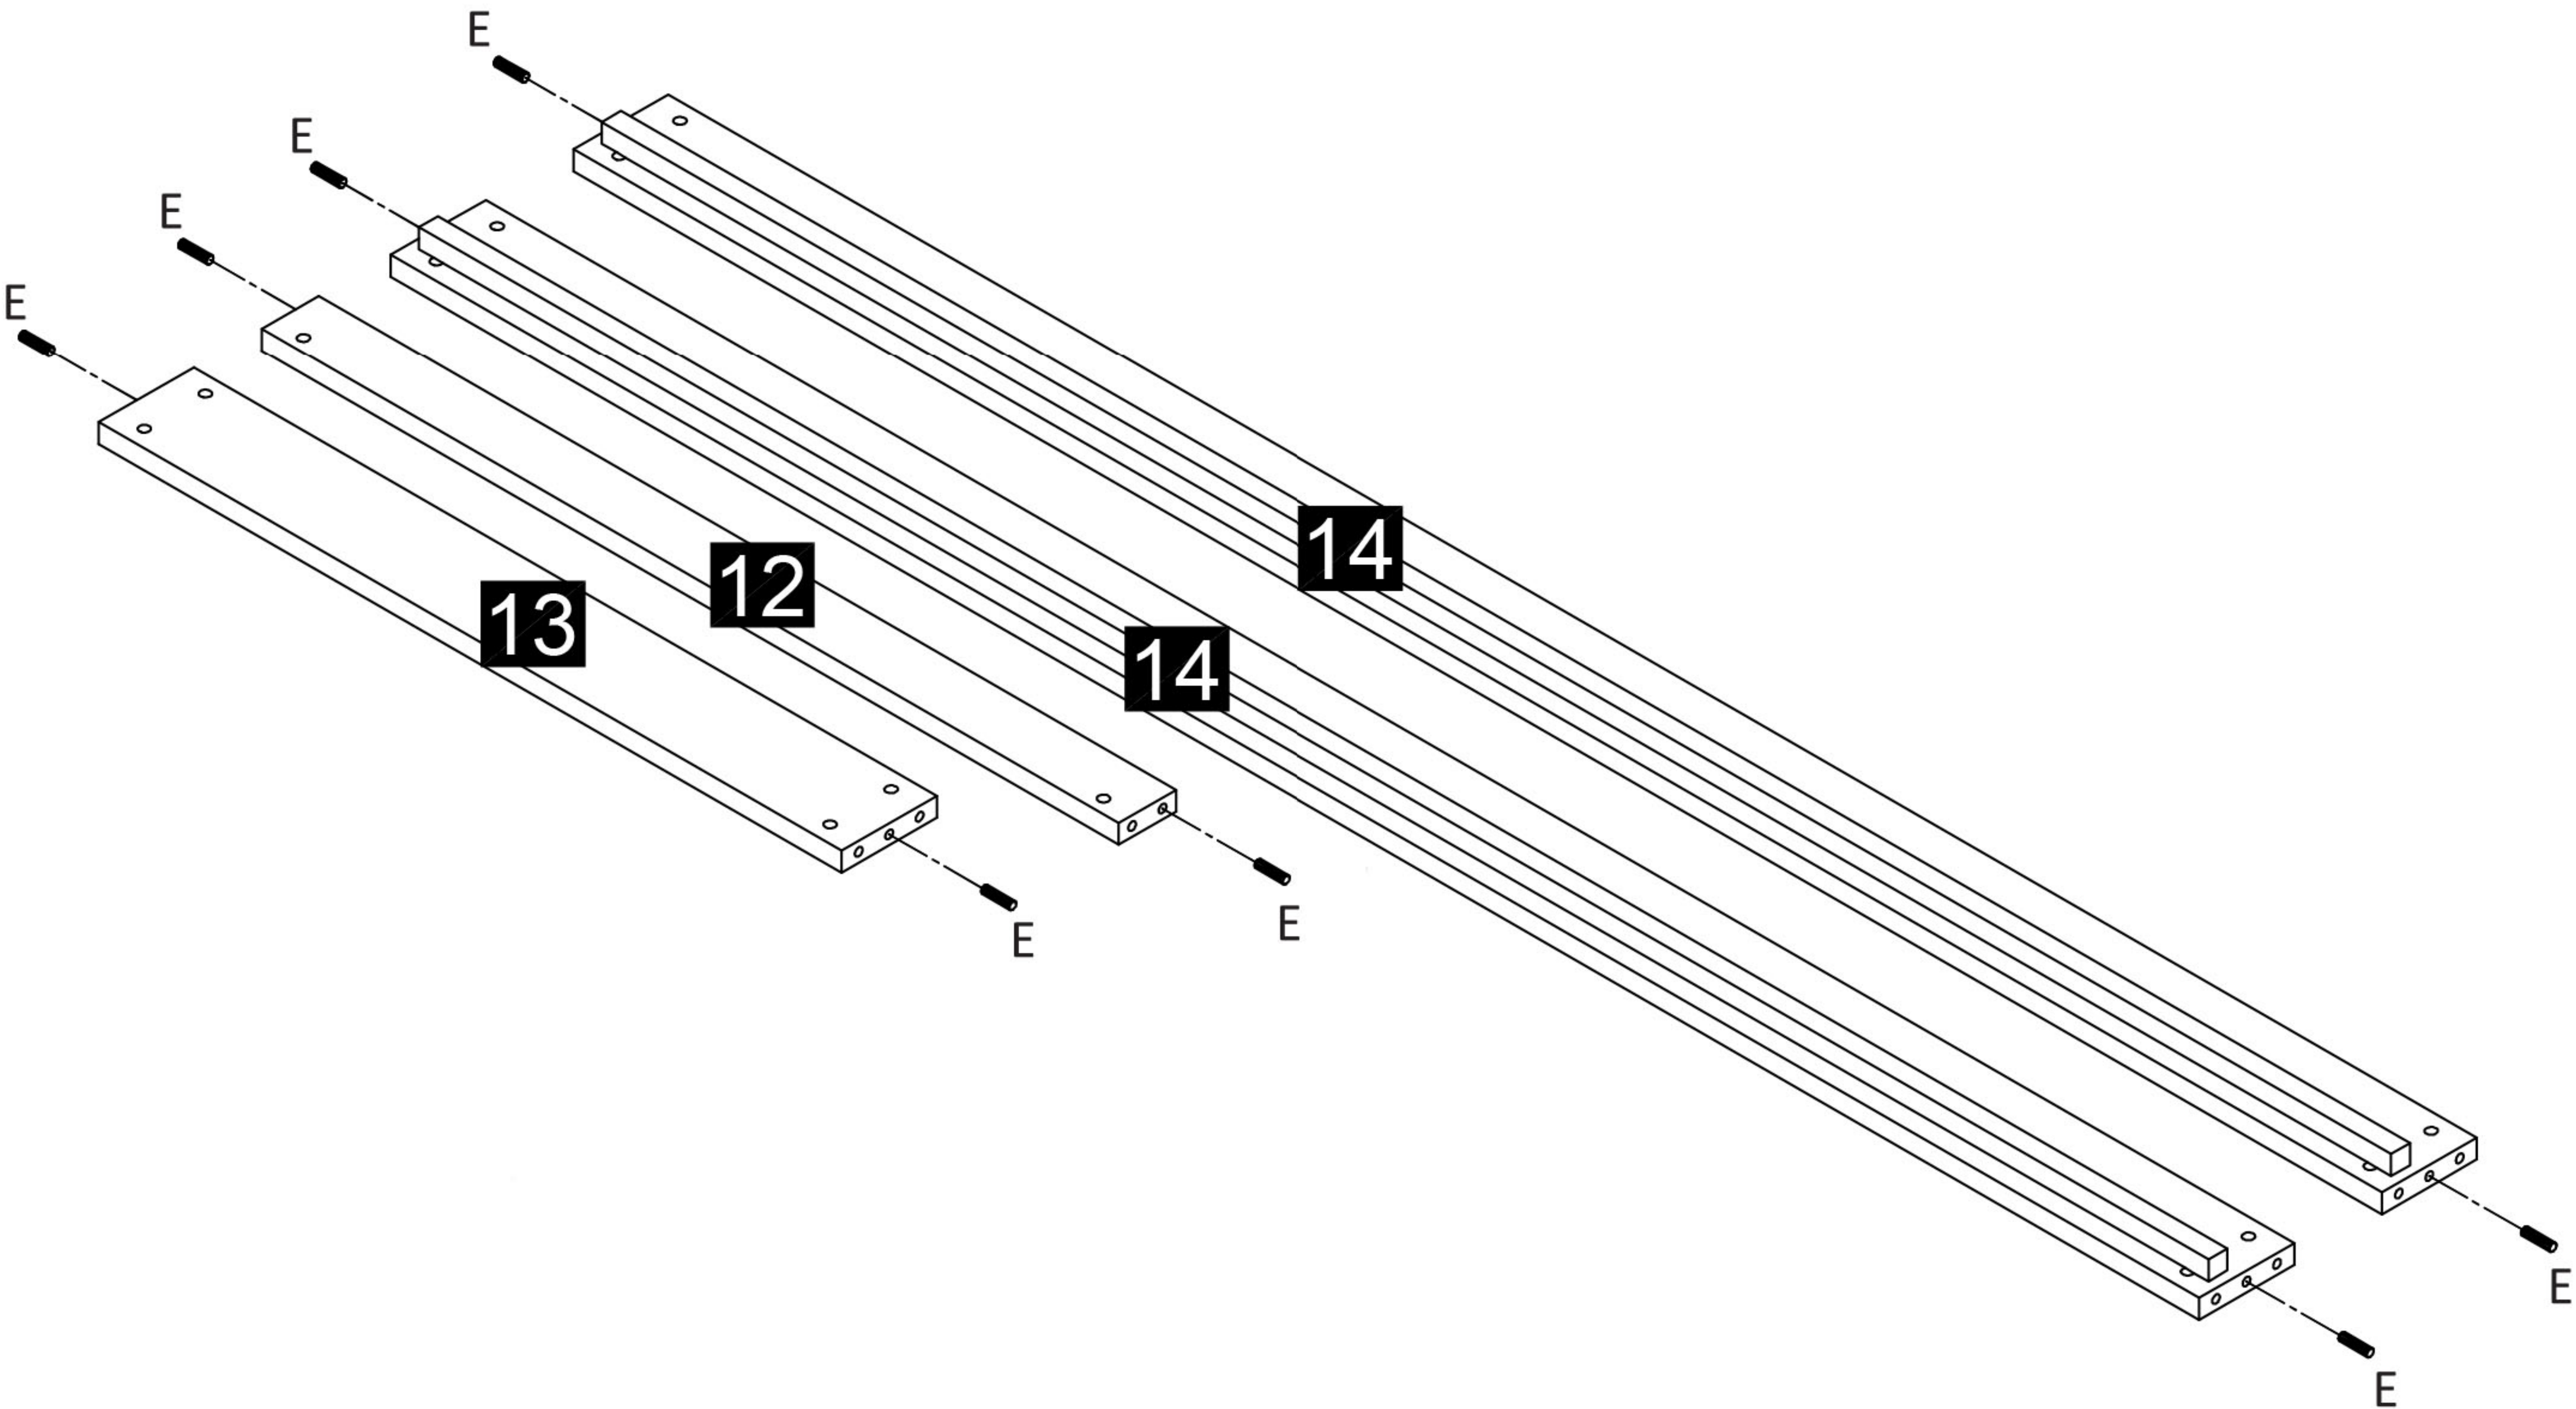


E		Ø8x30	8
---	---	-------	---



STEP 5

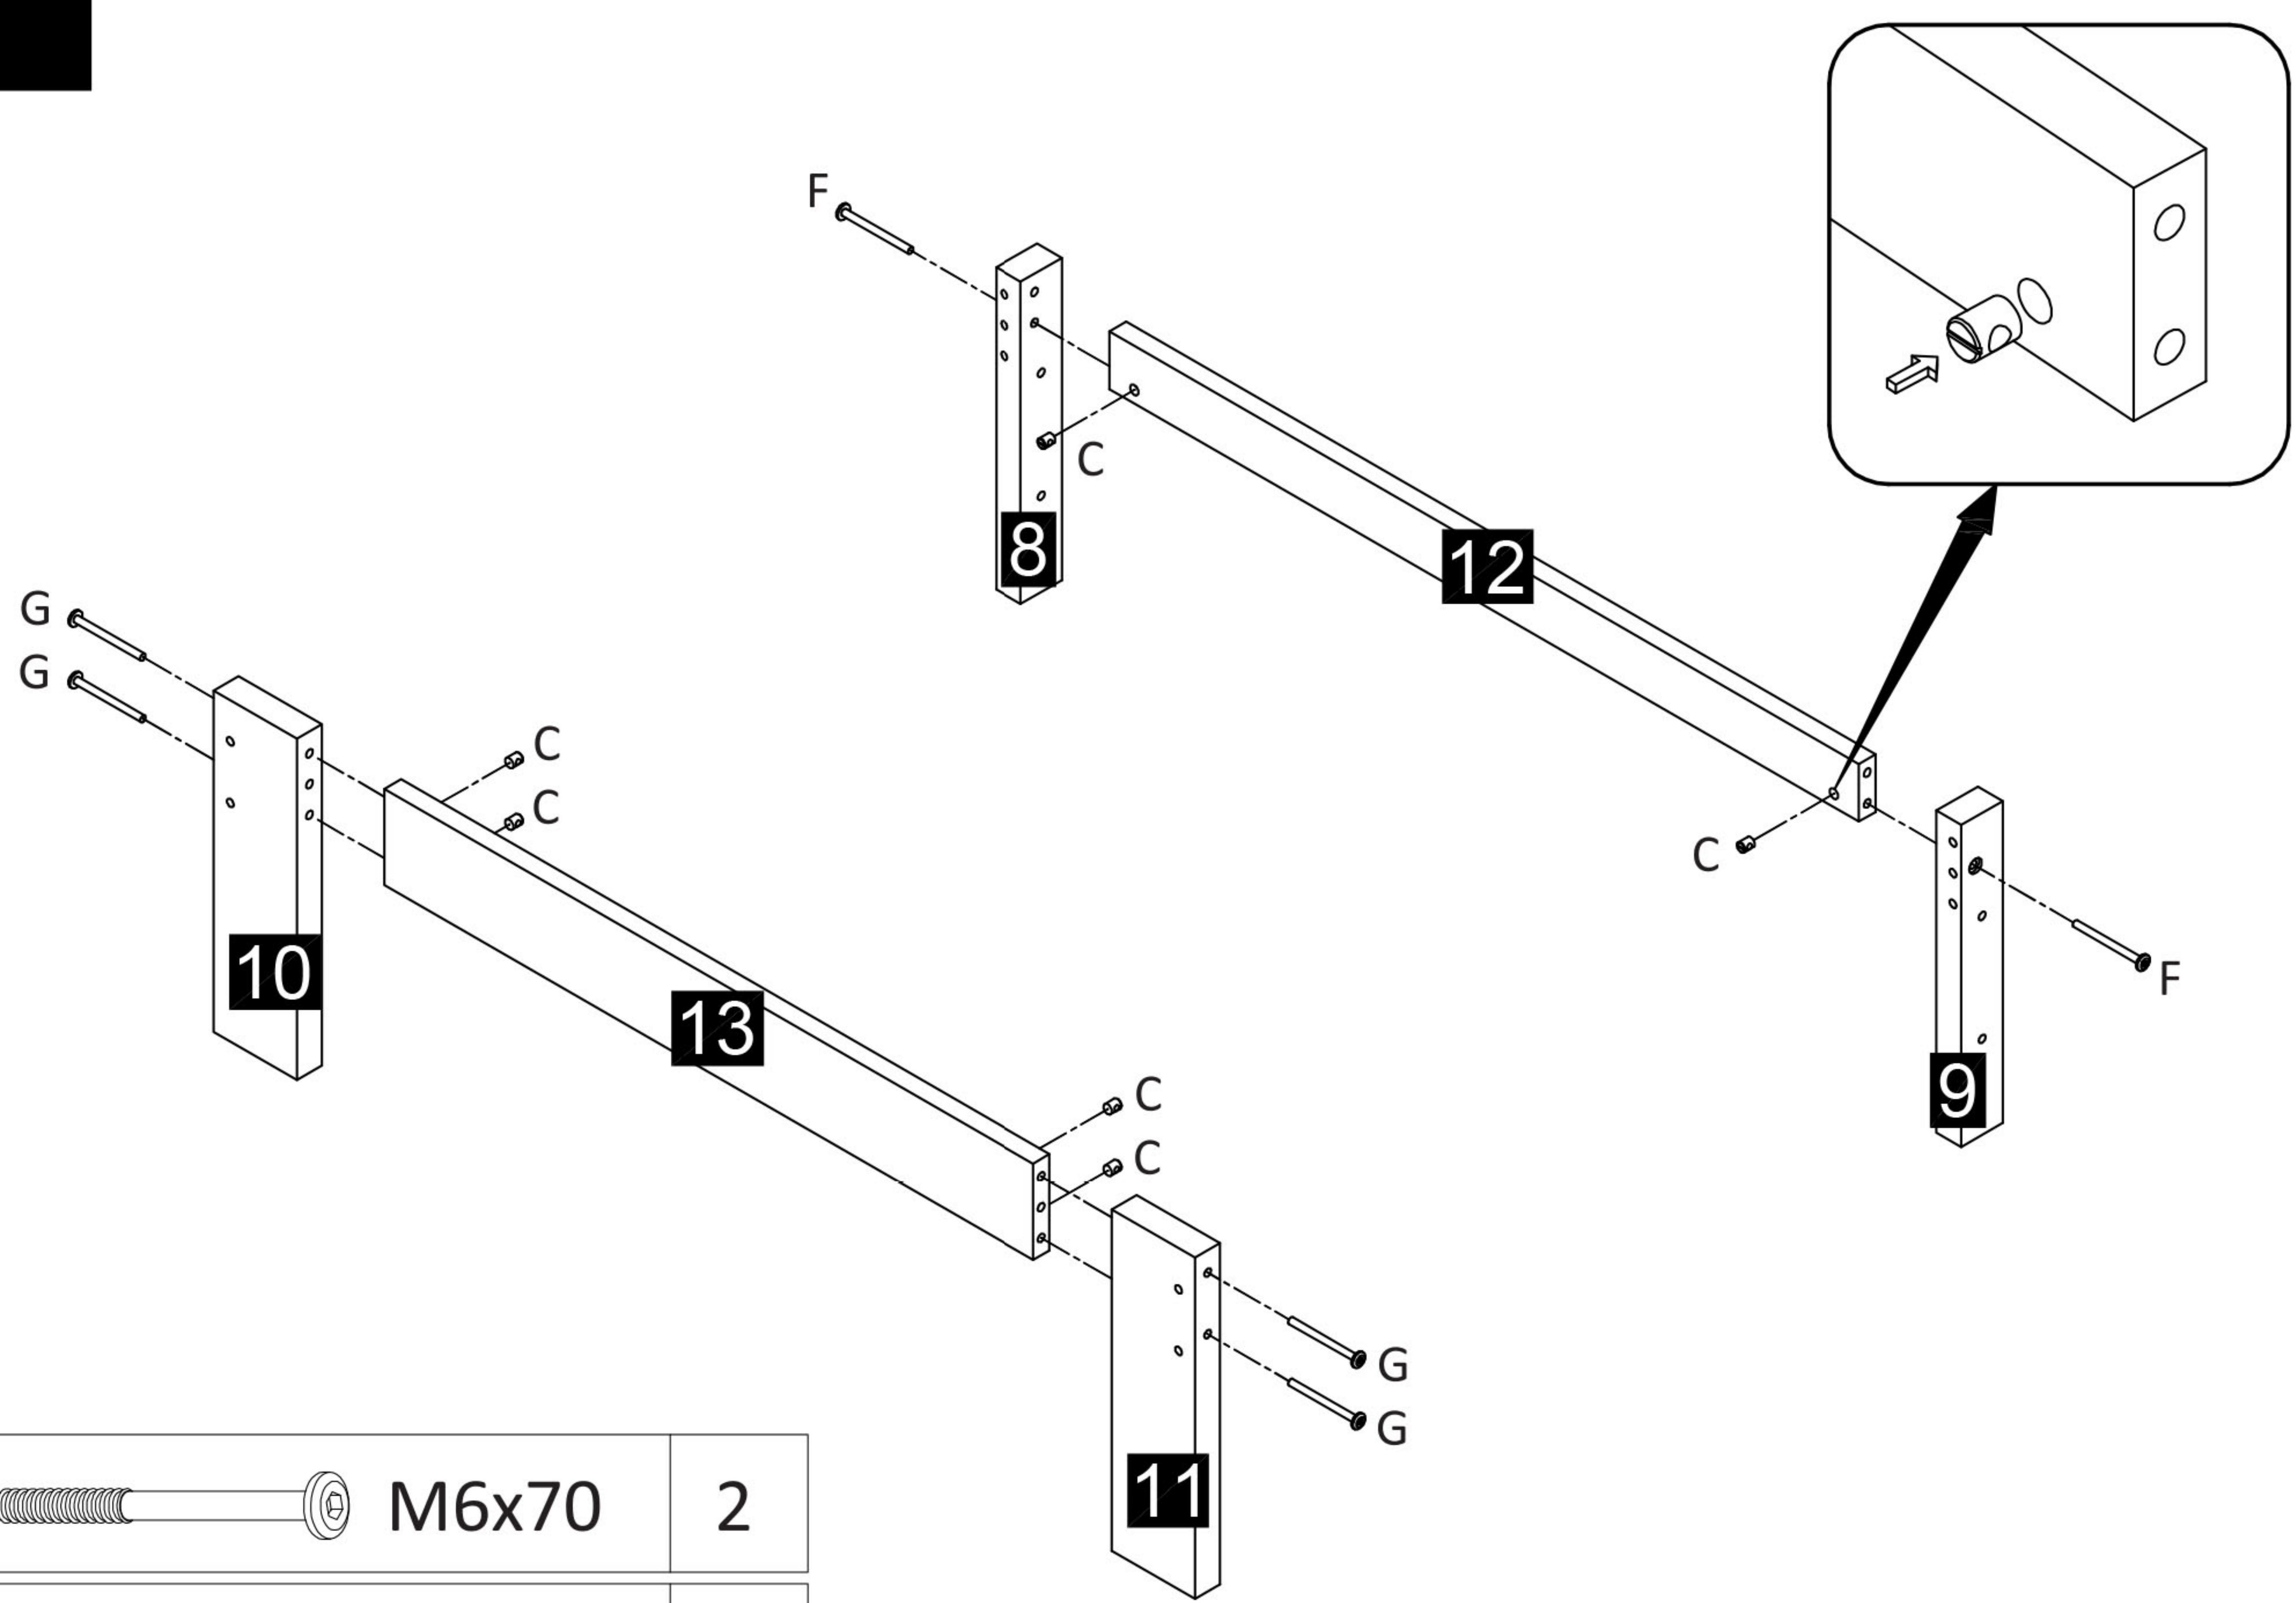

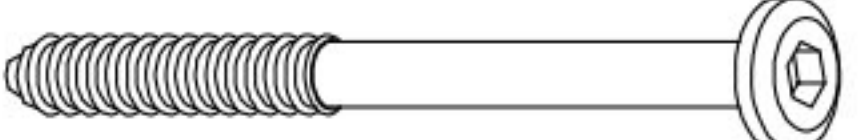
F		M6x70	2
G		M6x140	4
C			6


STEP 6

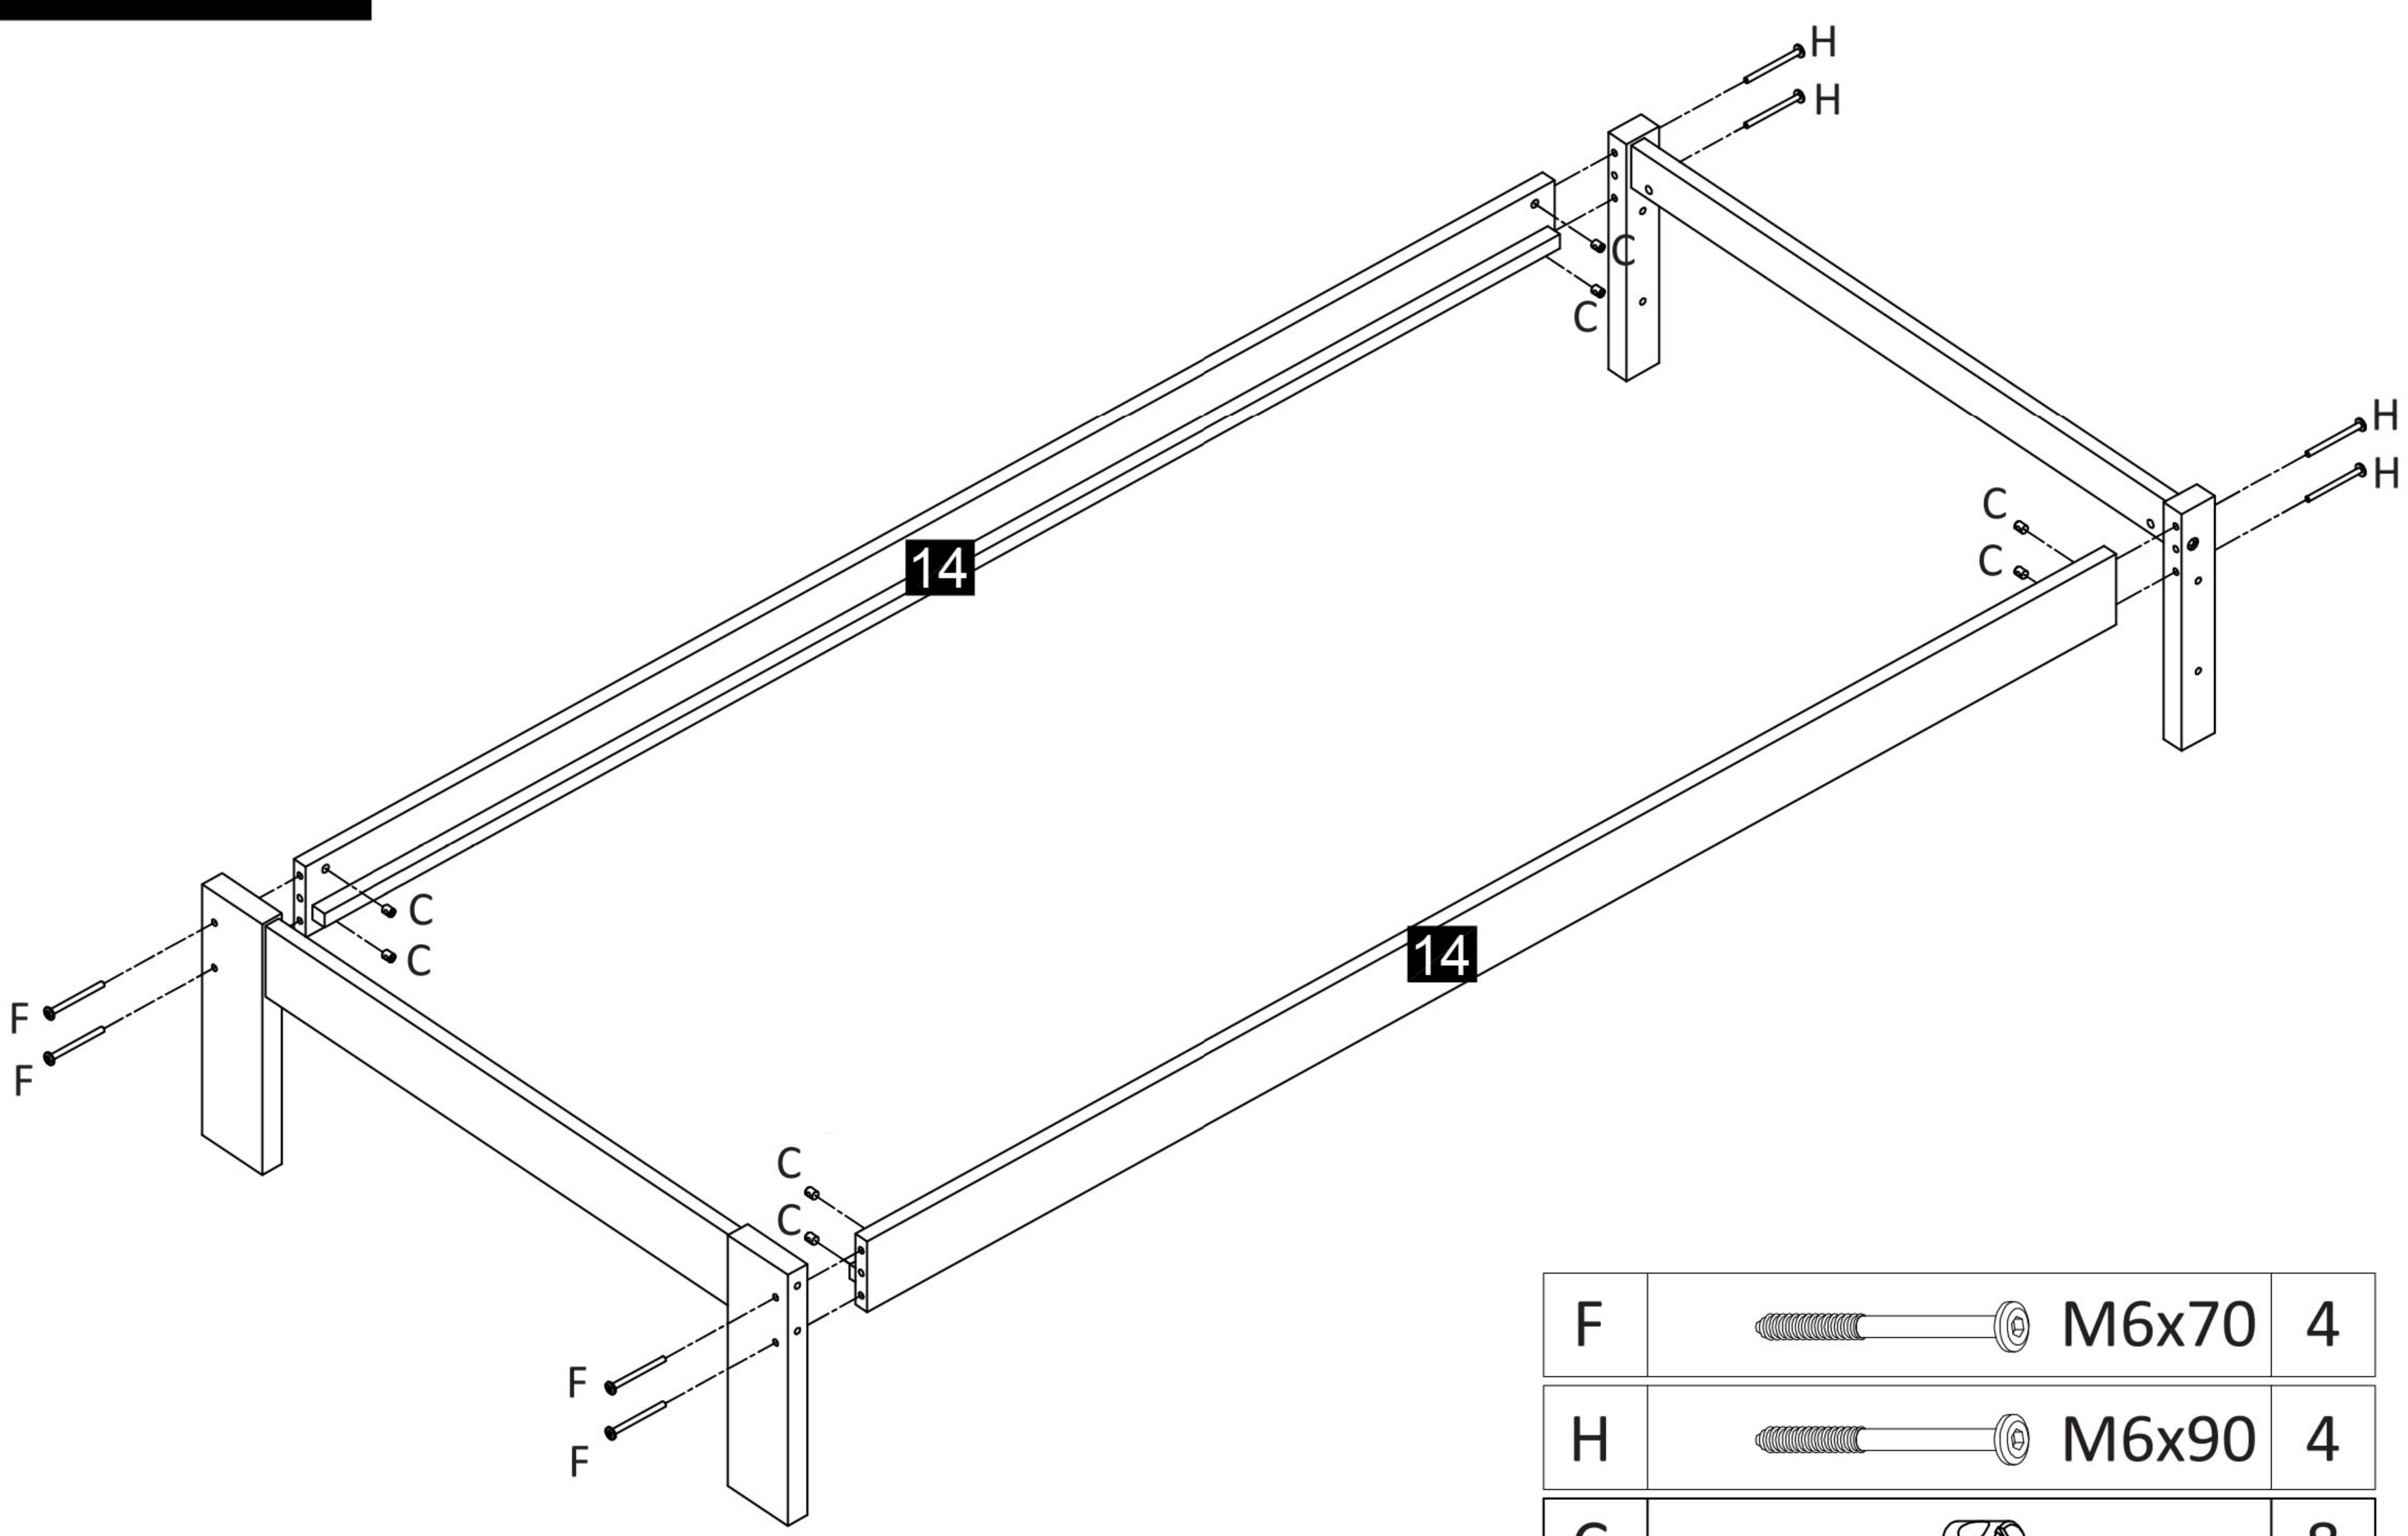

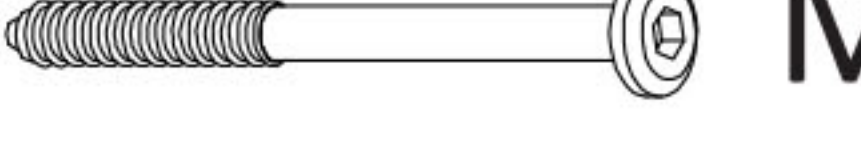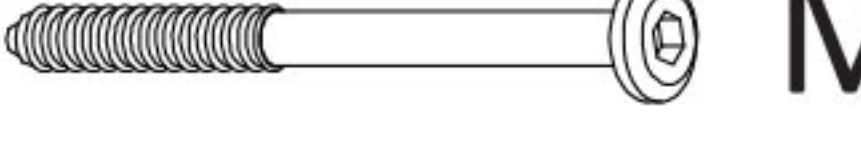
F		M6x70	4
H		M6x90	4
C			8

STEP 7

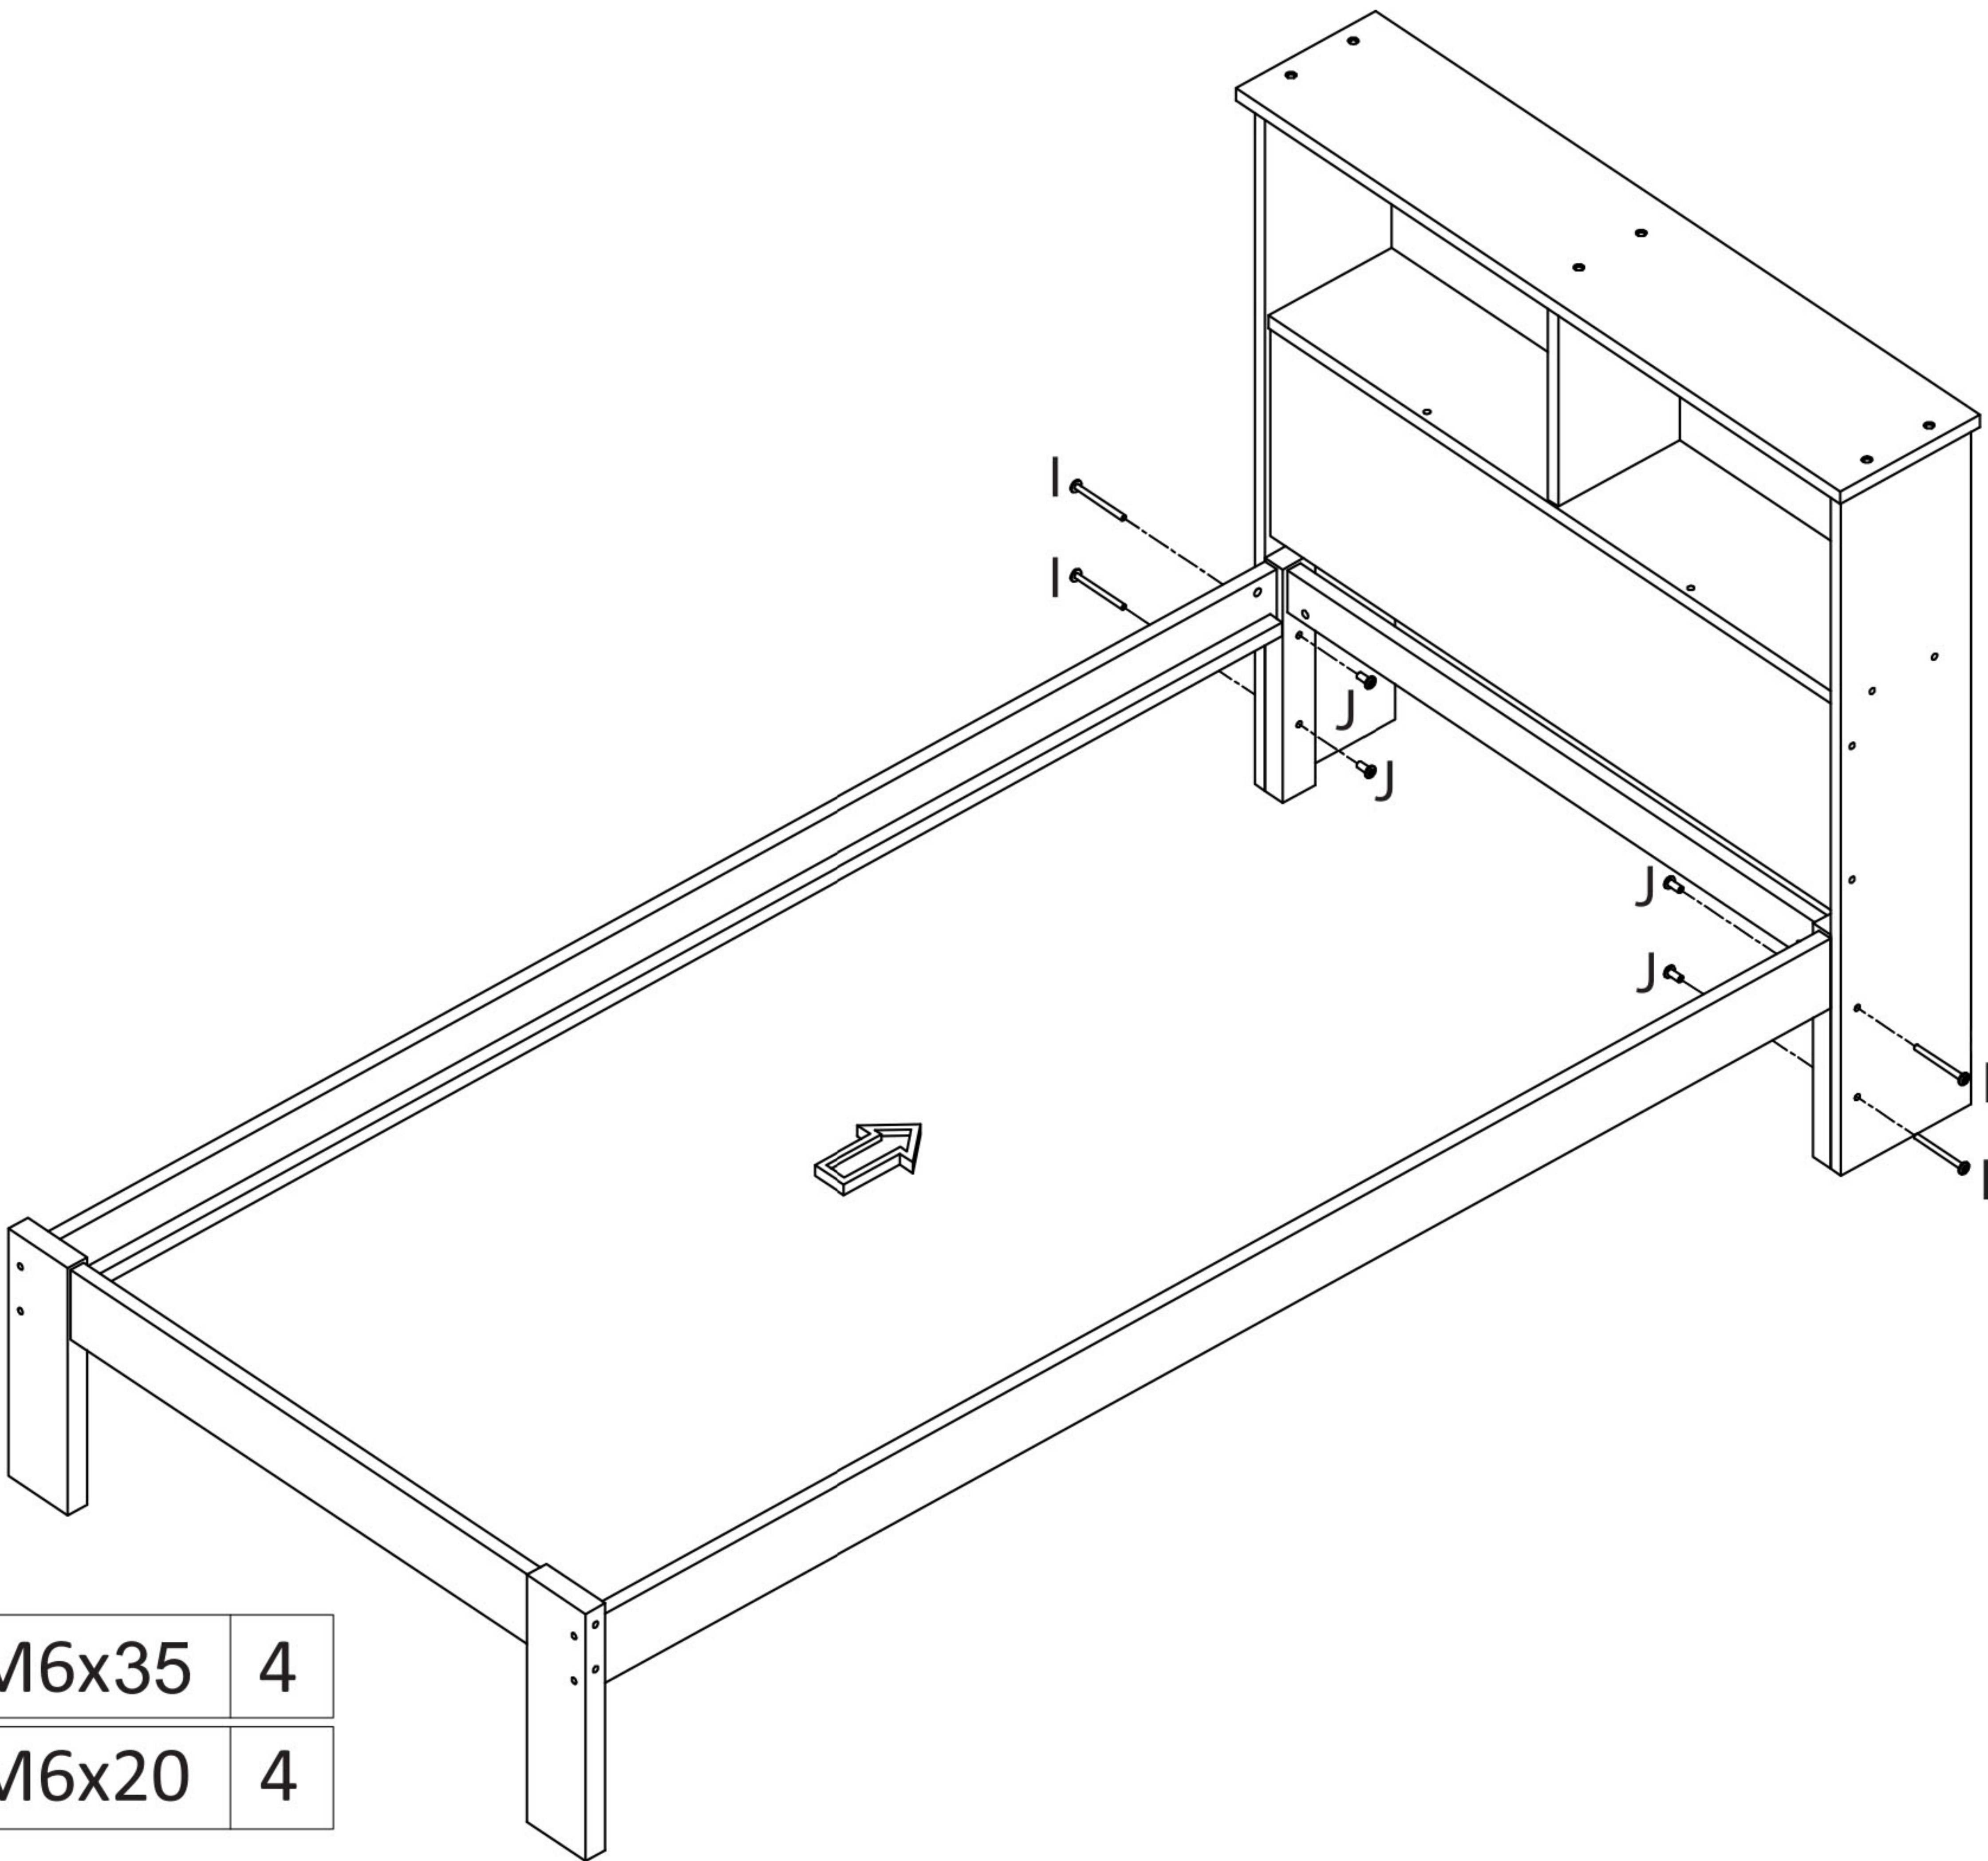

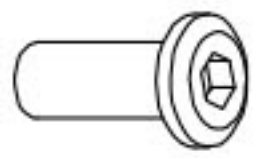I		M6x35	4
J		M6x20	4

STEP 8

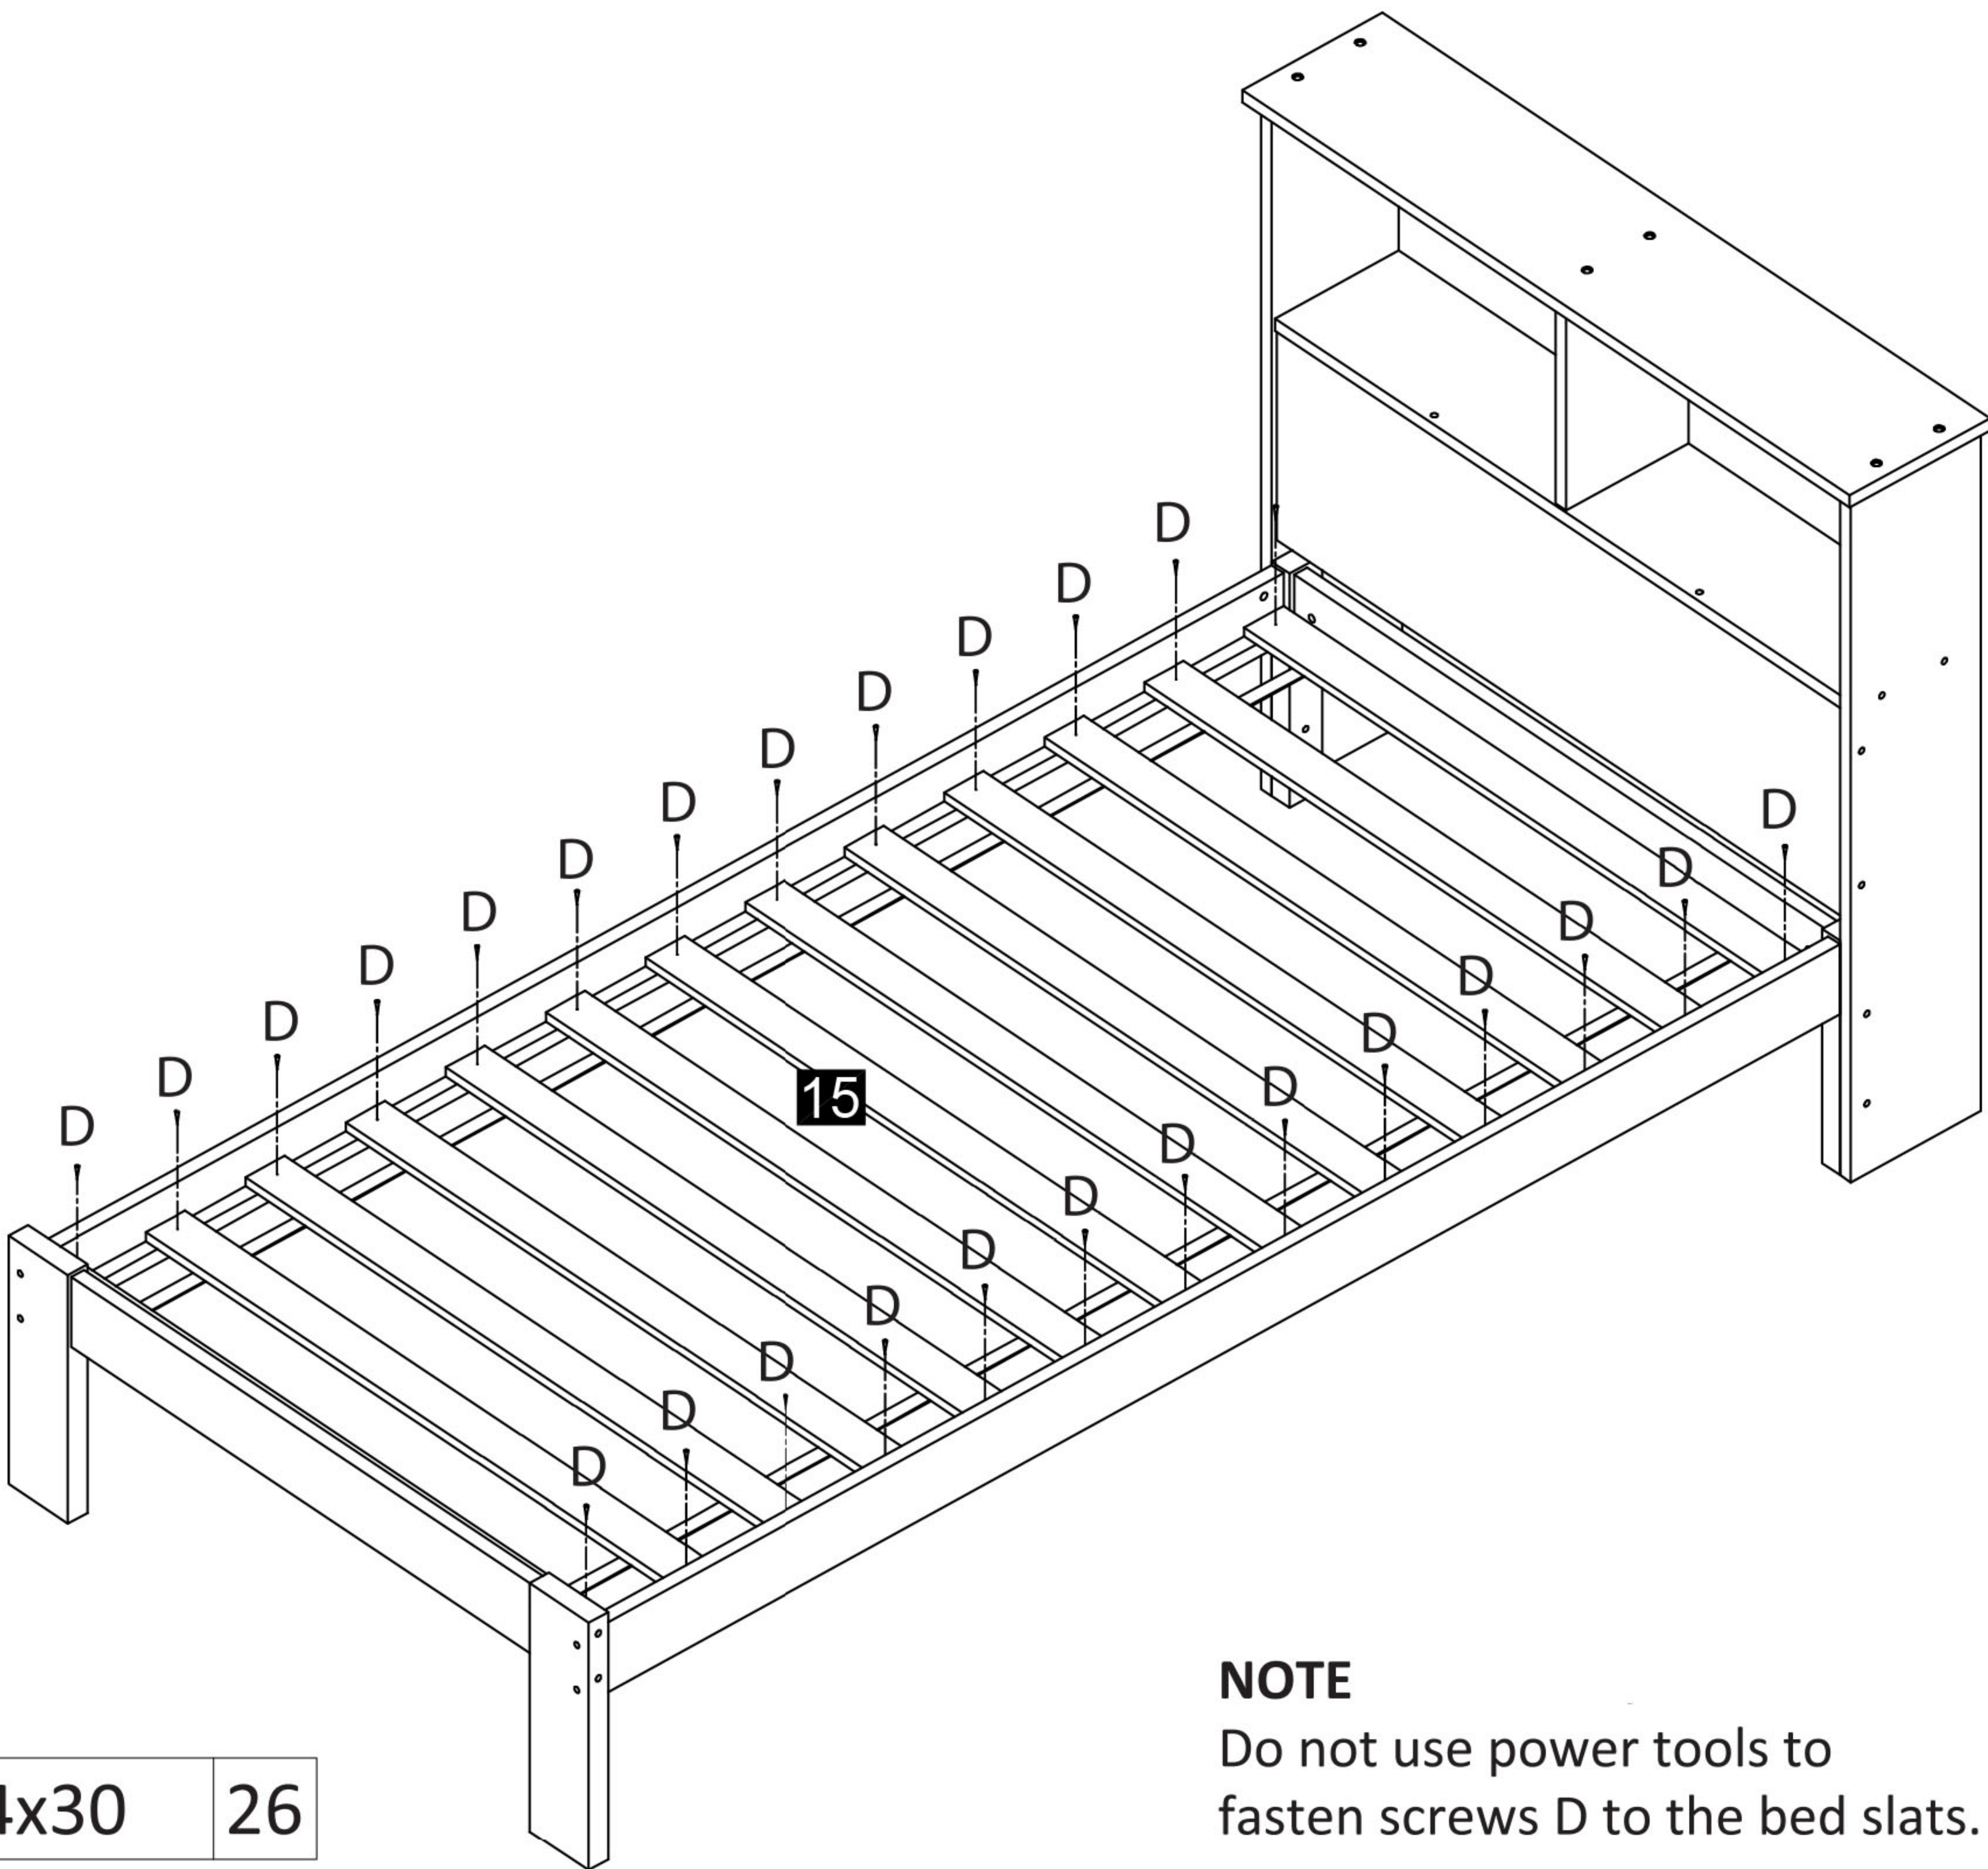

D		4x30	26
---	---	------	----

NOTE
Do not use power tools to fasten screws D to the bed slats.

STEP 9

